



***MOTOROLA***

V710  
CDMA

 
***START HERE >***



# Welcome

 
---

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V710 wireless phone.

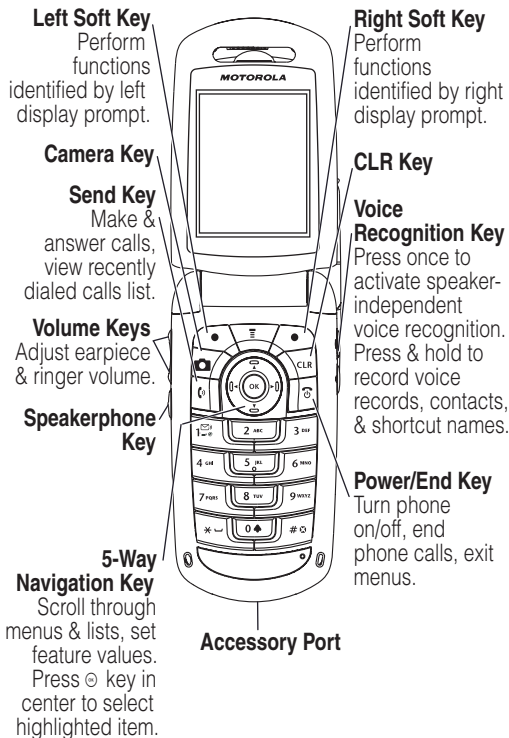 



 




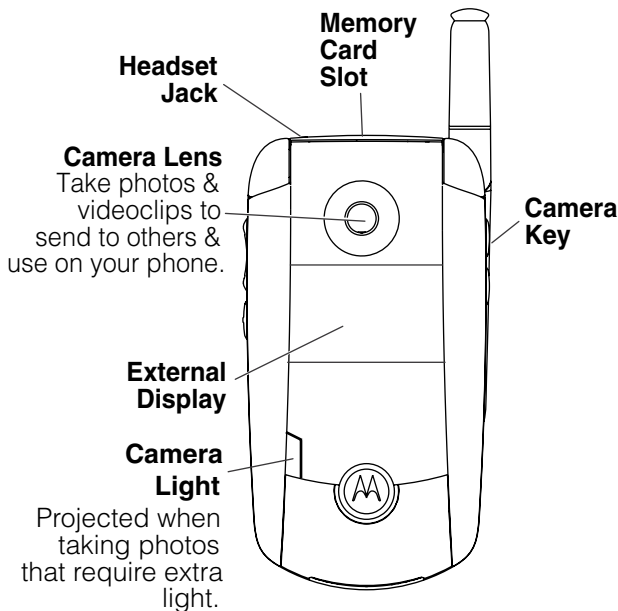

# Check It Out!

---



Feature	Description
<b>Take Photo</b>	Press the camera key to activate the camera, point lens at subject, press <b>CAPTURE</b> (📷) to take a photo.
<b>Send Photo</b>	Send the photo to a phone number Press <b>STORE</b> (📷) > <b>Send In Message</b> .

Feature	Description
<b>Set Photo as Picture Caller ID</b>	After you capture a photo, assign it to a <b>Contacts</b> entry to enable picture caller ID:  > <b>Media Gallery</b> > <b>Pictures</b> > <i>photo</i>  > <b>Apply As</b> > <b>Contacts Entry</b>
<b>Send Multimedia Message</b>	Send a multimedia message with pictures, animations, sounds, and videos:  > <b>Message</b> > <b>Create Message</b> > <b>New Multimedia Msg</b> 
<b>Send Text Message</b>	Send a text message:  > <b>Message</b> > <b>Create Message</b> > <b>New Short Msg</b> 
<b>Read Multimedia Message</b>	Read a new multimedia message or letter that you have received: Press <b>READ</b> (⏪). 
<b>Play Video Clip</b>	Play a video clip:  > <b>Media Gallery</b> > <b>Videos</b> > <i>video clip</i> > <b>PLAY</b>
<b>Wireless Connection</b>	Set up a Bluetooth® wireless connection to a headset accessory, car kit, or external device:  > <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Handsfree</b> > <b>[Look For Devices]</b>

Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schaumburg, IL 60196  
1-800-331-6456 (United States)  
1-888-390-6456 (TTY/TDD United States)  
1-800-461-4575 (Canada)

[www.hellomoto.com](http://www.hellomoto.com) (United States)  
[www.motorola.ca](http://www.motorola.ca) (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2007

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual number: 6809488A68-B

# Contents

---

<b>Getting Started</b> . . . . .	8
About This Guide . . . . .	8
Installing and Removing the Memory Card. . . . .	9
Battery Use. . . . .	11
Installing the Battery . . . . .	12
Charging the Battery. . . . .	12
Turning On Your Phone. . . . .	13
Adjusting Volume . . . . .	14
Making a Call . . . . .	14
Answering a Call. . . . .	15
Changing the Call Alert. . . . .	15
Viewing Your Phone Number . . . . .	16
<b>Highlight Features</b> . . . . .	17
Taking and Sending a Photo. . . . .	17
Recording and Playing Video Clips . . . . .	20
Sending a Multimedia Message . . . . .	23
Receiving a Multimedia Message. . . . .	26
Using a Bluetooth Wireless Connection . . . . .	27
TTY Operation . . . . .	28
<b>Learning to Use Your Phone</b> . . . . .	31
Using the Display . . . . .	31
Using the 5-Way Navigation Key. . . . .	34
Using Menus. . . . .	34
Entering Text. . . . .	37
Using the External Display . . . . .	46
Using a Removable Memory Card . . . . .	47
Using the Handsfree Speaker. . . . .	49
Changing a Code, PIN, or Password . . . . .	50

Locking and Unlocking Your Phone . . . . .	50
If You Forget a Code, PIN, or Password . . . . .	52
<b>Setting Up Your Phone . . . . .</b>	<b>53</b>
Storing Your Name and Phone Number . . . . .	53
Setting an Alert Style . . . . .	53
Setting Answer Options . . . . .	54
Setting a Wallpaper Image . . . . .	55
Setting a Screen Saver Image . . . . .	56
Setting Display Brightness . . . . .	57
Setting Display Contrast . . . . .	57
Adjusting the Backlight . . . . .	57
Hiding or Showing Location Information . . . . .	57
Conserving Battery Power . . . . .	59
<b>Calling Features . . . . .</b>	<b>60</b>
Changing the Active Line . . . . .	60
Redialing a Number . . . . .	60
Using Automatic Redial . . . . .	60
Turning Off a Call Alert . . . . .	61
Calling an Emergency Number . . . . .	61
Using AGPS During an Emergency Call . . . . .	62
Viewing Recent Calls . . . . .	63
Returning an Unanswered Call . . . . .	65
Using the Notepad . . . . .	65
Attaching a Number . . . . .	66
Calling with Speed Dial . . . . .	66
Calling with 1-Touch Dial . . . . .	67
Using Voicemail . . . . .	67
Putting a Call On Hold . . . . .	68
<b>Phone Features . . . . .</b>	<b>69</b>
Main Menu . . . . .	69
Calling Features . . . . .	71

Messages . . . . .	71
Contacts . . . . .	73
Personalizing Features . . . . .	76
Menu Features . . . . .	83
Dialing Features . . . . .	84
Call Monitoring . . . . .	84
Handsfree Features . . . . .	85
Data and Fax Calls . . . . .	87
Bluetooth® Wireless Connections . . . . .	88
Network Features . . . . .	89
Personal Organizer Features . . . . .	89
Security . . . . .	91
News and Entertainment . . . . .	91
<b>Specific Absorption Rate Data . . . . .</b>	<b>93</b>
<b>Index . . . . .</b>	<b>95</b>

# Getting Started

---



**CAUTION:** Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

## About This Guide

This guide describes the basic features of your Motorola wireless phone.

### Optional Features



This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

### Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.

# Installing and Removing the Memory Card



You can install a removable memory card in your phone. This card provides additional storage for pictures, animations, sounds, and video clips.

 


**Caution:** Do not bend or scratch your memory card. Avoid exposing your memory card to static electricity, water, or dirt.


## Installing the Memory Card

### Action

- 1 Lift the cover at the top of your phone to expose the memory card slot.

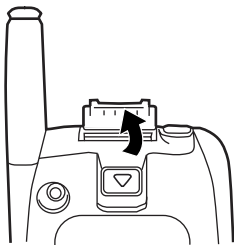

 
- 2 With the gold pins on the card facing the front of the phone, insert the card as shown. Push down until it snaps into place.

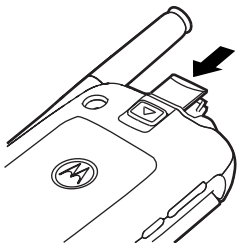


## Removing the Memory Card

### Action

 
- 1 Lift the cover at the top of your phone to expose the memory card slot.

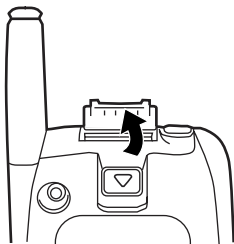

 - 2 Press the memory card down. When you release it, it pops up.

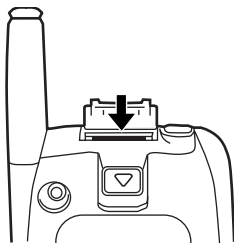

 - 3 Remove the card and close the cover.

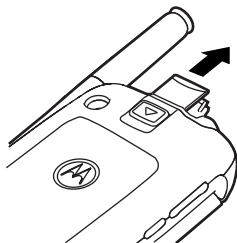

# Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector port; and your voice, data, and other application usage patterns.

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) or above  $45^{\circ}\text{C}$  ( $113^{\circ}\text{F}$ ). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or































































































































































































































