



**MOTOROLA**

*intelligence everywhere™*



# ***MOTOMANUAL***

 
V260/V262  
CDMA



# Welcome

 
---

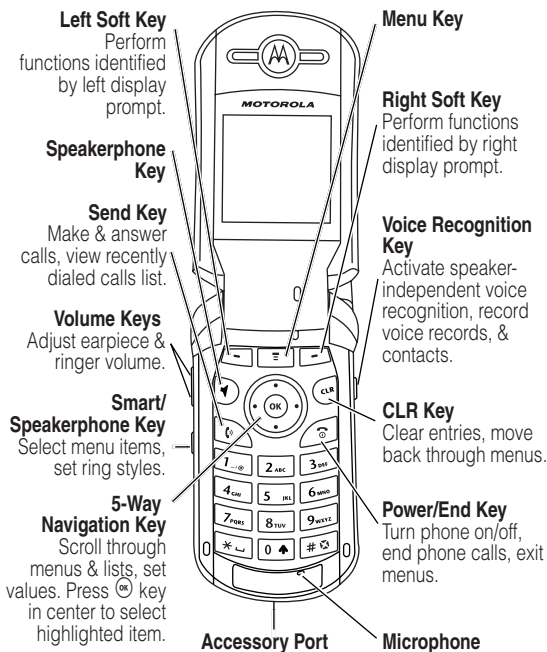


Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V260/V262 wireless phone.





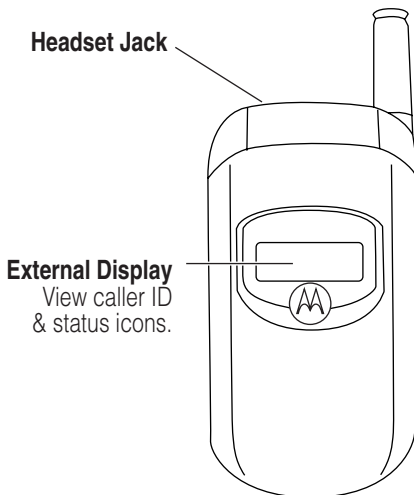


# Check It Out!

---



Feature	Description
<b>Send Multimedia Message</b>	<p>Send a multimedia message with pictures, animations, and sounds:</p> <p>Press  to scroll to  (<b>Message Center</b>), then &gt; <b>Create Message</b> &gt; <b>New MMS Msg</b></p> 

Feature	Description
<b>Send Text Message</b>	Send a text message: Press  to scroll to  ( <b>Message Center</b> ), then > <b>Create Message</b> > <b>New Short Msg</b> 
<b>Read Multimedia Message</b>	Read a new multimedia message or letter that you have received: Press <b>READ</b> (  ). 

Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schaumburg, IL 60196

[www.hellomoto.com](http://www.hellomoto.com)

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

[www.motorola.com](http://www.motorola.com) (United States)

[www.motorola.ca](http://www.motorola.ca) (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual number: 6809490A03-O

# Contents

---

<b>Getting Started</b> . . . . .	8
About This Guide . . . . .	8
Installing the Battery . . . . .	8
Battery Use . . . . .	10
Charging the Battery . . . . .	11
Removing a Flip Cover . . . . .	12
Attaching a Flip Cover . . . . .	12
Turning On Your Phone . . . . .	12
Adjusting Volume . . . . .	13
Making a Call . . . . .	14
Answering a Call . . . . .	14
Changing the Call Alert . . . . .	15
Viewing Your Phone Number . . . . .	16
<b>Highlight Features</b> . . . . .	17
Sending a Multimedia Message . . . . .	17
Receiving a Multimedia Message . . . . .	20
TTY Operation . . . . .	21
<b>Learning to Use Your Phone</b> . . . . .	24
Using the Display . . . . .	24
Using the 5-Way Navigation Key . . . . .	26
Using Menus . . . . .	27
Entering Text . . . . .	30
Using the Handsfree Speaker . . . . .	39
Using the External Display . . . . .	40
Changing a Code, PIN, or Password . . . . .	42
Locking and Unlocking Your Phone . . . . .	42
If You Forget a Code, PIN, or Password . . . . .	44

<b>Setting Up Your Phone</b> .....	45
Storing Your Name and Phone Number .....	45
Setting an Alert Style .....	45
Setting Answer Options .....	46
Setting a Wallpaper Image .....	47
Setting a Screen Saver Image .....	48
Setting Display Contrast .....	49
Adjusting the Backlight .....	49
Hiding or Showing Location Information .....	50
Conserving Battery Power .....	51
<b>Calling Features</b> .....	52
Changing the Active Line .....	52
Redialing a Number .....	52
Using Automatic Redial .....	52
Turning Off a Call Alert .....	53
Calling an Emergency Number .....	53
Using AGPS During an Emergency Call .....	54
Viewing Recent Calls .....	55
Returning an Unanswered Call .....	56
Using the Notepad .....	57
Attaching a Number .....	58
Calling with Speed Dial .....	58
Calling with 1-Touch Dial .....	58
Using Voicemail .....	59
<b>Phone Features</b> .....	61
Main Menu .....	61
Calling Features .....	63
Messages .....	63
Contacts .....	65
Personalizing Features .....	68
Menu Features .....	75

Dialing Features . . . . .	76
Call Monitoring . . . . .	76
Handsfree Features . . . . .	77
Data and Fax Calls . . . . .	79
Network Features . . . . .	79
Personal Organizer Features . . . . .	80
Security. . . . .	81
News and Entertainment . . . . .	82
<b>Specific Absorption Rate Data . . . . .</b>	<b>83</b>
<b>Index . . . . .</b>	<b>85</b>

# Getting Started

---



**CAUTION:** Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

## About This Guide

This guide describes the basic features of your Motorola wireless phone.

### Optional Features



This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

### Optional Accessories



This label identifies a feature that requires an optional Motorola Original® accessory.

## Installing the Battery

You must install and charge the battery to use your phone.

 


Your phone is designed to use only Motorola Original batteries and accessories.

 


## Action

 
- 1 Press the release button on the battery cover.

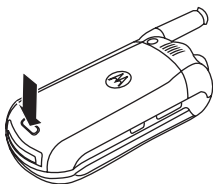

 
- 2 Slide the cover back, then lift it away from the phone.

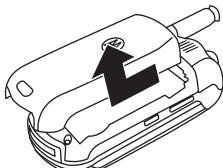

- 3 Insert the battery with the tabs toward the front and facing down.

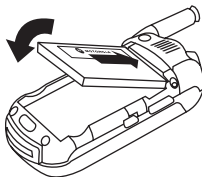

- 4 Lower the battery cover onto the phone, then slide it forward until it clicks into place.

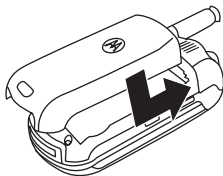

# Battery Use

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

Always use Motorola Original™ batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



New batteries or batteries stored for a long time may take more time to charge.

When charging your battery, keep it near room temperature.

When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.

Never expose batteries to temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) or above  $45^{\circ}\text{C}$  ( $113^{\circ}\text{F}$ ). Always take your phone with you when you leave your vehicle.

It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling center for proper battery disposal.

**Warning:** Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the “Safety and General Information” section included in this guide.

 
# Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.



## Action

- 1 Plug the travel charger into your phone with the release tab facing up.

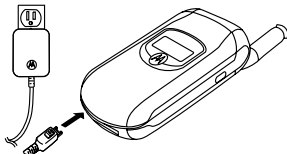

- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.

 
**Tip:** You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.

**Note:** When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete. At least 1 segment of the battery level indicator must be visible to ensure full phone functionality while charging.

## Removing a Flip Cover

### Action

Insert your fingertip or fingernail into the slot at the base of the flip cover, then **firmly** pull up and lift the cover from the phone.

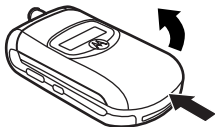

 
### Notes:

- Do not use tools to remove a flip cover. Using tools to remove a flip cover will damage the cosmetic appearance of the phone.
- The flip cover is attached tightly to the phone. Considerable force is required to remove it.

## Attaching a Flip Cover

### Action

Insert the tabs at the top of the cover into the slots at the top end of the phone, then push the cover down to snap it into place.

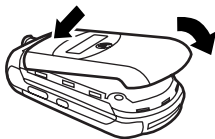

## Turning On Your Phone

 
### Action


- 1 Open your phone.

## Action

- 2 Press and hold the power key for 3 seconds.

The phone may require several seconds to power on.

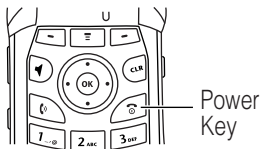 


- 3 If necessary, enter your 4-digit unlock code (the last 4 digits of your phone number) and press **OK** (  ) to unlock the phone.

## Adjusting Volume

Press the up or down volume keys to:

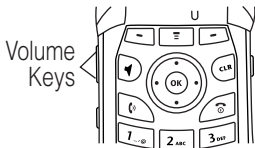

- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible (flip must be open—see “Adjusting Volume” on page 13)
- turn off an incoming call alert




# Making a Call

## Action

 
- 1 Dial the number.

**Tip:** If you make a mistake, press the clear key  to delete the last digit. Press and hold  to clear all digits.

- 2 Press  to make the call.

- 3 Press  to end the call.

Press to send call.

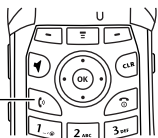

**Tip:** You can also close the flip to end the call.

**Note:** You must dial the phone number from the home screen. See page 24.

## Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

**Note:** If the phone is locked, you must unlock it to answer the call.

## Phone Flip Open



### Action

- 1 Open the flip to answer.
- 2 Close the flip to end the call.

 
**Tip:** To deactivate this feature, press  > **Settings**  
> **In-Call Setup** > **Answer Options** > **Open to Answer**.

## Phone Flip Closed

### Action

- 1 Press  to answer.
- 2 Press  to end the call.

Press to answer call.

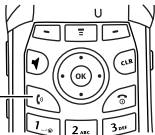 


## Changing the Call Alert

### Phone Flip Open

In the home screen, press the down volume key to switch to lower call alert volume, then switch to vibrate and, finally, silent alert. Press the up volume key to cycle back from silent alert to vibrate and then to the lowest alert volume setting.

 
Volume Keys

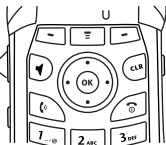

### Phone Flip Closed

Press the up or down volume key, then press the speakerphone key to scroll through the alert styles: **Loud**, **Soft**, **Vibrate**, **Vibe & Ring**, and **Silent**. The alert styles are shown on the external display.

 

Volume Keys  
Smart/  
Speakerphone  
Key

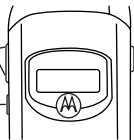


After scrolling to the desired alert style, press the up or down volume key to save the setting and return to the home screen.



## ***Viewing Your Phone Number***

To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers**.

# Highlight Features

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlights.









## Sending a Multimedia Message




















A *Multimedia Messaging Service (MMS)* multimedia message contains 1 or more slides with text and embedded media objects (possibly including photos, pictures, animations, sounds, voice records). You can send the multimedia message to other wireless phone users and to other email addresses.

**Note:** You can send the message after entering a recipient phone number and the message text. You do not need to complete other fields.

Press	To
1 	scroll to  (Message Center)
2 	scroll to <b>Create Message</b>
3 <b>SELECT</b> 	select <b>Create Message</b>
4 	scroll to <b>New MMS Message</b>
5 <b>SELECT</b> 	select <b>New MMS Message</b>


 









 


	Press	To
6	keypad keys, then <b>OK</b> (☐)	enter a phone number
	<b>or</b>	
	<b>CONTACTS</b> (☐), ⊙, then <b>ADD</b> (☐) and <b>DONE</b> (☐)	open <b>Contacts</b> , then scroll to and select 1 or more existing <b>Contacts</b> entries
7	keypad keys	enter slide text  To add another slide to the message, continue to the next step.  To insert a media object, go to step 8.
8	☐	open the menu to insert a new slide
9	<b>SELECT</b> (☐)	display a list of items you can insert
10	⊙	scroll to <b>New Page</b>
11	<b>SELECT</b> (☐)	insert a new slide after the current slide  Return to step 2 to enter contents for the new slide.
12	☐	open the menu
13	⊙	scroll to <b>Insert</b>
14	<b>SELECT</b> (☐)	display a list of items you can insert

Press	To
15 	scroll to <b>Voice Record, Sound, New Page, or Quick Ext</b>
16 <b>SELECT</b> 	select the file type
17 	scroll through the files to the desired selection
18 <b>SELECT</b> 	select and insert the file
	Return to step 8 to add more media files.
19 <b>OK</b> 	save all inserted files
20 	scroll to <b>Subject</b>
21 <b>CHANGE</b> 	select <b>Subject</b>
22 keypad keys	enter the subject
<b>or</b>	
<b>QK.NOTE</b>  , then  and <b>OK</b> 	open the Quick Notes list, then scroll to and select a Quick Note as a subject
23 <b>OK</b> 	store the subject
24 	scroll to <b>Attachments</b>
25 <b>CHANGE</b> 	select <b>Attachments</b>
26 	scroll to <b>Picture or Sound</b>
27 <b>SELECT</b> 	select the file type
28 	scroll through the files to the one you want
29 <b>SELECT</b> 	select and insert the file






Press	To
30 <b>BACK</b> (  )	return to the <b>New MMS Message</b> screen
or	
 , then <b>SELECT</b> (  )	add more attachments
31 	scroll to <b>Priority</b>
32 <b>CHANGE</b> (  )	select <b>Priority</b>
33  , then <b>SELECT</b> (  )	scroll to and select <b>Normal</b> or <b>Urgent</b> , then return to the <b>New MMS Message</b> screen
34 	scroll to <b>Receipt</b>
35 <b>CHANGE</b> (  )	select <b>Receipt</b>
36 <b>ADD</b> (  )	with <b>Delivery Report</b> highlighted, select it
37 <b>SEND</b> (  )	send the message
or	
	send the message later, view message details, save the message in the drafts folder, or cancel the message

## Receiving a Multimedia Message



When you receive a multimedia message or letter, your phone displays the  (message

waiting) indicator and a **New Message** notification, and sounds an alert.

Press	To
<b>READ</b> (☐)	open the message



Multimedia messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file begins playing when its slide is displayed. Use the volume keys to adjust the volume as the sound file plays.

**Note:** In a multimedia letter, you may have to highlight an indicator embedded in the text to play a sound file.

- Attached files are appended to the message. To open the attachment, highlight the file indicator/filename and press **VIEW** (☐) (image file type), **PLAY** (☐) (sound file), or **OPEN** (☐) (vObject such as a **Contacts** or datebook entry, or unknown file type).

## ***TTY Operation***

You can use an optional TTY device with your phone to send and receive calls. You must plug the TTY device into the phone's headset jack and set the phone to operate in 1 of 3 TTY modes.


**Note:** Use a TSB-121 compliant cable (provided by the TTY manufacturer) to connect the TTY device to your phone.







**Note:** Set the phone to level 4 (middle setting) for proper operation. If you experience a high number of incorrect characters, adjust the volume as needed to minimize the error rate.

**Note:** For optimal performance, your phone should be at least 12 inches (30 centimeters) from the TTY device. Placing the phone too close to the TTY device may cause high error rates.

## Setting TTY Mode

 When you set your phone to a TTY mode, it operates in that mode whenever the TTY device is connected.

**Find the Feature**       > **Settings** > **Initial Setup**

Press	To
1 	scroll to <b>TTY Setup</b>
2 <b>CHANGE</b> (  )	select <b>TTY Setup</b>
3 	scroll to the TTY mode
4 <b>SELECT</b> (  )	select the TTY mode

The **TTY Setup** menu can include the following options:

Press	To
<b>Voice</b>	return to normal voice mode
<b>TTY</b>	transmit and receive TTY characters

Press	To
VCO	receive TTY characters but transmit by speaking into microphone
HCO	transmit TTY characters but receive by listening to earpiece



When your phone is in a TTY mode, the international TTY mode, the international TTY symbol, and the mode setting display during an active TTY call.

### ***Returning to Voice Mode***

To return to normal voice mode, select **Voice** from the **TTY Setup** menu.

 
# Learning to Use Your Phone

---

See page 1 for a basic phone diagram.

## Using the Display

The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

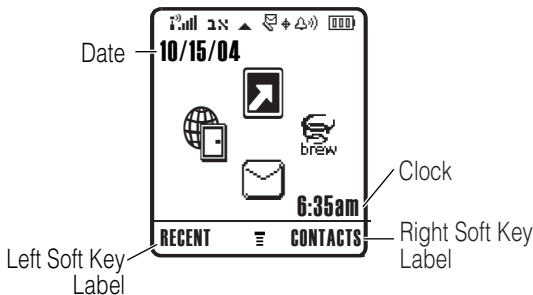

 
**Note:** Your home screen may look different than the display shown above.

The ☰ (menu) indicator indicates that you can press the menu key (☐☐☐) to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (☐☐☐) or right soft key (☐☐☐) to perform the function indicated by the left or right soft key label.

Your phone can display an analog or digital clock in the home screen (see page 74). While powered on in analog mode, your phone may not always display the correct time.

The following status indicators can display:

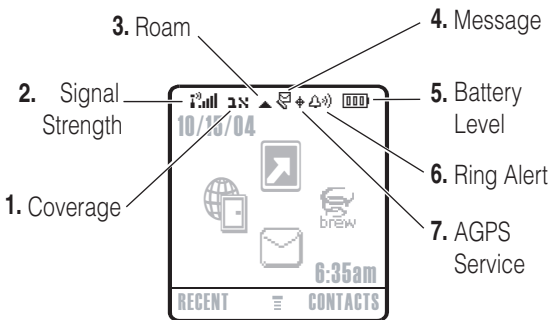

## 1. Coverage Indicator

**2. Signal Strength Indicator** Vertical bars show the strength of the network connection. You cannot make or receive calls when only the (no signal) indicator or (no transmit) indicator is displayed.





**3. Roam Indicator** Shows when your phone is seeking or using another network outside your home network.




**4. Message Indicator** Displays when you receive a new message. Indicators can include:



 = text message

 = voicemail  
message

 = voicemail and  
text message


When you enter a message, a number in this location shows the number of characters left on the current page (text message), or the message size (multimedia message or letter).

**5. Battery Level Indicator** Vertical bars show the battery charge level. Recharge the battery when

**Low Battery** displays and the battery alert sounds.


**6. Ring Alert Indicator** Shows the ring alert setting.

 = loud ring

 = soft ring

 

 = vibrate

 = vibrate and ring


 = silent

 
**7. AGPS Service Indicator** Indicates when AGPS Service is off (icon is grey), on (icon is white), or on and finding your location (icon is green).


## ***Using the 5-Way Navigation Key***

Use the 5-way navigation key () to scroll up, down, left, or right through the menu system. Press the  key in the center to select a highlighted menu item.

# Using Menus



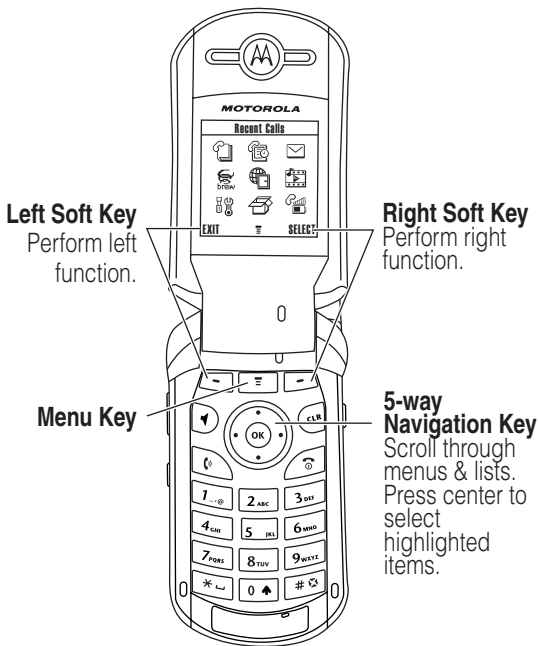






From the home screen, press  to enter the main menu.



Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that



 
may appear in the main menu, depending on your service provider and service subscription options.

 

Menu Icon	Feature	Menu Icon	Feature
	<b>Contacts</b>		<b>Recent Calls</b>
	<b>Message Center</b>		<b>Brew*</b>
	<b>Web Access</b>		<b>Media Gallery</b>
	<b>Settings</b>		<b>More</b>
	<b>Phone Info</b>		

\* Optional network/subscription dependent feature

## **Selecting a Menu Feature**

This guide uses the following format to show you how to select a menu feature, starting from the home screen.

 
**Find the Feature**     > **Recent Calls** > **Dialed**



This example shows that from the home screen, you must press , scroll to and select **Recent Calls** from the main menu, then scroll to and select **Dialed**. Press  to scroll, and the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

## **Selecting a Feature Option**

When you select certain features, your phone displays a list of items or options that you can select. For example,

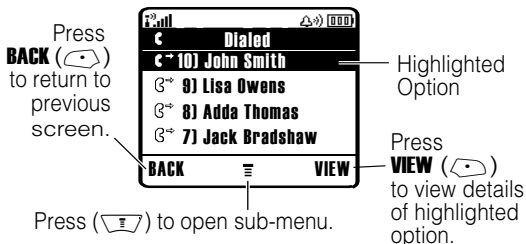when you view the dialed calls list, you can select an entry and perform additional tasks on that entry:



- Press  to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option
- When an option has a list of possible values, press  left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.

 


# Entering Text

Some features require you to enter information. The following is a sample of a screen for **Contacts** entry information.



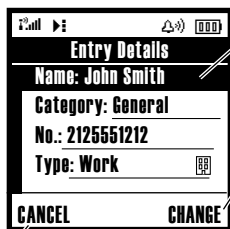

Press  to view more options.



 
Highlighted Option

Press **CHANGE** () to enter or edit information.

Press **CANCEL** () to exit without making changes. **DONE** () displays when you enter or edit information.

The message center lets you compose and send text messages.

For indicator descriptions, see following section.

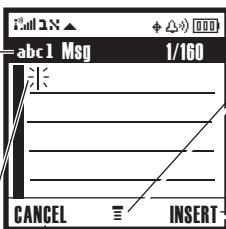

Press  to open sub-menu.


Flashing cursor indicates insertion point.

Press **INSERT** () to insert a quick note, picture, or sound.

 
Press **CANCEL** () to exit without making changes.

## Choosing a Text Entry Method

 
Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Press  in any text entry screen to select 1 of the following entry methods:

<b>Primary</b>	The primary text entry method (see below to set).
<b>Numeric</b>	Enter numbers only (see page 37).
<b>Symbol</b>	Enter symbols only (see page 38).
<b>Secondary</b>	The secondary text entry method (see below to set).

Alternatively, you can select a text entry method in any text entry screen by pressing  > **Entry Mode**.


## Setting Up a Text Entry Method

Press  > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

<b>ITAP</b>	Let the phone predict each word as you press keys (see page 35).
<b>Tap</b>	Enter letters and numbers by pressing a key 1 or more times.
<b>Tap Extended</b>	Enter letters, numbers, and symbols by pressing a key 1 or more times.
<b>None</b>	Hide the <b>Secondary</b> setting (only available for <b>Secondary Setup</b> ).



## Using Capitalization

Press  in any text entry screen to change text case. The following indicators show capitalization status:

abc = no capital letters







Abc = capitalize next

ABC = all capital letters

letter only

## Text Entry Method Indicators

When you select the **Primary** or **Secondary** text entry method, the following indicators identify the text entry setting:

Primary	Secondary	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalize next letter only
1↑	2↑	Tap, all capital letters
		iTAP, no capital letters
		iTAP, capitalize next letter only
		iTAP, all capital letters

The following indicators identify **Numeric** or **Symbol** entry method:




123 = numeric method


@ = symbol method

## Using Tap Method

 
This is the standard method for entering text on your phone.

Regular **Tap** method cycles through the letters and numbers of the key you press. **Tap Extended** method also cycles through additional symbols as shown in the “Character Chart” on page 34.

Press	To
1 a keypad key 1 or more times	select a letter, number, or symbol
2 keypad keys	enter remaining characters
	<b>Tip:</b> Press  right to accept a word completion, or  to insert a space.
3 <b>OK</b> (  )	store the text


In a text entry screen, you can press  to switch entry methods. If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry method, see page 31.

 
When you enter text with **Tap** or **Tap Extended** method, the soft key functions change.

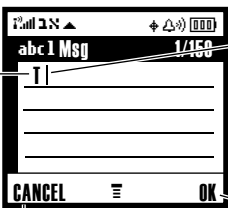

Character displays at insertion point.

 
After 2 seconds, character is accepted and cursor moves to next position.

Press **CANCEL** () to delete character to left of insertion point.

Press **OK** () to accept and store text.



When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:

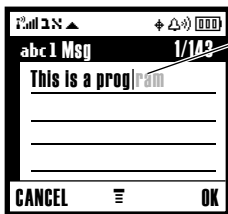













Press  right to accept **Program**, or press  to reject it and enter a space after **prog**.


If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

## Character Chart




Use this chart as a guide for entering characters with **Tap Extended** method.

	. ? ! , @ ' - _ : ; ( ) & " ~ 1 0 ¿ ¡ % £ \$ ¥ ¤ € + x * / \ [ ] = > < # §
	a b c 2
	d e f 3
	g h i 4
	j k l 5
	m n o 6
	p q r s 7
	t u v 8
	w x y z 9
	<i>change text case, for capital letters</i>

	<i>enter a space (hold to enter a return)</i>
	<i>change text entry method (hold for default)</i>

**Note:** This chart may not reflect the exact character set available on your phone. In a URL editor,  first shows common characters for that editor.

### ***Tap Method Text Entry Rules***

 
- Press a keypad key repeatedly to cycle through its characters.
- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.

### ***Using iTAP™ Method***

iTAP™ software provides a predictive text entry method that lets you enter a word using 1 keypress per letter. This can be faster than **Tap** method, because your phone combines the key presses into common words.



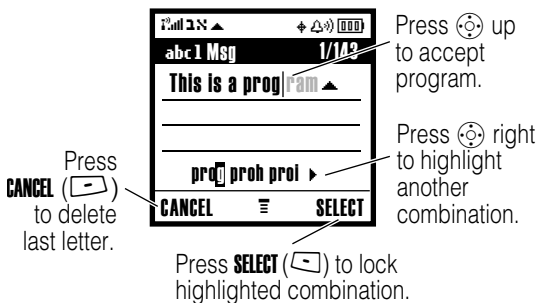

For example, if you press    , letter combinations that match your key presses display:



If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

## Entering Words

In a text entry screen, you can press  to switch entry methods. An indicator tells you which method is active (see page 32). If **ITAP** method is not available as the **Primary** or **Secondary** entry method, see page 31.

	Press	To
1	keypad keys (1 press per letter)	show possible letter combinations at the bottom of the display
2	 left or right	highlight the combination you want

**Press****To****3 SELECT** (  )

lock a highlighted combination

You can press keypad keys to add more letters to the end of the combination.

**or**


enter the highlighted combination when it spells a word


A space is automatically inserted after the word.

---

If you enter a word your phone does not recognize, the phone stores it to use as 1 of your word options. When you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.


### ***Using Numeric Method***




In a text entry screen, press  to switch entry methods until the **123** (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry method.







## Using Symbol Method

 

 



 

In a text entry screen, press  to switch entry methods until the @ (symbol) indicator displays.


Press	To
1 keypad keys (1 press per symbol)	show possible symbol combinations at the bottom of the display
2  left or right	highlight the combination you want
3 <b>SELECT</b> (  )	lock a highlighted combination
	You can press keypad keys to add more symbols to the end of the combination.
<b>or</b>	
	enter the highlighted combination

## Symbol Chart

Use this chart as a guide for entering characters with symbol method.


 
	.?! , @ ' - _ : ; ( ) & " ~ 1 0 ; i % £ \$ ¥ ¢ € + x * / \ [ ] = > < # §
	@ _ \
	/ : ;
	" & '

	( ) [ ] { }
	¿ ¡ ~
	< > =
	\$ £ ¥ ¤ €
	# % *
	+ - x * / \ = > < # §
	<i>enter a space (hold to enter a return)</i>
	<i>change text entry method (hold for default)</i>

**Note:** This chart may not reflect the exact character set available on your phone. In a URL editor,  first shows common characters for that editor.

## Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Action
Press  to delete 1 letter at a time.
Hold  to delete the entire message.

 
## Using the Handsfree Speaker

**Note:** You must open your phone's flip to activate the speakerphone.

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.



Press and hold the smart/speakerphone key to turn the handsfree speaker on or off during a call. A soft audio alert confirms activation/deactivation.

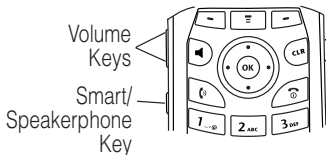

When you turn on the handsfree speaker, your phone displays **Spkrphone On** in the home screen. The handsfree speaker remains on until you press the smart/speakerphone key again or turn the phone off.

**Note:** The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

## ***Using the External Display***

When the flip is closed, you can use the external display for the following:

- View time, date, and phone status information.
- Set phone alert styles.
- Read message notifications.

### ***Setting Phone Alert Style via the External Display***

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

With the flip closed:

Press	To
1 volume keys	scroll to <b>Style</b>
2 smart/ speakerphone key	select an alert style
3 volume keys	return to the home screen

## ***Viewing an Unanswered Call via the External Display***

Your phone keeps a record of your unanswered calls and displays **X Missed Calls** in the external display.

**Note:** Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other handsfree device with this feature.

Press	To
1 smart/ speakerphone key	view the received calls list
2 volume keys	scroll through and select a call
3 smart/ speakerphone key	view the selected call



## Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

To change a code or password:

**Find the Feature**

  > **Settings** > **Security**  
> **New Passwords**

## Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.


To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 53).

## Locking Your Phone Manually

### Find the Feature


 > **Settings** > **Security**  
> **Phone Lock** > **Lock Now**

Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (  )	lock the phone

## Unlocking Your Phone

**Tip:** Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:


Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (  )	unlock your phone

## Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

### Find the Feature

 > **Settings** > **Security**  
> **Phone Lock**  
> **Automatic Lock** > **On**

 

Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (  )	activate automatic lock



# If You Forget a Code, PIN, or Password

**Note:** Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

	Press	To
1		display the unlock code bypass screen
2	keypad keys	enter your security code
3	<b>OK</b> (  )	submit your security code

If you forget your security code, contact your service provider.

# Setting Up Your Phone

## Storing Your Name and Phone Number



To store or edit your name and phone number information on your phone:

### Find the Feature

> Phone Info  
> My Tel. Number

**Shortcut:** Press from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider. To view your phone number from the home screen or during a call, see page 16.

## Setting an Alert Style

Your phone rings and/or vibrates to notify you of an incoming call or to signal certain other events. This ring or vibration is called an *alert*. Your phone includes the following types of alerts: **Ring Volume, Calls, Inbox, Voicemail, Alarms, Data Calls, Fax Calls, Ringer IDs, Key Volume, and Reminders.**





You can define 5 groups of alert settings. These groups, called *alert styles*, include **Loud, Soft, Vibrate, Vibe&Ring, and Silent.** When you set your phone to use an alert style, the corresponding alert settings become active.



To select an alert style and specify its settings for specific alerts:

**Find the Feature**       > **Settings** > **Ring Styles**

### Action

- 1 Highlight **Style**.
- 2 Press **CHANGE** ().
- 3 Highlight the desired alert style (**Loud, Soft, Vibrate, Vibe&Ring, or Silent**).
- 4 Press **SELECT** ().
- 5 Highlight *style* **Detail**.
- 6 Press **CHANGE** ().
- 7 Highlight the setting you want to change:  
**Ring Volume, Calls, Inbox, Voicemail, Alarms, Data Calls, Fax Calls, Ringer IDs, Key Volume, and Reminders**.
- 8 Press **CHANGE** ().
- 9 Set or modify the style as desired.
- 10 Repeat steps 7 - 9 for all settings you want to change.

## Setting Answer Options





You can use additional, alternative methods to answer an incoming call.

- |                       |                            |
|-----------------------|----------------------------|
| <b>Multi-key</b>      | answer by pressing any key |
| <b>Open To Answer</b> | answer by opening the flip |

To activate or deactivate an answer option:

### Find the Feature

 > **Settings** > **In-Call Setup**  
> **Answer Options**







Press	To
1 	scroll to <b>Multi-Key</b> or <b>Open to Answer</b>
2 <b>CHANGE</b> (  )	select the option
3 	scroll to <b>On</b> or <b>Off</b>
4 <b>SELECT</b> (  )	confirm the setting

## Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen.

### Find the Feature

 > **Settings** > **Personalize**  
> **Wallpaper**

Press	To
1 	scroll to <b>Picture</b>
2 <b>CHANGE</b> (  )	open the picture viewer
3  up or down	scroll to a picture/animation  Scroll to <b>(None)</b> to turn off the wallpaper image.
4 <b>SELECT</b> (  )	select the image
5 	scroll to <b>Layout</b>
6 <b>CHANGE</b> (  )	adjust the image layout



**Press****To**7 scroll to **Center**, **Tile**, or **Fit-to-screen****Center** places the image in the center of the display.**Tile** fills the display with adjacent copies of the image.**Fit-to-screen** resizes the image, if necessary, to fit the display.8 **SELECT** 

confirm the layout setting

9 **BACK** 

save wallpaper settings

## Setting a Screen Saver Image







 
Set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the flip is open and no activity is detected for a specified time period. The image shrinks to fill the display, if necessary. An animation repeats for 1 minute, then the first frame of the animation displays.

**Tip:** Turn off the screen saver to extend battery life.

**Find the Feature** > **Settings** > **Personalize**  
> **Screen Saver****Press****To**1 scroll to **Picture**2 **CHANGE** 

open the picture viewer

Press	To
3 	scroll to a picture/animation Scroll to <b>(None)</b> to turn off the screen saver image.
4 <b>SELECT</b> (  )	select the image
5 	scroll to <b>Delay</b>
6 <b>CHANGE</b> (  )	set the delay interval
7 	scroll to the inactivity interval that triggers the screen saver
8 <b>SELECT</b> (  )	confirm the delay setting
9 <b>BACK</b> (  )	save screen saver settings

## Setting Display Contrast

**Find the Feature**

 > **Settings** > **Initial Setup**  
> **Contrast**

## Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on, or turn off backlights to extend battery life.

**Find the Feature**

 > **Settings** > **Initial Setup**  
> **Backlight**





# Hiding or Showing Location Information



Your phone can use the *automatic location information* (ALI) feature to tell the network where you are physically located.

## Find the Feature

 > Settings > Location

Press	To
1 	scroll to <b>Location On</b> or <b>911 Only</b>
2 <b>SELECT</b> (  )	select the setting

## Limitations of AGPS

Sometimes adequate signals from multiple satellites are unavailable, usually because your AGPS phone's antenna cannot establish a view of a wide area of open sky. In these cases, the AGPS feature **will not work**. Such situations include, but are not limited to, the following:

- in underground locations
- inside of buildings, trains, or other covered vehicles
- under any other metal or concrete roof or structure
- between tall buildings or under dense tree cover
- near a powerful radio or television tower
- when your AGPS antenna is covered (for example, by your hand or other object) or facing the ground
- when there are temperature extremes outside the operating limits of the phone

Even where location information can be calculated in such situations, it may take more time than usual, and your location estimate may not be as accurate.

Even where adequate signals from multiple satellites are available, your AGPS feature will provide only an approximate location, often within 150 feet (45 meters) but sometimes much farther from your actual location.

The satellites used by your phone's AGPS feature are controlled by the U.S. government and are subject to changes implemented in accordance with the Department of Defense AGPS user policy and the Federal Radio Navigation Plan. These changes may affect the performance of your phone's AGPS feature.

## ***Conserving Battery Power***

Some networks and phones include a battery save setting to extend battery life. When this feature is activated, your phone automatically turns off the keypad backlight when it detects that enough ambient light is available.

### **Find the Feature**

 > **Settings** > **Initial Setup**  
> **Battery Save**



# Calling Features

For basic instructions on how to make and answer calls, see page 14.

## Changing the Active Line






Change the active phone line to make and receive calls from your other phone number.

Find the Feature

 > Phone Info > Active Line

## Redialing a Number

Press	To
1 	view the dialed calls list
2 	scroll to the entry you want to call
3 	redial the number

## Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

With automatic redial, your phone automatically redials the number for 4 minutes. When the call goes through, your phone rings or vibrates 1 time, displays **Redial Successful**, and then connects the call.

You must turn on automatic redial to use the feature. To turn automatic redial on or off:

### Find the Feature

 > **Settings** > **Initial Setup**  
> **Auto Redial**

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a fast busy signal and see **Call Failed**:

**Press**

**To**

 or **RETRY** ()

activate automatic redial

---

---

## Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.

**Press**

**To**

either volume key

turn off the alert

---

---


## Calling an Emergency Number

Your service provider programs 1 or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be



placed due to network, environmental, or interference issues.

	Press	To
1	keypad keys	dial the emergency number
2		call the emergency number

## **Using AGPS During an Emergency Call**

When you make an emergency call, your phone's assisted-Global Positioning System (AGPS) feature can calculate your approximate location and help emergency service personnel find you.

### **Notes:**

- This feature can work only if the emergency response center can receive and process location information. If you are concerned about whether your local emergency response center can receive AGPS location information, contact your local authorities.
- In order for the AGPS feature to work when making emergency calls, the service must be turned on. See page 50.

For best results, you should be located where your phone's antenna can establish a clear view of the open sky. This allows your phone to access AGPS satellite signals. Even under good conditions, it may take 30 seconds or more to determine your approximate location. This time increases




and the accuracy of the results decreases with reduced access to satellite signals.

If your phone does not have adequate access to AGPS satellite signals, the location of the nearest cell tower in contact with your phone is automatically provided to the emergency response center.

Because of the limitations of the AGPS feature, always provide your best knowledge of your location to the emergency response center, just as you would when using a phone without AGPS capabilities. Also, remain on the phone for as long as the emergency response center instructs you.




## Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

**Shortcut:** Press  from the home screen to view the dialed calls list.



 
### Find the Feature

 > Recent Calls

Press	To
1 	scroll to <b>Received</b> or <b>Dialed</b>
2 <b>SELECT</b> ( 	select the list
3 	scroll to an entry

**Note:** ✓ means the call connected.



Press	To
4 	call the entry's number
or	
VIEW 	view entry details
or	
	open the <b>Last Calls Menu</b> to perform various operations on the entry

The **Last Calls Menu** can include the following options:

Option	Description
<b>Store</b>	Create a <b>Contacts</b> entry with the number in the <b>No.</b> field.
<b>Delete</b>	Delete the entry.
<b>Delete All</b>	Delete all entries in the list.
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from <b>Contacts</b> or the recent calls lists.

## Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the  (missed call) indicator

- **X Missed Calls**, where **X** is the number of missed calls

Press	To
1 VIEW (☐)	see the received calls list
2 Ⓞ	select a call to return
3 ☐	make the call

## Using the Notepad

The most recent set of digits that you enter are stored in your phone's *notepad* memory. This can be a phone number that you called or a number that you entered but did not call. To retrieve the number stored in the notepad:


**Find the Feature** ☐ > Recent Calls > Notepad

Press	To
☐	call the number
or	
☐	open the <b>Dialing Menu</b> to attach a number or insert a special character
or	
<b>STORE</b> (☐)	create a <b>Contacts</b> entry with the number in the <b>No.</b> field



 

## Attaching a Number

While dialing (with digits visible in the display):



Press	To
 > <b>Attach Number</b>	attach a number from <b>Contacts</b> or the recent calls list

## Calling with Speed Dial

Each entry you store in **Contacts** is assigned a unique *speed dial* number.

**Tip:** To see an entry's speed dial number, press  > **Contacts**, scroll to the entry, and press **VIEW** ().

To speed dial a **Contacts** entry:

	Press	To
1	keypad keys	enter the speed dial number for the entry you want to call
2		submit the number
3		call the entry

## Calling with 1-Touch Dial

To call **Contacts** entries 1 through 9, press and hold the single-digit speed dial number for 1 second.



# Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

**Note:** Your service provider may include additional information about using this feature.

## Listening to Voicemail Messages

From the home screen:


Press	To
1	scroll to  (Message Center)
2	scroll to <b>VoiceMail</b>
3 <b>CALL</b> ()	call <b>VoiceMail</b>


The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

**Tip:** Your service provider may also store your voicemail phone number as **Contacts** entry number 1. If so, you can press and hold to call your voicemail number.



## Receiving a Voicemail Message







When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a **New VoiceMail** notification.

Press	To
<b>CALL</b> (  )	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

## Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Press	To
<b>1</b> 	scroll to  ( <b>Message Center</b> )
<b>2</b> 	scroll to <b>Message Settings</b>
<b>3</b> <b>SEELCT</b> (  )	select <b>Message Settings</b>
<b>4</b> 	scroll to <b>VoiceMail No.</b>
<b>5</b> <b>CHANGE</b> (  )	select <b>VoiceMail No.</b> to enter or change the number



 
# Phone Features

---

This section helps you locate features on your phone that are not described in detail in this guide.

## Main Menu

This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available on your phone.

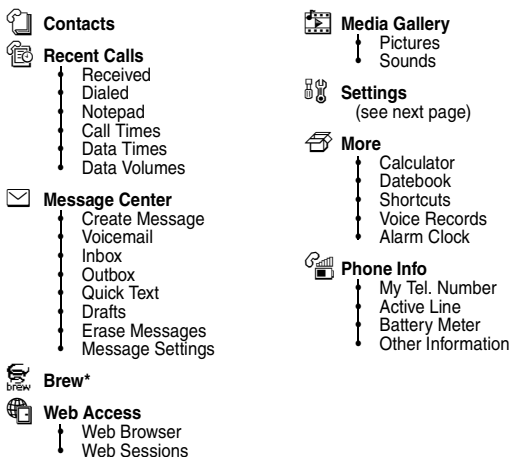

\*Your service provider may use a different name for the Brew feature.



# Settings Menu



## Ring Styles

- Style
- Style Detail



## Personalize

- Home Screen
- Main Menu
- Voice Dial Setup
- Color Style
- Greeting
- Wallpaper
- Screen Saver
- Sound Settings



## In-Call Setup

- In-Call Timer
- Answer Options
- MSG Alert



## Security

- Phone Lock
- Lock Application
- Restrict Calls
- New Passwords



## Initial Setup

- Time and Date
- SpeakerPhone
- Auto PIN Dial
- Auto Redial
- Backlight
- TTY Setup
- Scroll
- Language
- Battery Save
- Contrast
- DTMF
- Hyphenation
- Master Reset
- Master Clear



## Network Options

- Current Network
- Analog Only
- Set Mode
- Service Tone
- Call Drop Tone



## Car Settings

- Auto Answer
- Auto Handsfree
- Power-off Delay
- Charger Time



## Headset

- Auto Answer
- Voice Dial



## Location

- Location On
- 911 Only



## Connection

- Incoming Call



### Shortcuts

#### Change ringer alert:

Open flip, press down volume key to decrease volume, then switch to vibrate alert, then silent alert. Press up volume key to reset ring alert and increase volume.

#### Display my phone number:

Press (from home screen).

 
 
#### Go to dialed calls list:

Press (from home screen).

#### Exit menu system:






Press .

# Calling Features
















 

Feature	Description
<b>Restrict Calls</b>	Restrict outgoing or incoming calls:  > <b>Settings</b> > <b>Security</b> > <b>Restrict Calls</b> > <i>unlock_code</i>
<b>TTY Calls</b>	Set up your phone for use with an optional TTY device:  > <b>Settings</b> > <b>Initial Setup</b> > <b>TTY Setup</b>







# Messages

Feature	Description
<b>Send Text Message</b>	Send a text message: Press  to scroll to  ( <b>Message Center</b> ), then > <b>Create Message</b> > <b>New Short Msg</b>
<b>Send Multimedia Message</b>	Send a multimedia message: Press  to scroll to  ( <b>Message Center</b> ), then > <b>Create Message</b> > <b>New MMS Msg</b>
<b>Insert Objects In Text Message</b>	While composing a text message:  > <b>Insert</b>









Feature	Description
<b>Use MMS Template</b>	Open an MMS template with preloaded media: Press  to scroll to  ( <b>Message Center</b> ), then > <b>Create Message</b> > <b>MMS Template</b> 
<b>Read Message</b>	Read a new text or multimedia message that you have received: Press <b>READ</b> (  ). 
<b>Store Message Objects</b>	Go to a multimedia message slide, or highlight an object in a letter, then:  > <b>Store</b> 
<b>Quick Text</b>	Send or create a quick note message: Press  to scroll to  ( <b>Message Center</b> ), then > <b>Quick Text</b> 
<b>Sent Messages</b>	View sent messages: Press  to scroll to  ( <b>Message Center</b> ), then > <b>Outbox</b> 
<b>Received Messages</b>	Read received messages: Press  to scroll to  ( <b>Message Center</b> ), then > <b>Inbox</b>  <b>Tip:</b> Press  to perform various operations on the message. 





Feature	Description
<b>Drafts</b>	View messages saved in drafts folder: Press  to scroll to  <b>(Message Center)</b> , then > <b>Drafts</b>
<b>Erase Messages</b>	Delete all messages or only messages from the <b>Outbox</b> or drafts folder: Press  to scroll to  <b>(Message Center)</b> , then > <b>Erase Messages</b>



 
 
 
 
 
 
 
 
 
 
 
 
## Contacts

Feature	Description
<b>Create Entry</b>	Create a new <b>Contacts</b> entry:  > <b>Contacts</b>  > <b>[New Entry]</b> > <b>Phone Number</b>
<b>Create Group Mailing List</b>	Create a group mailing list as a <b>Contacts</b> entry:  > <b>Contacts</b>  > <b>[New Entry &gt; Mailing List]</b>
<b>Dial Number</b>	Call a number stored in <b>Contacts</b> :  > <b>Contacts</b> , highlight the entry, press  to call


 


Feature	Description
<b>Voice Dial Number</b>	<p>Dial a <b>Contacts</b> entry by saying the entry's name:</p> <p>Press and release the voice key, then (within 2 seconds of being prompted) say "Name dial." When prompted again, say the name of a <b>Contacts</b> entry.</p> <p><b>Note:</b> All <b>Contacts</b> entries are automatically stored as voice dial numbers.</p>
<b>Digit Dial Number</b>	<p>Dial a number by saying the digits in the number:</p> <p>Press and release the voice key, then (within 2 seconds of being prompted) say "Digit dial." When prompted again, say the number you wish to call.</p> <p><b>Note:</b> You can use digit dial for numbers not stored in <b>Contacts</b>.</p>
<b>Set Ringer ID for Entry</b>	<p>Assign a distinctive ringer alert to a <b>Contacts</b> entry:</p> <p> &gt; <b>Contacts</b> &gt; <i>entry</i></p> <p> &gt; <b>Edit</b> &gt; <b>Ringer ID</b> &gt; <b>CHANGE</b></p> <p>&gt; <i>ringer name</i></p>
<b>Set Category for Entry</b>	<p>Set the category for a <b>Contacts</b> entry:</p> <p> &gt; <b>Contacts</b> &gt; <i>entry</i></p> <p> &gt; <b>Edit</b> &gt; <b>Category</b> &gt; <b>CHANGE</b></p> <p>&gt; <i>category name</i></p>



Feature	Description
<b>Sort Contacts List</b>	Set the order in which <b>Contacts</b> entries are listed:  > <b>Contacts</b>  > <b>Setup</b> > <b>Sort by</b> > <i>sort order</i>
<b>Set Primary Number</b>	Set the primary number for a <b>Contacts</b> entry with multiple numbers:  > <b>Contacts</b> > <i>entry</i> > <b>SELECT</b>  > <b>Set Primary</b> > <i>phone number</i>
<b>View Primary or All Numbers</b>	Set to view only primary numbers or all numbers when viewing entries:  > <b>Contacts</b> > <i>entry</i>  > <b>Setup</b> > <b>SELECT</b> > <b>CHANGE</b> > <b>All Contacts</b> or <b>Primary Contacts</b>
<b>Edit Entry</b>	Edit a <b>Contacts</b> entry:  > <b>Contacts</b> > <i>entry</i>  > <b>Edit</b>
<b>Delete Entry</b>	Delete a <b>Contacts</b> entry:  > <b>Contacts</b> > <i>entry</i>  > <b>Delete</b>
<b>Copy Contacts Entry</b>	Copy a <b>Contacts</b> entry to another location in <b>Contacts</b> :  > <b>Contacts</b> > <i>entry</i>  > <b>Copy Entry</b> > <i>location number</i>



Feature	Description
<b>Copy Multiple Contacts Entries</b>	Copy a <b>Contacts</b> entry to another location in <b>Contacts</b> :  > <b>Contacts</b> > <i>entry</i>  > <b>Copy Entries</b> > <b>From(start):</b> > <i>location number</i> > <b>From(end):</b> > <i>location number</i> > <b>To(start):</b> > <i>location number</i>

## Personalizing Features

### Using Voice Commands

You can place calls and access some menu options by speaking commands to your phone:

#### Action

- 1 Press and release the voice button on the right side of the phone.

**Note:** If **Speakerphone** is not already turned on and you want to activate it, press the smart/speakerphone key on the left side of your phone. You can then speak the commands aloud, and hear phone prompts played out loud.

Your phone displays **Say a command**.

- 2 Say 1 of the following commands:

**Name Dial, Digit Dial, Voicemail, Redial, Received**

Your phone opens the corresponding menu or performs the corresponding action.



## To Place Calls

Advanced Voice Dialing lets you use voice commands to place a call:

- Use **Name Dial** to dial a **Contacts** entry by speaking the name of the entry.
- Use **Digit Dial** to dial any number by speaking the digits in the number.

**Note:** This feature recognizes only 7-digit, 10-digit, and 11-digit numbers. It will **not** dial 3-digit numbers such as 911. To make an emergency call, use the phone keypad to dial and send the number.

### Action

- 1 Press and release the voice button on the right side of the phone.

Your phone displays **Say a command** and plays the same prompt out loud.

- 2 Say “Name Dial” or “Digit Dial.”

- 3 When prompted, say the name of the **Contacts** entry or speak the digits in the phone number.

If the phone recognizes the name or number, it places the call.

If the phone asks you to repeat a name or number, say it again. If the name or number is not valid or not recognized, the phone does not place the call.



## Action



If the phone does not recognize the name or number, it displays a list of up to 3 names or numbers, asks, “Did you say ...,” and highlights the first item in the list.

- If the item is correct, say “Yes” to place the call.

**or**

- If the item is not correct, say “No” to go to the next item.

**or**

- Press  to scroll to the correct item and press **Yes** (.

**or**

- Press the voice button to exit the list and repeat the name or number.

If you reach the end of the list without confirming a listed item, the phone asks if you want to try again. Say “Yes” if you want to speak the name or number again. Say “No” to exit without placing a call.

---

---

**Tip:** When saying a number, speak at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.

### ***To Adapt Advanced Voice Dialing to Your Voice***

For most people, Advanced Voice Dialing works well without any initial setup. However, if the phone is

frequently unable to recognize numbers correctly when you use Advanced Voice Dialing, you may be able to improve your results by adapting it to your voice.




**Note:** If the phone is used by several people, reset Advanced Voice Dialing to its original setting before proceeding. This ensures that you are not saving your settings over someone else's.

## Adapting Advanced Voice Dialing to Your Voice


### Find the Feature

 > **Settings** > **Personalize**  
> **Voice Dial Setup**

### Action



- 1 Scroll to **Adapt Digits**.
- 2 Press **SELECT** ().
- 3 Press **START** ().
- 4 When the phone prompts you to say the 1st digit sequence, wait for the beep and then repeat the digits in a normal tone of voice.
- 5 If the recording sounds acceptable (no mistakes or background noises), say "Yes" or press **YES** ().

or

If the recording is not acceptable, say "No" or press **NO** (). When prompted to say the digits again, wait for the beep and say the digits again. The phone will prompt you to repeat this process with up to 12 additional sets of digits.



## Action

- 6 When the phone prompts, “More Adaptation?”, press **YES** (  ) to continue or **NO** (  ) to end the process.

When the adaptation process is complete, the phone will say “Adaptation Complete.”

---

---



**Tip:** When adapting Advanced Voice Dialing:

- Choose a quiet place for recording.
- Wait for the beep before you begin to speak.
- Speak at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.
- If you make a mistake while recording a sequence of digits, or if an unexpected noise spoils the recording, rerecord that sequence.

## To Reset Advanced Voice Dialing

### Find the Feature

 > **Settings** > **Personalize**  
> **Voice Dial Setup**

 
 
 
 
 
 
 
Press	To
1 	scroll to <b>Reset Digits</b>
2 <b>OK</b> (  )	reset Advanced Voice Dialing to the factory default

---

 
 
 
 
 
 
 
---



## Additional Personalizing Features

 
 
 
 
Feature	Description
<b>Ringer IDs</b>	Activate distinctive ringer alerts assigned to <b>Contacts</b> entries:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Ringer IDs</b>
<b>Ring Volume</b>	Set ringer volume:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Ring Volume</b>
<b>Keypad Volume</b>	Set keypad keypress volume:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Key Volume</b>
<b>Reminders</b>	Set reminder alerts for picture, text, or voicemail messages you receive:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Reminders</b>
<b>Message Alerts</b>	Set whether or not you are alerted to messages received during a call:  > <b>Settings</b> > <b>In-Call Setup</b> > <b>MSG Alert</b>
<b>Greeting</b>	Change the greeting that appears when you turn on your phone:  > <b>Settings</b> > <b>Personalize</b> > <b>Greeting</b>
<b>Display Text</b>	Set home screen text to be left justified or centered in the display:  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Layout</b>



Feature	Description
<b>Clock View</b>	Display an analog clock or digital time readout in the home screen:  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Clock</b>
<b>Menu View</b>	Display the main menu as graphic icons or as a text-based list:  > <b>Settings</b> > <b>Personalize</b> > <b>Main Menu</b> > <b>View</b>
<b>Main Menu</b>	Reorder your phone's main menu:  > <b>Settings</b> > <b>Personalize</b> > <b>Main Menu</b> > <b>Reorder</b>
<b>Show or Hide Menu Icons</b>	Show or hide menu feature icons in the home screen:  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Home Keys</b> > <b>Icons</b>
<b>Change Soft Keys</b>	Change soft key labels and menu feature icons in the home screen:  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Home Keys</b> > <b>Left Soft Key</b> or <b>Right Soft Key</b>
<b>Shortcuts</b>	Create a shortcut to a menu item: Highlight the menu item, then press and hold  .  Select a shortcut:  > <b>More</b> > <b>Shortcuts</b> > <i>shortcut name</i>

 

 


# Menu Features


Feature	Description
<b>Language</b>	Set menu language:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Language</b>
<b>Scroll</b>	Set the highlight bar to stop or wrap around in menu lists:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Scroll</b>
<b>Master Reset</b>	Reset all options <i>except</i> unlock code, security code, and lifetime timer:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Reset</b>
<b>Master Clear</b>	Reset all options <i>except</i> unlock code, security code, and lifetime timer, and clear all user settings and entries:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Clear</b>  <b>Note: Master Clear</b> erases all <b>Contacts</b> entries.



# Dialing Features

Feature	Description
<b>Auto PIN Dial</b>	Automatically dial an authenticating PIN code for outgoing calls:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Auto PIN Dial</b>
<b>DTMF Tones</b>	Activate DTMF tones:  > <b>Settings</b> > <b>Initial Setup</b> > <b>DTMF</b>  Send DTMF tones during a call: Press number keys.  Send stored numbers as DTMF tones during a call: Highlight a number in the <b>Contacts</b> or recent calls lists, then press  > <b>Send Tones</b> .

 

 



 

## Call Monitoring

**Network connection time** is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service




provider. For billing information, please contact your service provider directly.


 

 

 

 

 

Feature	Description
<b>Call Times</b>	View call timers:  > <b>Recent Calls</b> > <b>Call Times</b> 
<b>In-Call Timer</b>	Display time or cost information during a call:  > <b>Settings</b> > <b>In-Call Setup</b> > <b>In-Call Timer</b> 
<b>Data Times</b>	View data call timers:  > <b>Recent Calls</b> > <b>Data Times</b> 
<b>Data Volumes</b>	View data volume meters:  > <b>Recent Calls</b> > <b>Data Volumes</b> 

## Handsfree Features

**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.






Feature	Description
<b>Accessory Volume Settings</b> (car kit or headset)	Adjust volume levels of car kit accessory: During an active call, press your phone's up or down volume keys. 





Feature	Description
<b>External Speakerphone</b>	Activate a connected external speakerphone during a call: Press the speakerphone button on the left side of the phone. 
<b>Auto Answer</b> (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > <b>Settings</b> > <b>Car Settings</b> or <b>Headset</b> > <b>Auto Answer</b> 
<b>Voice Dial</b> (headset)	Enable voice dial with headset send/end key:  > <b>Settings</b> > <b>Headset</b> > <b>Voice Dial</b> 
<b>Auto Handsfree</b> (car kit)	Automatically route calls to a car kit when connected:  > <b>Settings</b> > <b>Car Settings</b> > <b>Auto Handsfree</b> 
<b>Power-Off Delay</b> (car kit)	Set the phone to stay on for a period of time after the ignition is switched off:  > <b>Settings</b> > <b>Car Settings</b> > <b>Power-off Delay</b> 
<b>Charger Time</b> (car kit)	Charge your phone for a period of time after the ignition is switched off:  > <b>Settings</b> > <b>Car Settings</b> > <b>Charger Time</b> 



# Data and Fax Calls






 









 





Feature	Description
<b>Send Data or Fax</b>	Connect your phone to the device, then place the call through the device application. 
<b>Receive Data or Fax</b>	Connect your phone to the device, then answer the call through the device application. 
<b>Talk Then Fax</b>	Connect your phone to the device, enter the number, press  > <b>Dialing Menu</b> > <b>Talk Then Fax</b> , then press  to make the call. 

# Network Features


 

 

 
 

 

Feature	Description
<b>Network Settings</b>	View network information and adjust network settings:  > <b>Settings</b> > <b>Network Options</b> 



 
# Personal Organizer Features

Feature	Description	
<b>Add Datebook Event</b>	Add an event to the datebook:  > <b>More</b> > <b>Datebook</b> > <i>day</i>  > <b>New</b>	
<b>View Datebook Event</b>	View or edit event details:  > <b>More</b> > <b>Datebook</b> > <i>day</i>  > <i>event</i> > <b>VIEW</b> 	
<b>Event Reminder</b>	View event reminder: <b>VIEW</b>   Dismiss event reminder: <b>EXIT</b> 	
<b>Copy Datebook Event</b>	Copy a datebook event to date and/or time:  > <b>More</b> > <b>Datebook</b> > <i>day</i>  > <i>event</i>   > <b>Copy</b>	
<b>Set Alarm</b>	Set an alarm:  > <b>More</b> > <b>Alarm Clock</b>	
<b>Turn Off Alarm</b>	Turn off alarm: Press <b>DISABLE</b>  or   Set 8-minute delay: Press <b>SNOOZE</b>  .	



Feature	Description
<b>Create Voice Record</b>	<p>Create a voice record: Press and hold voice key, speak into the phone, release voice key when finished speaking.</p> <p><b>Note:</b> Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.</p> 
<b>Play Voice Record</b>	<p>Play back a voice record:  &gt; <b>More</b> &gt; <b>Voice Records</b> &gt; <i>voice record</i></p> 
<b>Calculator</b>	<p>Calculate numbers:  &gt; <b>More</b> &gt; <b>Calculator</b></p> 
<b>Currency Converter</b>	<p>Convert currency:  &gt; <b>More</b> &gt; <b>Calculator</b>  &gt; <b>Exchange Rate</b></p> <p>Enter exchange rate, press <b>OK</b> () enter amount, press  &gt; <b>Convert Currency.</b></p> 

## Security

Feature	Description
<b>Lock Application</b>	<p>Lock phone applications:  &gt; <b>Settings</b> &gt; <b>Security</b> &gt; <b>Lock Application</b></p>



# News and Entertainment

Feature	Description
Launch Micro-Browser	Start a micro-browser session:  > <b>Web Access</b> > <b>Web Browser</b> 
Web Sessions	Select or create a Web session:  > <b>Web Access</b> > <b>Mobile Web</b> 
Download Game or Application	Download a Brew game or application:  > <b>Brew</b> > <b>Brew Shop</b> , press <b>START</b> (  ) , select category, select application, select pricing option. Normal airtime and/or carrier usage charges apply.  Your service provider may use a different name for the Brew feature. 
Launch Game or Application	Launch a Brew game or application:  > <b>Brew</b> > <i>application</i> 
Manage Pictures	Manage pictures and animations:  > <b>Media Gallery</b> > <b>Pictures</b> 
Manage Sounds	Manage ring tones, sounds that you have composed or downloaded:  > <b>Media Gallery</b> > <b>Sounds</b>

# ***Specific Absorption Rate Data***

---

**The model wireless phone meets the government's requirements for exposure to radio waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when

tested for use at the ear is 1.55 W/kg, and when worn on the body, as described in this user guide, is 1.48 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

# Index

---

## A

- accessories 8, 41, 63
- Advanced Voice Dialing 69
- AGPS service indicator 26
- alarm clock 80
- alert
  - defined 40, 45
  - downloading 64
  - setting 40, 45
  - turning off 13, 15, 53
- animation
  - downloading 64
  - screen saver 48
  - viewing 82
  - wallpaper 47
- answering a call 14, 46
- application, locking and
  - unlocking 81
- automatic location
  - information
  - sending 50
- automatic redial 52

## B

- backlight 49
- battery
  - charging 11

- extending battery life 10,
  - 48, 49, 51

- installing 8
- level indicator 26

browser. See micro-browser

## C

- calculator 81
- call
  - adding digits after phone
    - number 56
  - Advanced Voice Dialing 69
  - alert, setting 40, 45
  - alert, turning off 13, 15,
    - 53
  - answer options 46
  - answering 14
  - deleting 55
  - dialed calls list 55
  - dialing 14
  - emergency number 53
  - ending 14, 15
  - external speakerphone 78
  - handsfree speaker 39
  - making 14
  - received calls list 55

- receiving 14
- recent calls 55
- storing 55
- timers 77
- unanswered call 41, 56
- Call Failed, Number Busy
  - message 52
- capitalization, changing 32
- car kit 77
- character chart 34
- codes
  - changing 42
  - default 13, 42, 43, 44
  - forgetting 44
- Contacts
  - 1-touch dial 58
  - attaching 2 numbers 56, 58
  - deleting an entry 67
  - dialing a number 65
  - editing an entry 67
  - entry category 66
  - group mailing list 65
  - primary number, setting 67
  - ringer ID 66, 73
  - sorting entries 67
  - speed dial number 58
  - storing an entry 65
  - voice dialing 66
- contrast, display 49
- customizing the menu 74

## D

- data call 79
  - timers 77
  - volume meters 77
- datebook 80
- deleting a call 55
- dialed calls list 55
- dialing a number 14
- digit dialing 66
- display
  - backlight 49
  - contrast 49
  - greeting 73
  - language 75
  - personalizing 74
- distinctive ringer alert 73
- drafts folder 20, 65
- DTMF tones
  - activating 76
  - sending 76

## E

- earpiece volume 13
- email
  - draft 20
- emergency number 53
- end key 14, 15
- ending a call 14, 15
- Enter Unlock Code
  - message 43, 44
- external display 40

## F

- fax call 79
- 5-way navigation key 26
- flip
  - external display 40
  - open to answer 15, 46
  - screen saver 48

## G

- greeting 73

## H

- handsfree speaker 39
- handsfree use 77
- headset
  - accessory, using 77
  - using with external display 41
- home screen 24

## I

- indicators
  - AGPS service 26
  - battery level 26
  - loud ring alert 26
  - message 25
  - message waiting 20
  - missed call 56
  - ring alert 26
  - roam 25

- signal strength 25
- silent alert 26
- soft ring alert 26
- text case 32
- text entry method 26, 32
- vibrate alert 26
- vibrate and ring alert 26
- voicemail message 26,

60

- iTAP software 35

## K

- key
  - end 14, 15
  - 5-way navigation 26
  - left soft key 24
  - menu 28
  - power 12
  - right soft key 24
  - send 14, 15, 55
  - volume control 13
- keypad
  - answering calls 46
  - volume, setting 73

## L

- language, setting 75
- left soft key
  - functions 24
- location, sending to network 50

lock  
    application 81  
    phone 42  
Low Battery message 26

## M

making a call 14  
master clear 75  
master reset 75  
menu  
    entering text 30  
    icons, converting to text  
        74  
    icons, showing or hiding  
        74  
    language, setting 75  
    lists 28  
    navigating 27  
    personalizing 74  
    rearranging features 74  
    scroll 75  
    using features 28  
    view, changing 74  
    wrap around 75  
menu key 28  
message  
    alerts 73  
    drafts 65  
    erase 65  
    MMS template 64  
    MMS, defined 17

multimedia message 63  
outbox 64  
quick text 64  
reading 64  
receiving 3  
reminders, turning on/off  
    73  
    status 64  
    text 3, 63, 64  
message indicator 25  
message waiting indicator  
    20  
micro-browser  
    browser setup 82  
    using 82  
    Web sessions 82  
missed call indicator 56  
Missed Calls message 41,  
    57  
MMS. *See* message  
multimedia message  
    receiving 20  
    sending 17, 63  
multimedia messaging  
    service. *See*  
    message  
my telephone number 16,  
    45, 62

## N

network settings 79

notepad 57  
number  
    storing your number 45  
    viewing your number 16,  
        62  
numbers, entering 37

## O

open to answer 46  
optional accessory, defined  
    8  
optional feature, defined 8  
outbox 64

## P

passwords. *See* codes  
phone  
    alert, setting 40, 45  
    alert, turning off 13, 15,  
        53  
    answer options 46  
    automatic location  
        information 50  
    clear stored information  
        75  
    codes 42  
    flip 15  
    keypad, answering calls  
        46  
    language, setting 75  
    location 50

locking 42  
network settings 79  
reset all options 75  
security code 42  
unlock code 42  
unlocking 13, 42, 43, 44  
phone number  
    adding digits after 56  
    attaching 2 numbers 56,  
        58  
    redialing 52  
    storing in Contacts 65  
    storing your number 45  
    viewing your number 16,  
        62

## photo

    downloading 64

## picture

    downloading 64  
    screen saver 48  
    viewing 82  
    wallpaper 47

power key 12

predictive text entry 35

primary text entry method  
    31

## Q

quick text 64

## R

- received calls list 55
- recent calls 55
- redial
  - automatic redial 52
  - busy number 52
- reminders
  - turning on/off 73
- right soft key
  - functions 24
- ring alert
  - setting 15, 40, 45
  - turning off 13, 15, 53
- ring alert indicators 26
- ring tone
  - downloading 64
  - managing 82
- ringer ID
  - setting 66
  - turning on/off 73
- ringer volume, setting 13, 73
- roam indicator 25

## S

- screen saver 48
- scroll, menu 75
- secondary text entry
  - method 31
- security code
  - changing 42

- default 42
- forgetting 44
- send key 14, 15, 55
- shortcuts 62, 74
- signal strength indicator 25
- silent alert indicator 26
- silent alert, setting 40, 45
- silent ring alert, setting 15
- soft keys
  - functions 24
- sound
  - downloading 64
  - managing 82
- Speaker On message 40
- speakerphone
  - automatic answer 78
- speakerphone, external
  - activating 78
- speed dial 58
- standby time, increasing 48, 49
- storing a call 55
- symbol chart 38
- symbols, entering 38

## T

- tap method text entry 32
- telephone number
  - storing your number 45
  - viewing your number 16, 62

- text 32
  - character chart 34
  - entering 30
  - entry method, selecting 31
  - entry method, setup 31
  - iTAP software predictive
    - text entry 35
  - numeric method 37
  - symbol chart 38
  - symbol method 38
  - tap method 32
- text case indicator 32
- text entry method
  - selecting 31
  - setup 31
- text entry method indicator 26, 32
- timers 77
- travel charger 11
- TTY device 63

## U

- unlock
  - application 81
  - phone 42
- unlock code
  - bypassing 44
  - changing 42
  - default 13, 42, 43, 44
  - entering 13, 43

- forgetting 44

## V

- vibrate alert
  - setting 40, 45
  - turning off 13, 15, 53
- vObject, defined 21
- voice dial 78
- voice dialing 66
  - Advanced Voice Dialing 69
- voice key
  - digit dialing 66
  - voice dialing 66
- voice record 81
- voicemail 59
- voicemail message indicator 26, 60
- volume
  - earpiece 13
  - keypad 73
  - ringer 13, 73
- volume keys 13

## W

- wallpaper 47
- Web pages 82
- Web sessions 82

U.S. patent Re. 34,976





**motorola.com**