



MOTOROLA

US EN

Accessory Handset for DECT 6.0 Cordless Phone

K3

Quick Start Guide

- 1** Getting started
- 2** Help
- 3** General Information

 
This quick start guide provides the information you need to get you started. If you need more detailed instructions, a full user's guide is available to download in PDF format from www.motorola.com.

Please consider the environment before printing.

Box Contents




Handset

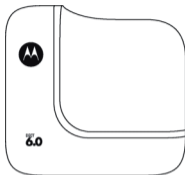

Charger



 Battery door



NiMH rechargeable
battery pack



Power adapter



Quick start
guide

 
The accessory handset can be registered as the extension of the Motorola K301, K302, K303 and K304 models.

IMPORTANT

Accessory handset only – requires a base unit to operate.

1 Getting started

Step 1. Connect the charger

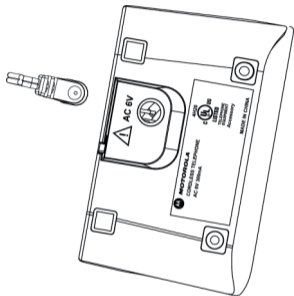

- Plug the power adapter pin into the charger.
- Plug the other end of the power adapter into the wall jack.
- Use only the provided power adapter.

 
TIPS


Do not place your phone in the bathroom or other humid areas.

IMPORTANT

Use only the power adapter supplied with the product.

Step 2. Install and charge the handset battery pack

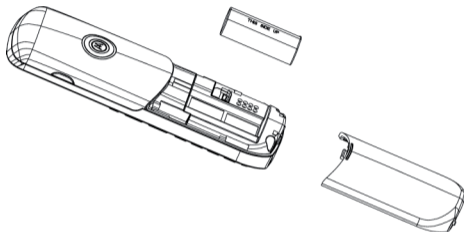








- Slide out the battery compartment cover. Place the supplied rechargeable battery pack in the battery compartment, with the battery connector plugged in, as shown.
- Slide the battery compartment cover back.
- Put the handset on the base to charge for at least 24 hours. When the handset is fully charged, the  will indicate that it is fully charged.

IMPORTANT


Use only the rechargeable battery pack provided.

Step 3. Set the display language

- Press  and  to select **SETUP HS.**
- Press  and  to select **LANGUAGE.**
- Press  and  to select the language.
- Press  to save.



Step 4. Registration

To work as the handset extension, the handset must be registered to the base of the listed Motorola models on page 2.

- Power on the handset, screen will show **NOT REGISTERED.**
- Press and hold  for 4 seconds on base and then release.
- Place the unregistered handset on the charger.
- A confirmation tone is generated if registration is successful. **HANDSET X REGISTERED** is displayed where **X** denotes the number of handsets and the phone goes back to idle.




Step 5. Set date and time

US EN

- Press  to select **DATE & TIME.**
- Press  and edit the year and date.

TIPS

You can press  to move between the input fields **YEAR** and **DATE.**

- Press  and edit the time in 12hr format. Press  to toggle **AM/PM** settings.
- Press  to save the settings.

2 Help

For more solutions, see the full Help section in the user's guide.

The icon is not scrolling when the handset is placed on the base

- Bad battery contact – move the handset slightly
- Dirty contact – clean the battery contact with a cloth moistened with alcohol
- Battery is full – no need to charge

No dial tone

- No base power - check the connections. Reset the phone: unplug and plug back in the electrical outlet.
- Handset batteries are empty - charge the battery pack for at least 24 hours.
- Handset may be too far from the base - move closer to the base.
- Wrong telephone line cord - use the telephone line cord provided.

Poor audio quality

- The base is too close to electrical appliances, reinforced concrete walls or metal doorframes - move the base away from any electrical appliances.

No ring tone

- The ring tone is deactivated.
- Increase the volume.

Caller ID does not work

- Check your subscription with your network operator.
- If you subscribe to high-speed internet service (Digital Subscriber Line – DSL) through your telephone lines, you must install a DSL filter between the telephone base and the

telephone wall jack. The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

A phonebook entry cannot be stored

- The phonebook is full. Delete an entry to free memory.

No display

- Try recharging or replacing the battery pack.
- Reset the base. Unplug the unit's electrical power, then plug it back in.
- If LED is not lit up, then try to unplug the unit's electrical power, then plug it back in.

When the handset lost its link with the base during a call

- Check the power cord is connected properly into the base.
- Check the power adapter is connected properly into an electrical outlet.
- Move the handset closer to the base. It may be out of range.
- Reset the base by unplugging the unit's electrical power. Wait for around 15 seconds and plug it back in again. Allow up to one minute for the handset and the base to synchronize.

Noise interference on your radio or television

- Your base or charger may be too close. Move it as far away as possible.

Need more help?

- For a full explanation of all features and instructions, please refer to the user's guide.

3 General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Visit our website: www.motorola.com
3. Contact Customer Service in the US and Canada at 1-888-331-3383.

To order a replacement battery contact customer service or visit our website.



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, and other Motorola trademarks and trade dress are owned by Motorola, Inc. and are used under license from Motorola, Inc. MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2009. All rights reserved.

Printed in China
Version 1.0