 


# HELLOMOTO

Introducing your new Motorola RAZR V3x 3G wireless phone. Here's a quick anatomy lesson.

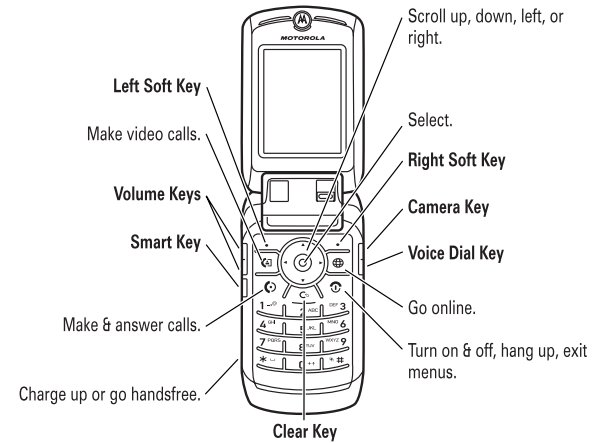

1

Home Screen



- 1 Press and hold the **Power Key** (⏻) for a few seconds or until the display lights up to turn on your phone.
- 2 Press the **Centre Key** (⬇️) to open the **Main Menu**.

Main Menu



- 3 Press the **Navigation Key up, down, left or right** (⬆️, ⬇️, ⬅️, ➡️) to highlight a menu feature.
- 4 Press the **Centre Key** in (⬇️) to select it.

2

[www.hellomoto.com](http://www.hellomoto.com)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their

proprietor and used by Motorola, Inc. under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

© Motorola, Inc., 2006.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

### Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any

3

copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the

consumer section of our Motorola web site, at <http://www.motorola.com>.

# contents

---

<b>calls</b> . . . . .	<b>59</b>	<b>SAR Data</b> . . . . .	<b>87</b>
turn off a call alert . . . . .	59	<b>WHO Information</b> . . . . .	<b>89</b>
recent calls . . . . .	59	<b>index</b> . . . . .	<b>90</b>
redial . . . . .	60		
return a call . . . . .	60		
caller ID . . . . .	61		
emergency calls . . . . .	61		
voicemail . . . . .	62		
<b>other features</b> . . . . .	<b>63</b>		
advanced calling . . . . .	63		
phonebook . . . . .	67		
messages . . . . .	71		
instant messaging . . . . .	74		
personalising . . . . .	76		
call times & costs . . . . .	78		
handsfree . . . . .	79		
data calls . . . . .	80		
network . . . . .	81		
personal organiser . . . . .	81		
security . . . . .	83		
fun & games . . . . .	83		

<b>menu map</b> . . . . .	<b>7</b>	<b>main attractions</b> . . . . .	<b>27</b>	<b>basics</b> . . . . .	<b>45</b>
<b>Safety Information</b> . . . . .	<b>9</b>	SCREEN3™ . . . . .	27	display . . . . .	45
<b>Use and Care</b> . . . . .	<b>18</b>	headlines . . . . .	27	text entry . . . . .	48
<b>EU Conformance</b> . . . . .	<b>19</b>	Bluetooth™ wireless . . . . .	29	volume . . . . .	51
<b>Recycling Information</b> . . . . .	<b>20</b>	audio player . . . . .	35	navigation key . . . . .	51
<b>essentials</b> . . . . .	<b>21</b>	take & send a photo . . . . .	36	smart key . . . . .	52
about this guide . . . . .	21	record & send a . . . . .		external display . . . . .	52
SIM card . . . . .	21	video . . . . .	38	handsfree speaker . . . . .	52
battery . . . . .	22	video calls . . . . .	39	codes & passwords . . . . .	52
turn it on & off . . . . .	24	memory card . . . . .	41	lock & unlock phone . . . . .	53
make a call . . . . .	25	cable connections . . . . .	44	<b>customise</b> . . . . .	<b>54</b>
answer a call . . . . .	25			ring style . . . . .	54
store a phone . . . . .				time & date . . . . .	55
number . . . . .	25			wallpaper . . . . .	55
call a stored phone . . . . .				screen saver . . . . .	56
number . . . . .	26			themes . . . . .	56
your phone number . . . . .	26			display appearance . . . . .	57
				answer options . . . . .	58

# menu map

## main menu

### Video Camera

### Tools

- USIM \*
- Calculator
- Datebook
- Alarm Clock
- Bar Code Reader
- Dialling Services
  - Fixed Dial \*
  - Service Dial \*
  - Quick Dial
- Activation List

### Camera

### Multimedia

- Themes
- Camera
- Pictures
- Sounds
- Videos
- Video Camera

### Web Access

- Browser
- My Bookmarks
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions \*

### Games & Apps

### Messages

- Create Message
- Voicemail
- Message Inbox
- Email Msgs
- Messenger \*
- Browser Msgs
- Info Services \*
- Outbox
- Drafts
- Templates
- Create Voice Message

### Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times \*
- Call Cost \*

### Phonebook

### Settings

- (see next page)

### Airplane Mode

- Airplane Mode
- Prompt At Power Up

\* optional features

This is the standard main menu layout. Your phone's menu may be a little different.

## settings menu

### Personalise

- Home Screen
- Main Menu
- Voice Dial Setup
- Skin
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial

### Ring Styles

- Style
- style Detail

### Connection

- Bluetooth™ Link
- Sync
- USB Settings

### Call Divert \*

- Voice Calls
- Video Calls
- Cancel All
- Divert Status

### In-Call Setup

- In-Call Timer
- Call Cost Setup \*
- My Caller ID
- Answer Options
- Call Waiting
- MSG Alert

### Initial Setup

- Time and Date
- Speed Dial
- Auto Redial
- Display Timeout
- Backlight
- Scroll
- Language
- Battery Save
- Brightness
- DTMF
- Live Video Share Service \*
- Master Reset
- Master Clear

### Phone Status

- My Tel. Numbers
- Credit Info/Available \*
- Active Line \*
- Battery Meter
- Download Location
- Storage Devices
- Voice Dial Languages
- Software Update \*
- Other Information

### Headset

- Auto Answer
- Ringer Options
- Voice Dial

\* optional features

### Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time

### Airplane Mode

- Airplane Mode
- Prompt At Power Up

### Network

- New Network
- Network Setup
- Available Networks
- My Network List \*
- Service Tone
- Call Drop Tone

### Security

- Phone Lock
- Lock Application
- Fixed Dial \*
- Call Barring \*
- SIM PIN
- New Passwords
- Certificate Mgmt \*

### Java™ Settings

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority \*
- App Backlight
- Set Standby App \*
- DNS IP \*

## Safety and General Information

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.<sup>1</sup>

### Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

### Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following instructions.

#### External Antenna Care

If your phone has an external antenna, use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone and/or may result in non-compliance with local regulatory requirements in your country.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed.

#### Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline phone.

#### Body-Worn Operation: Voice Communication

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting voice communications, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines.

If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 2.5 centimetres (1 inch) from your body when transmitting.

#### Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 2.5 centimetres (1 inch) from your body.

#### Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at [www.motorola.com](http://www.motorola.com).

### RF Energy Interference/Compatibility

**Note:** Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

**Note:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

#### Aircraft

Turn off your wireless device whenever instructed to do so by airline staff. If your device offers a flight mode or similar feature, consult airline staff about use in flight. If your device offers a feature that automatically turns on the phone, then turn off this feature before boarding an aeroplane or entering an area where the use of wireless devices is restricted.

#### Medical Devices

##### Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 centimetres (6 inches) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 15 centimetres (6 inches) from your pacemaker when the phone is turned ON.

- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

### Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your doctor may be able to assist you in obtaining this information.

### Damaged Products

If your phone or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorised Service Centre to determine if it has been damaged. Do not attempt to dry it with an external heat source, such as a microwave oven.

### Batteries and Chargers

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become hot. Take care when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

## Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.




When using your phone while driving, please:

- Give full attention to driving and to the road. Using a phone may be distracting in certain circumstances. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices can be found in the "Wireless Phone Safety Tips" at the end of this guide and/or at the Motorola website: [www.motorola.com/callsmart](http://www.motorola.com/callsmart).

**Caution:** To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

## Operational Warnings

### For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

### Gas or Petrol Stations

Obey all posted signs with respect to the use of radio equipment in gas or petrol stations. Turn off your wireless device if instructed by authorised staff.

## Choking Hazards

Your phone or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your phone and its accessories away from small children.

### Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre.

## Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

### Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

## Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone (the flashing-light feature is not available on all products).

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

## Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

## Repetitive Motion Injuries

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.

- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

1. The information provided in this document supersedes the general safety information in user's guides published prior to January 28, 2005.

## Use and Care

---

To care for your Motorola phone, please keep it away from:



### liquids of any kind

Do not expose your phone to water, rain, extreme humidity, sweat, or other moisture.



### extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



### microwaves

Do not try to dry your phone in a microwave oven.



### dust and dirt

Do not expose your phone to dust, dirt, sand, food, or other inappropriate materials.



### cleaning solutions

To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions.



### the ground

Do not drop your phone.

 
# European Union Directives Conformance Statement

---

**CE** Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte). To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

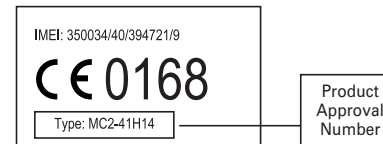

The above gives an example of a typical Product Approval Number.

## Caring for the Environment by Recycling

---



When you see this symbol on a Motorola product, do not dispose of the product with household waste.

## Recycling Mobile Phones and Accessories

 

---



Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.



## about this guide

This guide shows how to locate a menu feature as follows:

**Find it:**  >  **Messages** > **Create Message**

This example shows that, from the home screen, you press the *centre key*  to open the menu. Scroll to and select  **Messages**, then scroll to and select **Create Message**.

Press the *navigation key*  to scroll to a menu feature. Press the *centre key*  to select the highlighted menu feature.

symbols	
	This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.

 
## SIM card

**Caution:** Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries. It can also contain your voicemail, text message, and Internet access settings. If you put your SIM card in another phone, that phone uses your phone number.


To insert and use a **memory card**, see page 41.

**Turn off your phone and remove your battery before you install or remove a SIM card.**

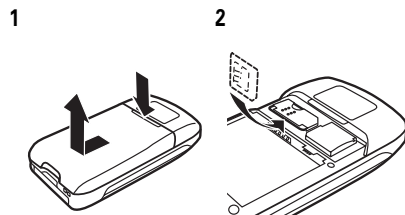


## battery
 
### battery installation

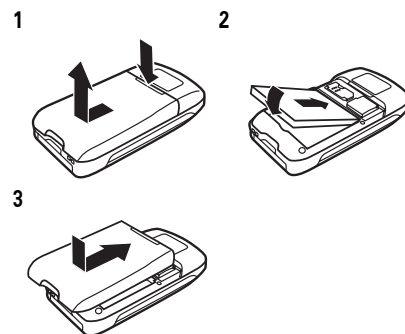

## battery charging

 New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. Your display shows **Charge Complete** when finished.

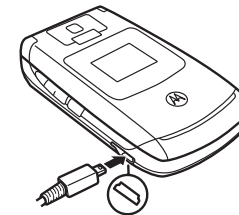

**Tip:** Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

The battery charger shipped with this device is designed for Motorola 3G mobile phones. Other chargers might take longer to charge your battery, or cause your calls to fail during charging.

## battery tips


Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.



When storing your battery, keep it uncharged in a cool, dark, dry place.

- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.


 Contact your local recycling centre for proper battery disposal.

 
**Warning:** Never dispose of batteries in a fire because they may explode.


Before using your phone, read the battery safety information in the “Safety and General Information” section included in this guide.

## turn it on & off


**Caution:** Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.


To turn on your phone, press and hold  for a few seconds or until the keypad or display lights up. If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code.



To turn off your phone, press and hold  for a few seconds.


## make a call


Enter a phone number and press  to make a call.

To “hang up,” close the flip or press .

To make video calls, see page 39.

## answer a call


When your phone rings and/or vibrates, just open the flip or press  to answer.

To “hang up,” close the flip or press .

 

## store a phone number



You can store a phone number in your **Phonebook**:

- 1 Enter a phone number in the home screen.



- 2 Press the **Store** key.  
Select **Create New Contact**, if necessary.
- 3 Enter a name and other details for the phone number. To select a highlighted item, press the *centre key* .
- 4 Press the **Done** key to store the number.

 To edit or delete a **Phonebook** entry, see page 68.

To store an email address from the home screen, press  >  **Phonebook** > **New Entry**. Enter the new contact’s name and **Email** information.


**Note:** Your phonebook can show you the entries stored in your phone’s memory or on your SIM card. To choose which entries you see, press  >  **Phonebook**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**.

## call a stored phone number



**Find it:**  >  **Phonebook**

- 1 Scroll to the phonebook entry.



**Shortcut:** In the phonebook, press keypad keys to enter the first letters of an entry you want.

- 2 Press  to call the entry.

## your phone number

From the home screen, press   to see your number.

**Tip:** Want to see your phone number while you’re on a call? Press **Options** > **My Tel. Numbers**.

You can edit the name and phone number stored on your SIM card. From the home screen, press  , select an entry, press the **View** key, press the **Options** key, and select **Edit**. If you don’t know your phone number, contact your service provider.




## main attractions


You can do much more with your phone than make and receive calls!


### SCREEN3™ headlines

 
A few minutes after you turn on your phone, headlines begin scrolling at the bottom of your home screen. These headlines give you news, sports, weather, and other information.

#### read headlines

To go to the next or previous headlines: *press*  right or left.

To go to the next or previous headline channels: *hold*  right or left.

To see the current headline's details: press the *centre key* . While viewing details:

- To go to the next or previous headline's details, press  right or left.
- If a full article is available, you can press the **More** key to see it.

#### change headline settings

In the home screen, press the **Options** key and select **Headlines** to open your headline options:

options	
<b>Headlines</b>	Turn headlines on or off.

options	
<b>Add New Channels</b>	Open a list of channel categories. To subscribe to a channel, select it from a category or select <b>Search Channels</b> to search for it.
<b>Manage My Channels</b>	Open a list of the channels to which you subscribe. Select a channel to see its details, see its licence information, cancel its subscription, or remove it from the list.  <b>Note:</b> If you cancel a subscription, the channel stays in this list until you remove it or the subscription period ends.

options	
<b>What Are Headlines?</b>	Show a description of the headline service.
<b>Home Keys</b>	Show or hide feature icons in your home screen, or change the features for the soft keys and navigation key in the home screen.
<b>Display</b>	Change headline animation speed, home screen clock appearance, and home screen text layout.
<b>Connections</b>	Change your settings for downloading headlines and see details of your last connection.  <b>Note:</b> To manually update your headline contents, select <b>Connection Details</b> , then <b>Refresh</b> .

### Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

**For maximum Bluetooth security**, you should always connect Bluetooth devices in a safe, private environment.

#### turn Bluetooth power on or off

**Find it:**  >  **Settings** > **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**

**Note:** To extend battery life, use this procedure to set Bluetooth power to **Off** when not in use. Your phone will not connect to devices until you set Bluetooth power back to **On** and connect your phone with the device again.


#### use a headset or handsfree car kit


**Before you try to connect your phone with a handsfree device**, make sure the device is **on** and **ready in pairing or bonding** mode (see the user's guide for the device).

**Find it:**  >  **Settings** > **Connection** > **Bluetooth Link** > **Audio Devices** > **[Look For Devices]**



Your phone lists the devices it finds within range.


- 1 Scroll to a device in the list and press the **centre key** .
- 2 Press the **Yes** or **OK** key to connect to the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press the **OK** key.

When your phone is connected, the Bluetooth indicator  shows in the home screen. You cannot play some copyrighted files over a Bluetooth connection.

**Shortcut:** When Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device or move it near the phone. During a call or while playing a sound file, you can press **Options** > **Use Bluetooth** to connect to a headset or handsfree device you have used before.

**30** main attractions

## send files to a printer

You can use a Bluetooth connection to send a picture, message, phonebook entry, or datebook view from your phone to a printer. 


**Note:** You cannot print message **Templates** or a phonebook **Mailing List**.

- 1 On your phone, scroll to the object that you want to print, then press **Options** > **Print**. In the datebook, you can print the month, week, or day.  
**Tip:** If you see it, you can print it. After you capture a picture in the camera, you can press the **Options** key and select **Print**.
- 2 If available, choose additional objects or print options.

**32** main attractions

**Tip:** Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

## copy files to another device

You can copy a media file, phonebook entry, datebook event, or Web shortcut from your phone to a computer or other device. 

**Note:** You can't copy some copyrighted objects.

**Before you try to copy files to another device,** make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device).



- 1 On your phone, scroll to the object that you want to copy to the other device.

- 3 Select a recognised printer name listed in the **Printers** menu, or **[Look For Devices]** to search for the printer where you want to print the object.


**Note:** If you see **Service Not Supported** when you try to print, select **Options** > **Manage** > **Copy** > **Bluetooth** instead. Always use this option to print 4x6 photos.


 


## advanced Bluetooth features

A device is *recognised* after you connect to it once (see page 29).


features	
<b>make phone visible to other device</b>	Allow a Bluetooth device to discover your phone:  >  <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Setup</b> > <b>Find Me</b> 

- 2 Press **Options**, then select:
  - **Manage** > **Copy** for media files.
  - **Send Contact** for phonebook entries.
  - **Send** for datebook events.
- 3 Select a recognised device name, or **[Look For Devices]** to search for the device where you want to copy the file.



**Note:** Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection. To change a device's **Access** setting, see page 34.

features	
<b>connect to recognised device</b>	Connect your phone to a recognised handsfree device:  >  <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Audio Devices</b> > <i>device name</i> 
<b>drop connection with headset or handsfree device</b>	Scroll to the device name and press the <b>Drop</b> key. 

## receive files from another device

**Before you try to receive files from another device,** make sure your phone's Bluetooth power is **on** (see page 29). 



- 1 Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognise each other, place your phone in discoverable mode so the sending device can locate it. Press  >  **Settings** > **Connection** > **Bluetooth Link** > **Find Me**.

- 2 Press the **Accept** key on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete. If necessary, press the **Save** key to save the file.

main attractions **31**

features	
<b>switch to headset or handsfree device during call</b>	During a call, press <b>Options</b> > <b>Use Bluetooth</b> to switch to a recognised headset or car kit.  Your phone connects automatically, or shows a list of devices you can select.
<b>play sound files on a recognised headset</b>	While playing a sound file, press <b>Options</b> > <b>Use Bluetooth</b> to switch to a recognised headset.  Your phone connects automatically, or shows a list of devices you can select. You cannot play some copyrighted files over a Bluetooth connection.

main attractions **33**

features	
<b>move multimedia object to device</b>	<b>Caution:</b> Moving an object deletes the original object from your phone. Scroll to the object, press <b>Options</b> > <b>Manage</b> > <b>Move</b> , select the device name.
<b>copy multimedia object to device</b>	Scroll to the object, press <b>Options</b> > <b>Manage</b> > <b>Copy</b> , select the device name.

features	
<b>edit device properties</b>	<ul style="list-style-type: none"> <li>• &gt; <b>Settings</b></li> <li>&gt; <b>Connection</b></li> <li>&gt; <b>Bluetooth Link</b></li> <li>&gt; <b>Device History</b></li> </ul> <p>Scroll to the device name and press the <b>centre key</b>.</p> <p><b>Note:</b> The <b>Access</b> setting can restrict how this device connects to your phone. You can choose <b>Automatic</b> (always connects), <b>Always Ask</b> (asks you before connecting), <b>Just Once</b>, <b>Never</b>, or <b>Custom</b>.</p>
<b>set Bluetooth options</b>	<ul style="list-style-type: none"> <li>• &gt; <b>Settings</b></li> <li>&gt; <b>Connection</b></li> <li>&gt; <b>Bluetooth Link</b> &gt; <b>Setup</b></li> </ul>

audio player controls in the external display	
<b>skip back</b>	Press the volume down key.
<b>rewind</b>	Hold the volume down key.
<b>close the controls</b>	Hold the smart key.

The controls close after five seconds if you don't use them.

## take & send a photo

**Focus:** You can use the focus switch to enhance focus for close-up pictures (⊕). Use the (⊖) setting for standard pictures.



To view, edit, or delete photos you've taken, see page 83.

Your camera lens is on the back of your phone.

1 Press **Options** on the right side of your phone to see the camera viewfinder.

Labels in the diagram include: Light, Lens, Timer, Camera Light (on or off), Remaining photos, Resolution, Storage (phone or memory card), Focus point, Zoom 1x, Options, Back, Camera Mode (photo or video), and Exit the camera.

Press **Options** up or down to view camera settings. Press left or right to change.

Open the camera menu.

## audio player

Your phone can play song files:

**Find it:** • > **Multimedia** > **Sounds** and select the file you want to play.

Press **Options** up to play or pause. Press **Options** down to stop. Press **Options** right or left to go forward or back.



To download songs to your phone, see page 84. To copy files between your phone and a computer, see page 42.

**Note:** Your phone may not play MP3 files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

**Tip:** You can listen to tunes on your way. Use *airplane mode* to make your phone safe to

use even while you're on a plane. See page 86.

## play music with your phone closed

You can close your phone while you listen to music. When your phone is closed, the external display shows the song artist, title, and time. Press the **volume keys** to adjust playback volume.

Press the **smart key** to show the audio player controls:

audio player controls in the external display	
<b>play or pause a track</b>	Press the smart key.
<b>skip forward</b>	Press the volume up key.
<b>fast-forward</b>	Hold the volume up key.

- 2 Press the **centre key** to take the photo in the viewfinder. You can:
  - Press the **Options** key to store or discard the photo.

If you press **Options** > **Print**, you can print the picture over a Bluetooth™ connection (see page 32).

  - Press the **Send** key to send the photo in a message.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
<b>Go To Pictures</b>	See stored pictures and photos.
<b>Go To Video Mode</b>	Switch to the video camera.

 
options	
<b>Internal View/ External View</b>	Switch to the camera facing you ( <b>Internal</b> ) or facing away from you ( <b>External</b> ).
<b>Light On/Off</b>	Turn the camera light on or off. <b>Note:</b> The light stays on until you take a picture, receive a phone call, or select <b>Light Off</b> .
<b>Auto-Timed Capture</b>	Set a timer for the camera to take a photo.
<b>Camera Setup</b>	Open the setup menu to adjust photo settings.
<b>Switch Storage Device</b>	Choose to store videos on your phone or a memory card.

options	
<b>Free Space</b>	See how much memory remains.  <b>Note:</b> Your service provider may store some content in user memory before you receive the phone.


## record & send a video

To view, edit, or delete videos you've recorded, see page 84.

Your camera lens is on the back of your phone.



 Press **Options** > **Video Camera** to see the video viewfinder.

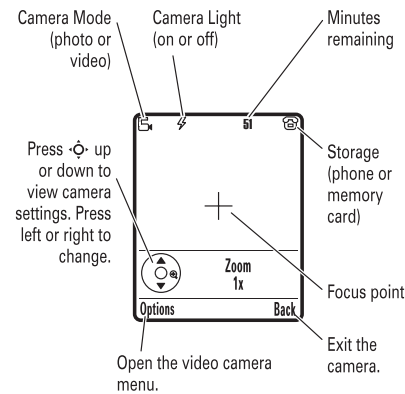

**Note:** The number of minutes remaining is an estimate.

### 38 main attractions

- If you accept another **incoming voice call**, your phone changes this video call to a voice call.
- If you accept another **incoming video call**, your phone ends this video call.

3 To end the call, press **End Call**.

**Tip:** Want to add video during a call? Press **Options** > **Share Live Video** during a voice call to make it a video call.

## record a video call

**Note:** Recording of phone calls is subject to varying Laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.

You can record a video call as a video clip. During a video call:

- 1 Press the **camera key** on the right side of your phone to start recording the call. Your phone displays **Recording**. It records incoming video and incoming and outgoing audio.
- 2 Press **camera key** again to stop recording the call and store the video clip.

The recording stops automatically if the call ends or you reach your video capture or memory limit.

To view the video clip from the home screen, press **Options** > **Multimedia** > **Videos** > *video name*.

**Note:** Video recording requires video compatibility with the other caller's video phone.

### 40 main attractions

If you want to send your video in a message, the video length must be set to **MMS**. To set length, press **Options** > **Video Camera Setup** > **Video Length**.

- 1 Press the **center key** to start recording the video in the viewfinder.
- 2 Press the **Stop** key to stop recording the video. You can:

- Press the **Options** key to preview, store, or discard the video.

To play a stored video from the home screen, press **Options** > **Multimedia** > **Videos** > *video name*.

- Press the **Send** key to send the video in a message.

Enter text and press **Send To**, then scroll to a recipient address and press the **center key** to select it. Press the **Options** key to enter a new number. To send the message, press the **Send** key.

## video calls

If you call someone else who has a 3G video phone, you can see each other while you talk. If your phone is roaming on a **non-3G network**, video calls will not work (see the Roam indicator on page 46).

**Note:** Your phone's external **camera light** blinks during a video call, to let people around you know that they might be in your video.

## make a video call

1 Enter a phone number and press **Call** to see the video call preview.

2 Press **Call** to make the call.

During the call:

- Press the **Stop Video** key to change the call to a voice call with the speakerphone on.

### main attractions 39

## turn video calling on or off

If you turn off video calling, your phone will not accept video calls.

**Find it:** **Options** > **Settings** > **Initial Setup** > **Live Video Share Service** > **On or Off**

After you change this setting, turn your phone off and back on to complete the change.

 
## memory card

You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).

**Note:** If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

## install a memory card

- 1 Remove the battery door.
- 2 Push the card into the metal holder until it clicks into place.

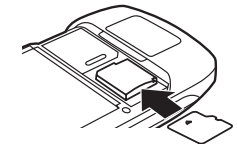

**To remove the memory card**, push it in until it clicks again. It begins to slide out, and you can slide it the rest of the way out.

3 Replace the battery door.

### main attractions 41

## see and change memory card information

To see the **files stored on your memory card** and on your phone, open a file list such as **Pictures** (see page 83). Icons can indicate if a file is stored in your phone memory (📁) or on your memory card (📁). To copy or move a file from your phone to your memory card, highlight it in the list and press and press **Options > Manage > Copy** or **Move > Memory Card**. You cannot copy or move some copyrighted files.

To see your **memory card name** and other information about the card:

**Find it:** ⏏ > ⚙ **Settings > Phone Status > Storage Devices**

- 1 Press ⏏ to scroll to the memory card that is installed.

- 2 Press the *centre key* ⏏ to see the memory card information. Your phone stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

or

Press **Options** to see the **Storage Device menu**, which lets you **Format** or **Rename** the memory card.

## connect the memory card to a computer

You can access your phone's memory card with a PC.

**Note:** When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Press ⏏ > ⚙ **Settings > Connection > USB Settings > Default Connection > Memory Card**.

This directs the USB connection to your memory card. Attach the Motorola Original USB cable to the accessory port on your phone and to an available USB port on your computer. Then follow these steps:



On your computer:

- 1 Open your "My Computer" window, where your phone's memory card shows as a "Removable Disk" icon.
- 2 Click on the "Removable Disk" icon to access the files on your phone's memory card.

- 3 To store the desired files onto the memory card, drag and drop them as follows:

**MP3 or AAC files:** > mobile > audio  
**screen savers:** > mobile > picture  
**wallpapers:** > mobile > picture  
**video clips:** > mobile > video

 
- 4 When you finish, remove the device by selecting the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen. Then select "USB Mass Storage Devices" and "Stop".
- 5 Select "USB Mass Storage Device" then "OK".

On your phone:

To return to **Data** as your USB default connection, press ⏏ > ⚙ **Settings > Connection > USB Settings > Default Connection > Data Connection**.

## cable connections

ⓘ Your phone has a mini-USB port so you can connect it to a computer to transfer data.

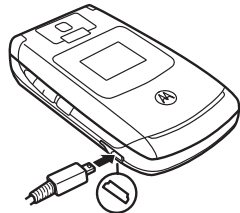

**Note:** Motorola Original USB data cables and supporting software may be sold separately. Check your computer or hand-held device to determine the type of cable you need. To make **data calls** through a connected computer, see page 80.




# basics

 See page 1 for a basic phone diagram.

## display

The *home screen* shows when you turn on the phone.

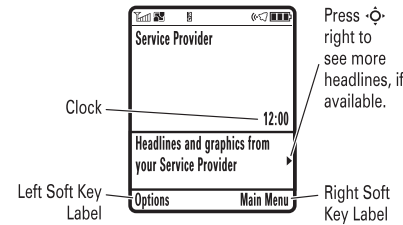


**Note:** Depending on your service provider, your home screen might look different from the one shown. It might show headlines from your service provider at the bottom. To change this headline view, press the **Options** key in your home screen and select **Headlines**.

To dial a number from the home screen, press number keys and **[\*]**.

Press the *centre key* **[C]** to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

 Status indicators can show at the top of the home screen:

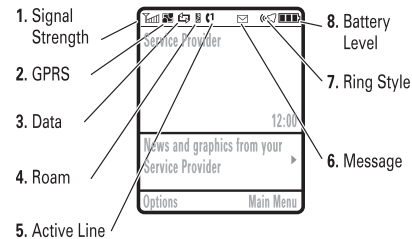

- Signal Strength Indicator** – Vertical bars show the strength of the network connection. You can't make or receive calls when **[Y]** or **[Y0]** shows.
- GPRS Indicator** – Shows when your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. Indicators show PDP context active **[M]** or packet data available **[M]**.

- Data Indicator** – Shows connection status.

- |   |  |
|---|--|
| <b>[S]</b> = secure packet data transfer                  | <b>[U]</b> = unsecure packet data transfer   |
| <b>[A]</b> = secure application connection                | <b>[U]</b> = unsecure application connection |
| <b>[C]</b> = secure <i>Circuit Switch Data</i> (CSD) call | <b>[U]</b> = unsecure CSD call               |
| <b>[B]</b> = Bluetooth™ connection is active              |  |

- Roam Indicator** – Shows when your phone is seeking or using a network outside your home network. Indicators can include:

- |                        |                        |
|------------------------|------------------------|
| <b>[H]</b> = 2G home   | <b>[R]</b> = 2G roam   |
| <b>[H]</b> = 2.5G home | <b>[R]</b> = 2.5G roam |
| <b>[H]</b> = 3G home   | <b>[R]</b> = 3G roam   |

- Active Line Indicator** – Shows **[1]** to indicate an active call, or **[2]** to indicate when call diverting is on. Indicators for dual-line-enabled SIM cards can include:

- |                            |  |
|----------------------------|--|
| <b>[1]</b> = line 1 active | <b>[1]</b> = line 1 active, call divert on |
| <b>[2]</b> = line 2 active | <b>[2]</b> = line 2 active, call divert on |

When an alarm is activated, **[A]** can show here.

- Message Indicator** – Shows when you receive a new message. Indicators can include:

- |                           |                            |
|---------------------------|----------------------------|
| <b>[M]</b> = text message | <b>[V]</b> = voice message |
| <b>[I]</b> = IM message   |                            |


- Ring Style Indicator** – Shows the ring style setting.

- |                        |                                   |
|------------------------|-----------------------------------|
| <b>[L]</b> = loud ring | <b>[V&amp;R]</b> = vibrate & ring |
| <b>[S]</b> = soft ring | <b>[0]</b> = silent               |
| <b>[V]</b> = vibrate   |                                   |

- Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

## text entry

 Some features let you enter text.

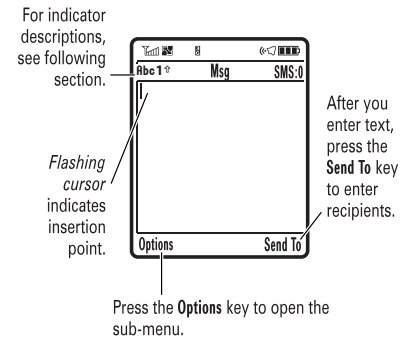

Press **#** in a text entry view to select an entry mode:

entry modes	
<b>1</b> or <b>[1]</b>	Your <b>Primary</b> text entry mode can be set to any iTAP™ <b>[1]</b> or tap <b>1</b> mode.
<b>2</b> or <b>[2]</b>	Your <b>Secondary</b> text entry mode can be set to any iTAP™ <b>[2]</b> or tap <b>2</b> mode, or set to <b>None</b> if you don't want a secondary entry mode.
<b>123</b>	<b>Numeric</b> mode enters numbers only.
<b>@%</b>	<b>Symbol</b> mode enters symbols only.

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Setup** or **Secondary Setup**.

**Tip: WANT TO SHOUT YOUR MESSAGE?** Press **[0]** in a text entry view to change text case to all capital letters (**ABC**), no capitals (**abc**), or next letter capital (**Abc**).

## 48 basics

- Press **[1]** to enter punctuation or other characters.

 
**Tip:** Don't worry if you forget how iTAP works. In a text entry display, you can press **Options > Text Setup > Text Tutorial** to see an explanation.

## tap and tap extended modes

Press **#** in a text entry view to switch to tap mode. If you don't see **Abc1** or **Abc2**, press **Options > Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **Tap** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. The **Tap Extended** mode works the same way, but includes more special characters and symbols.

For example, if you press **[7]** one time, your display shows:

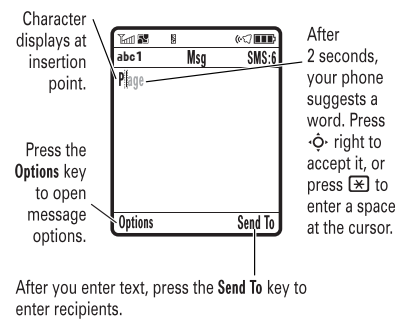

- The first character of every sentence is capitalised. If necessary, press **[7]** down to change the character to lowercase before the cursor moves to the next position.


## 50 basics
 
## iTAP™ mode

Press **#** in a text entry view to switch to iTAP mode. If you don't see **[1]** or **[2]**, press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words, and predicts each word as you enter it.

For example, if you press **[7] [7] [6] [4]**, your display shows:

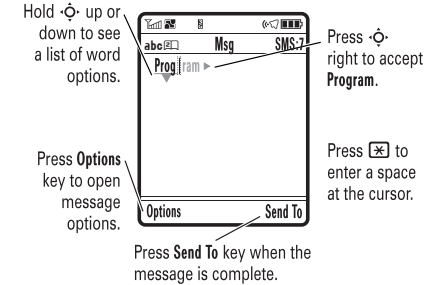

- If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.

## basics 49

- Press **[7]** to move the flashing cursor to enter or edit message text.
- To cancel your message, press **[0]**.

## numeric mode

Press **#** in a text entry view until you see **123**. Press the number keys to enter the numbers you want.

## symbol mode

Press **#** in a text entry view until your phone shows a list of symbols. Scroll to the symbol you want, then press the **centre key** **[7]**.

## volume

Press the volume keys to:

- turn off an incoming call alert

 


- change the earpiece volume during calls
- change the ringer volume from the home screen

**Tip:** Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Silent** or back by holding **#** in the home screen.



## navigation key

Press the **navigation key** **[7]** up, down, left, or right to scroll to items in the display. When you scroll to something, press the **centre key** **[7]** to select it.



## basics 51

## smart key

The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the *centre key* ). The smart key usually does the same thing as pressing the *centre key* . To find the smart key, see page 1. To change what the smart key does in the home screen, see page 77.

## external display

When you close your phone, the external display shows the date, status indicators, and notifications for incoming calls and other events. For a list of phone status indicators, see page 46.

## handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **Options** key and select **Speakerphone On** to turn the handsfree speaker on. Your display shows **Speakerphone On** until you turn it off or end the call.


**Note:** The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

## codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

**Find it:**  >  **Settings** > **Security** > **New Passwords**

You can also change your **SIM PIN** or call barring passwords.



**If you forget your unlock code:** At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your six-digit security code instead.


 
**If you forget other codes:** If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

## lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:

Press  >  **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  >  **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

**Note:** You can make emergency calls on a locked phone (see page 61). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

## ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

🔊 Loud   📳 Vibrate   🔇 Silent  
 📶 Soft   📳 Vibe & Ring

The ring style profile's indicator shows at the top of your home screen. To choose your profile:

**Find it:** > Settings > Ring Styles  
 > **Style:** *style name*

options	
<b>Picture</b>	Press  up or down to select a picture, or select <b>None</b> for no wallpaper.
<b>Layout</b>	Select <b>Centre</b> to centre the image in the display, <b>Tile</b> to repeat the image across the display, or <b>Fit-to-screen</b> to stretch the image across the display.

## screen saver

Set a photo, picture, or animation as a screen saver. The screen saver shows when the flip is open and no activity is detected for a specified time.

**Note:** Your *theme* can set your screen saver (page 56).

**Shortcut:** In the **home screen**, press the volume keys up or down to quickly change your ring style profile. With your **phone closed**, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change.

**Tip:** Do you get a lot of text messages? If you don't want to hear incoming message alerts during phone calls, press > Settings > **In-Call Setup** > **MSG Alert** > **Not in Call**.

## change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

**Find it:** > Settings > Ring Styles  
 > *style Detail*

**Tip:** This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

**Find it:** > Settings > Personalise  
 > Screen Saver

options	
<b>Picture</b>	Press  up or down to select a picture or animation, or select <b>None</b> for no screen saver.
<b>Delay</b>	Select the length of inactivity before the screen saver shows.

## themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more.

**Note:** *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Scroll to the alert you want, then press the *centre key* .
- 3 Press the **Back** key to save the alert setting.

## time & date

Your phone needs the time and date for the datebook.

To **synchronise** the time and date with the network: Press > Settings > **Initial Setup** > **Time and Date** > **Autoupdate** > **On**.

To **manually** set the time and date, turn off **Autoupdate**, then: Press > Settings > **Initial Setup** > **Time and Date** > *time* or *date*.

To **apply** a theme, press > Multimedia > **Themes** > *theme*.

To **download** a theme, see page 84.

To **delete** a theme, press > Multimedia > **Themes**, scroll to the theme, and press **Options** > **Delete** or **Delete All**.

**Note:** You can delete only downloaded themes.

## display appearance

**Note:** The **Battery Save** feature tells your phone not to light the display or keypad unless you're in a dark place. To turn on this feature, press > Settings > **Initial Setup** > **Battery Save** > **On**.

To choose a phone **skin** that sets the look and feel of your phone's display: Press > Settings > **Personalise** > **Skin**. Your *theme* can set your phone skin (page 56).

To choose an **analogue or digital** clock for your home screen, press > Settings > **Personalise** > **Home Screen** > **Clock**.

**Note:** If your home screen shows headlines from your service provider, it uses a digital clock. To choose an analogue clock, you must turn off the headlines. Press the **Options** key in your home screen and select **Headlines**.

## wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

**Note:** Your *theme* can set your wallpaper (page 56).

**Find it:** > Settings > Personalise  
 > Wallpaper

To set your display **brightness**: Press > Settings > **Initial Setup** > **Brightness**.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns back on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press > Settings > **Initial Setup** > **Backlight**.

**Note:** To turn the backlight on or off for Java™ applications, press > Settings > **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press > Settings > **Initial Setup** > **Display Timeout**.

## answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

**Find it:**  >  **Settings** > **In-Call Setup**  
> **Answer Options**

options	
<b>Multi-Key</b>	Answer by pressing any key.
<b>Open to Answer</b>	Answer by opening the flip.

# calls


To make and answer calls, see page 25.

## turn off a call alert


You can press the volume keys to turn off a call alert before answering the call.



## recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

**Shortcut:** Press  from the home screen to see a list of recent calls.

**Find it:**  >  **Recent Calls** > **Received Calls** or **Dialled Calls**

Scroll to a call. A  next to a call means the call connected.


 
- To call the number, press .
- To see call details (like time and date), press the *centre key* .
- To see the **Last Calls Menu**, press **Options**. This menu can include:




options	
<b>Store</b>	Create a phonebook entry with the number in the <b>No.</b> field. <b>Store</b> does not appear if the number is already stored.

calls **59**

options	
<b>Delete</b>	Delete the entry.
<b>Delete All</b>	Delete all entries in the list.
<b>Hide ID/Show ID</b>	Hide or show your caller ID for the next call.
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from the phonebook or recent calls lists.
<b>Send Tones</b>	Send the number to the network as DTMF tones.  This option shows only during a call.

## redial

 
- 1 Press  from the home screen to see a list of recent calls.
- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal** and you see  **Call Failed**, you can press  or the **Retry**  key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.


## return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press the **View** key to see the received calls list.

- 2 Scroll to the call you want to return, then press .

## caller ID

*Calling line identification* (caller ID)  shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.


You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 68).

To show or hide **your phone number** from the next person you call, enter the phone number and press **Options** > **Hide ID/Show ID**.

## emergency calls

Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.


- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

## voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



**Note:** Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:

**Find it:**  >  **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

**Note:** You can't do the following: **Insert Pause** (pause), **Insert Wait** (wait), or **Insert 'n'** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.

## other features

### advanced calling

features
<b>notepad</b>
The last number you entered is stored in the <i>notepad</i> . You can use the notepad to “jot down” a number during a call for later use. To see the notepad: Press  > <b>Recent Calls</b> > <b>Notepad</b> .
<ul style="list-style-type: none"><li>To call the number, press .</li><li>To create a phonebook entry with the number in the <b>No.</b> field, press the <b>Store</b> key.</li><li>To open the <b>Dialling Menu</b> to attach a number or insert a special character, press <b>Options</b>.</li></ul>









features
<b>international calls</b>
If your phone service includes international dialling, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.
<b>hold a call</b>
Press <b>Options</b> > <b>Hold</b> to put all active calls on hold.
<b>mute a call</b>
Press the <b>Mute</b> key (if available) or <b>Options</b> > <b>Mute</b> to put all active calls on mute.






features
<b>voice dial a number not stored in the phonebook (digit dial)</b>
Press and release the voice key  on the right side of your phone.
When prompted, say “ <b>digit dial</b> ” (within two seconds). When prompted again, say the digits you want to dial (within two seconds per digit).
Your phone recognises the digits you want to dial. To voice dial a phonebook entry, see page 67.

features
<b>call waiting</b>
When you're on a call, you'll hear an alert if you receive a second call. Press  to answer the new call.
<ul style="list-style-type: none"><li>To switch between calls, press the <b>Switch</b> key.</li><li>To connect the two calls, press the <b>Link</b> key.</li><li>To end the call on hold, press <b>Options</b> &gt; <b>End Call On Hold</b>.</li></ul>
To turn the call waiting feature on or off, press  > <b>Settings</b> > <b>In-Call Setup</b> > <b>Call Waiting</b> > <b>On</b> or <b>Off</b> .
<b>conference call</b>
During a call: Dial next number, press , press the <b>Link</b> key.

features
<b>attach a phone number</b>
Dial an area code or prefix for a phonebook number, then press <b>Options</b> > <b>Attach Number</b> .

 
 
 

 
features
<b>transfer a call</b>
During a call: <b>Options</b> > <b>Transfer</b> , dial transfer number, press .
<b>call diverting</b>
Set up or cancel call diverting: > <b>Settings</b> > <b>Call Divert</b>
You can set how long your phone waits before it diverts a call ( <b>5</b> , <b>10</b> , <b>15</b> , <b>20</b> , or <b>25</b> seconds).
<b>call barring</b>
Restrict outgoing or incoming calls: > <b>Settings</b> > <b>Security</b> > <b>Call Barring</b>





features
<p><b>fixed dial</b> </p> <p>When you turn on fixed dialling, you can call only numbers stored in the fixed dial list.</p> <p>Turn fixed dialling on or off:</p> <p> &gt;  <b>Settings</b> &gt; <b>Security</b> &gt; <b>Fixed Dial</b></p> <p>Use the fixed dial list:</p> <p> &gt;  <b>Tools</b> &gt; <b>Dialling Services</b> &gt; <b>Fixed Dial</b></p>
<p><b>service dial</b> </p> <p>Your service provider might give you phone numbers for taxi companies or other services. These phone numbers are stored on your SIM card. To see them:</p> <p> &gt;  <b>Tools</b> &gt; <b>Dialling Services</b> &gt; <b>Service Dial</b></p>





features
<p><b>quick dial</b> </p> <p>Dial preprogrammed phone numbers:</p> <p> &gt;  <b>Tools</b> &gt; <b>Dialling Services</b> &gt; <b>Quick Dial</b></p>
<p><b>DTMF tones</b></p> <p>Activate DTMF tones:</p> <p> &gt;  <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>DTMF</b></p> <p>To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press <b>Options</b> &gt; <b>Send Tones</b>.</p>





## phonebook



 
 




features
<p><b>voice dial a phonebook entry (name dial)</b></p> <p>Voice dial a number stored in the phonebook:</p> <p>Press and release the voice key.</p> <p>When prompted, say “<b>name dial</b>” (within two seconds). When prompted again, say the entry’s name (within two seconds).</p> <p>Your phone matches your voice to a phonebook entry name. To voice dial a number not stored in the phonebook, see page 63.</p>

features
<p><b>speed dial a phonebook entry</b></p> <p>You can assign the keys  to  to phonebook entries. Then, when you press and hold a key, your phone calls the entry.</p> <p><b>Note:</b> Your service provider might have assigned some keys, such as  for your voicemail number. You can only speed dial phonebook entries that are stored on your phone (not on your SIM card).</p> <p>To <b>assign a speed dial key</b>, press  &gt;  <b>Phonebook</b> and scroll to the phonebook entry. Then, press <b>Options</b> &gt; <b>Add to Speed Dial</b> and pick a speed dial key.</p> <p>To <b>use a speed dial key</b>, just press and hold the key in your home screen.</p>

features
<p><b>edit or delete a phonebook entry</b></p> <p>Edit a number stored in the phonebook:</p> <p> &gt;  <b>Phonebook</b>, scroll to the phonebook entry, and press <b>Options</b>. You can select <b>Edit Contact</b>, <b>Delete</b>, or other options.</p> <p><b>Shortcut:</b> In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press  and  to see the entries you use frequently, or entries in other categories.</p>



features
<p><b>set ringer ID for a phonebook entry</b></p> <p>Assign a ring alert (ringer ID) to an entry:</p> <p> &gt;  <b>Phonebook</b> &gt; <i>entry</i>, then press <b>Options</b> &gt; <b>Edit Contact</b> &gt; <b>Ringer ID</b> &gt; <i>ringer name</i></p> <p><b>Note:</b> The <b>Ringer ID</b> option isn’t available for entries stored on the SIM card.</p> <p>Activate ringer IDs:</p> <p> &gt;  <b>Settings</b> &gt; <b>Ring Styles</b> &gt; <i>style Detail</i> &gt; <b>Ringer IDs</b></p>

 features
<p><b>set picture ID for a phonebook entry</b></p> <p>Assign a photo or picture to show when you receive a call from an entry:</p> <p> &gt;  <b>Phonebook</b> &gt; <i>entry</i>, then press <b>Options</b> &gt; <b>Edit Contact</b> &gt; <b>Picture</b> &gt; <i>picture name</i></p> <p><b>Note:</b> The <b>Picture</b> option isn’t available for entries stored on the SIM card.</p>
<p><b>set picture ID view for phonebook</b></p> <p>Show entries as a text list, or with picture caller ID photos:</p> <p> &gt;  <b>Phonebook</b>, then press <b>Options</b> &gt; <b>Setup</b> &gt; <b>View by</b> &gt; <i>view name</i></p>

features
<p><b>set category for a phonebook entry</b></p> <p> &gt;  <b>Phonebook</b> &gt; <i>entry</i>, then press <b>Options</b> &gt; <b>Edit Contact</b> &gt; <b>Category</b> &gt; <i>category name</i></p> <p><b>Note:</b> The <b>Category</b> option isn’t available for entries stored on the SIM card.</p> <p>When you open your phonebook, press  or  to see your categories.</p>
<p><b>set category view for phonebook</b></p> <p> &gt;  <b>Phonebook</b>, then press <b>Options</b> &gt; <b>Filter by</b> &gt; <b>Category</b> &gt; <i>category name</i></p> <p>You can show all entries, entries in a predefined category, or entries in a category you create.</p> <p><b>Shortcut:</b> When you open your phonebook, press  or  to see your categories.</p>


features
<p><b>create group mailing list</b></p> <p>You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:</p> <p>☛ &gt; ☑ Phonebook, then press <b>Options &gt; Create New &gt; Message List</b></p> <p>You can select the list name as an address for multimedia messages.</p> <p><b>Note:</b> A <b>Message List</b> cannot include entries stored on the SIM card.</p>
<p><b>sort phonebook list</b></p> <p>Set the order in which entries are listed:</p> <p>☛ &gt; ☑ Phonebook, then press <b>Options &gt; Setup &gt; Sort by &gt; sort order</b></p> <p>You can sort the phonebook list by <b>First Name</b> or <b>Last Name</b>.</p>


70 other features—phonebook



features
<p><b>send email</b> </p> <p>☛ &gt; ☑ Messages &gt; Email Msgs &gt; <b>Create Email</b></p> <p><b>Note:</b> To use email, you might need to enter a <b>User ID</b> and <b>Password</b> in your email settings (see page 74).</p>
<p><b>send voice message</b> </p> <p>☛ &gt; ☑ Messages, then press <b>Options &gt; Create Voice Message</b></p> <p>To record the voice message, press the <b>Record</b> key, speak, then press the <b>Stop</b> key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.</p>

72 other features—messages

features
<p><b>copy one phonebook entry</b></p> <p>Copy an entry from the phone to the SIM card, or from the SIM card to the phone:</p> <p>☛ &gt; ☑ Phonebook, scroll to the entry, press <b>Options &gt; Copy to SIM Card</b> or <b>Copy to Phone</b></p>
<p><b>copy multiple phonebook entries</b></p> <p>Copy multiple phonebook entries between the phone and SIM card:</p> <p>☛ &gt; ☑ Phonebook, scroll to one entry, press <b>Options &gt; Select Multiple to</b>, then select <b>Copy to SIM Card</b> or <b>Copy to Phone</b></p>


features
<p><b>read and manage messages</b> </p> <p>☛ &gt; ☑ Messages &gt; <b>Message Inbox</b></p> <p>Icons next to each message indicate if it is read ☑ or unread ☐. Icons can also indicate if the message is locked 🔒, urgent !, or low priority ↓, or if it has an attachment 📎.</p> <p>To <b>Reply, Forward, Lock, or Delete</b> a message, scroll to it and press <b>Options</b>.</p> <p>To open a message, press ☛. Then, you can press <b>Options</b> to use or store any phone numbers, email addresses, Web sites, or files in the message.</p>

features
<p><b>send phonebook entry to another device</b></p> <p>Send a phonebook entry to another phone, computer, or device:</p> <p>☛ &gt; ☑ Phonebook, scroll to the entry, press <b>Options &gt; Send Contact</b></p> <p>For more information about copying files to another device, see page 30.</p>
<p><b>print phonebook entry over Bluetooth™ connection</b> </p> <p>You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer.</p> <p>☛ &gt; ☑ Phonebook</p> <p>Scroll to the entry you want to print, and press <b>Options &gt; Select Multiple to &gt; Print</b>.</p> <p>You cannot print a <b>Mailing List</b>. For more about Bluetooth connections, see page 29.</p>


features
<p><b>read and manage email</b> </p> <p>☛ &gt; ☑ Messages &gt; <b>Email Msgs</b></p> <p>To <b>Reply, Forward, Lock, or Delete</b> a message, scroll to it and press <b>Options</b>.</p> <p>To open a message, press ☛. Then, you can press <b>Options</b> to use or store any phone numbers, email addresses, Web sites, or files in the message.</p>
<p><b>store message objects</b> </p> <p>Go to a multimedia message page, or scroll to an object in a message, then:</p> <p><b>Options &gt; Store</b></p>

## messages


Your phone reads message settings from the USIM card. If you put another USIM card in your phone, your phone sends and receives messages for the phone number on the new card.



features
<p><b>send text message</b> </p> <p>☛ &gt; ☑ Messages &gt; <b>Create Message</b></p> <p><b>Tip:</b> Want to make a message more fun? While composing a message, you can press ☑ on the right side of your phone to open the camera viewfinder, snap a photo, and insert it. Press and hold ☑ to open the video viewfinder.</p>

other features—messages 71

features
<p><b>print message over Bluetooth™ connection</b> </p> <p>You can use a Bluetooth wireless connection to send a message from your phone to a printer.</p> <p>☛ &gt; ☑ Messages &gt; <b>Message Inbox, Email Msgs, Outbox, or Drafts</b></p> <p>Scroll to the message you want to print and press <b>Options &gt; Print</b>.</p> <p>You cannot print message <b>Templates</b>. For more about Bluetooth connections, see page 29.</p>





other features—messages 73




features
<b>edit email settings</b>  <p>You can edit the settings for your Email connections. To use email, you need to store your email <b>User ID</b> and <b>Password</b>.</p> <p>☛ &gt; ✉ <b>Messages</b>, then press <b>Options</b> &gt; <b>Email Msg Setup</b> &gt; <b>Account Settings</b></p> <p>If you have more than one email account, select an account to edit.</p> <p>Your phone shows a list of email settings. Here is where you store your email <b>User ID</b> and <b>Password</b>.</p> <p><b>Note:</b> To create a new account, select <b>New Entry</b> in the <b>Account Settings</b> list. Your display shows a folder for each email account under ☛ &gt; ✉ <b>Messages</b> &gt; <b>Email Msgs</b></p>

features
<b>browser messages</b>  <p>Read messages received by your micro-browser:</p> <p>☛ &gt; ✉ <b>Messages</b> &gt; <b>Browser Msgs</b></p>
<b>info services</b>  <p>Read subscription-based information services messages:</p> <p>☛ &gt; ✉ <b>Messages</b> &gt; <b>Info Services</b></p>

## instant messaging


features
<b>log in</b>  <p>☛ &gt; 🗨 <b>IM</b> &gt; <b>Log In</b></p>


features
<b>add contacts</b>  <p>After you log in:</p> <p>Press <b>Options</b> &gt; <b>Add Contact</b> and enter the contact's name, mobile number, IM ID, and alias.</p>
<b>find others online</b>  <p>After you log in:</p> <p>Select <b>Online Contacts</b> to see a list of others online.</p>
<b>start conversation</b>  <p>Scroll to a name in <b>Online Contacts</b> and press the <b>Send IM</b> key.</p>
<b>open active conversation</b>  <p>Scroll to a name in <b>Conversations</b> and press the <b>Select</b> key.</p>


features
<b>insert items during a conversation</b> <p>From the conversation view:</p> <p><b>Options</b> &gt; <b>Insert</b></p> <p>You can insert an <b>Emoticon</b>, <b>Quick IM</b> (such as <b>Are you there?</b>), or <b>Contact Info</b> (selected from your phonebook).</p>
<b>end conversation</b>  <p>From the conversation view:</p> <p><b>Options</b> &gt; <b>End Conversation</b></p>
<b>log out</b>  <p>Select <b>Log Out</b> from the <b>IM Online</b> menu.</p>
<b>create or change IM accounts</b>  <p>☛ &gt; 🗨 <b>IM</b> &gt; <b>IM Account</b></p> <p>Select an IM account, or select <b>New</b> to create a new IM account.</p>

## personalising

features
<b>language</b> <p>Set menu language:</p> <p>☛ &gt; ⚙ <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>Language</b></p>
<b>scroll</b> <p>Set the scroll bar to <b>Up/Down</b> or <b>Wrap Around</b> in menu lists:</p> <p>☛ &gt; ⚙ <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>Scroll</b></p>
<b>activate ringer IDs</b> <p>Activate ringer IDs assigned to phonebook entries and categories:</p> <p>☛ &gt; ⚙ <b>Settings</b> &gt; <b>Ring Styles</b> &gt; <i>style</i> <b>Detail</b> &gt; <b>Ringer IDs</b></p>
<b>ring volume</b> <p>☛ &gt; ⚙ <b>Settings</b> &gt; <b>Ring Styles</b> &gt; <i>style</i> <b>Detail</b> &gt; <b>Ring Volume</b></p>

features
<b>keypad volume</b> <p>☛ &gt; ⚙ <b>Settings</b> &gt; <b>Ring Styles</b> &gt; <i>style</i> <b>Detail</b> &gt; <b>Key Volume</b></p>
<b>reminders</b> <p>Set reminder alerts for messages that you receive:</p> <p>☛ &gt; ⚙ <b>Settings</b> &gt; <b>Ring Styles</b> &gt; <i>style</i> <b>Detail</b> &gt; <b>Reminders</b></p>
<b>headline view</b>  <p>If your home screen shows scrolling headlines from your service provider, you can turn them on or off:</p> <p>the <b>Options</b> key in your home screen and select <b>Headlines</b></p>

features
<b>menu view</b> <p>Show the main menu as graphic icons or as a text-based list:</p> <p>☛ &gt; ⚙ <b>Settings</b> &gt; <b>Personalise</b> &gt; <b>Main Menu</b> &gt; <b>View</b></p>
<b>main menu</b> <p>Reorder your phone's main menu:</p> <p>☛ &gt; ⚙ <b>Settings</b> &gt; <b>Personalise</b> &gt; <b>Main Menu</b> &gt; <b>Reorder</b></p>
<b>show/hide menu icons</b>  <p>Show or hide menu feature icons in the home screen:</p> <p>☛ &gt; ⚙ <b>Settings</b> &gt; <b>Personalise</b> &gt; <b>Home Screen</b> &gt; <b>Home Keys</b> &gt; <b>Icons</b></p> <p><b>Note:</b> This option is not available if your home screen shows scrolling headlines from your service provider.</p>

features
<b>change home keys</b>  <p>Change features for the soft keys, navigation key, and smart key in the home screen:</p> <p>☛ &gt; ⚙ <b>Settings</b> &gt; <b>Personalise</b> &gt; <b>Home Screen</b> &gt; <b>Home Keys</b></p> <p><b>Note:</b> This option is not available if your home screen shows scrolling headlines from your service provider.</p>
<b>master reset</b> <p>Reset all options <b>except</b> unlock code, security code, and lifetime timer:</p> <p>☛ &gt; ⚙ <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>Master Reset</b></p>

features
<b>master clear</b> <b>Caution:</b> Master clear <b>erases all information you have entered</b> (including phonebook and datebook entries) <b>and content you have downloaded</b> (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it. > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Clear</b>

## call times & costs

**Network connection time** is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features
<b>call times</b> Show call timers: > <b>Recent Calls</b> > <b>Call Times</b>
<b>in-call timer</b> Show time or cost information during a call: > <b>Settings</b> > <b>In-Call Setup</b> > <b>In-Call Timer</b>
<b>call cost</b> Show call cost trackers: > <b>Recent Calls</b> > <b>Call Cost</b>

78 other features—call times & costs

## data calls

To connect your phone with a USB cable, see page 44.

features
<b>send data</b> Connect your phone to the device, then place the call through the device application.
<b>receive data</b> Connect your phone to the device, then answer the call through the device application.

features
<b>using sync</b> You can call an Internet server and synchronise your phonebook and datebook entries with the server. To <b>set up</b> an Internet sync partner, press  > <b>Settings</b> > <b>Connection</b> > <b>Sync</b> > <b>[New Entry]</b> . Enter the server details, including <b>Server URL</b> (you can omit <b>http://</b> ) and <b>Data Path</b> (the folder below the URL where your data is stored). To <b>synchronise files</b> with a partner you set up, select the partner from the list in  > <b>Settings</b> > <b>Connection</b> > <b>Sync</b> .

80 other features—data calls

## handsfree

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features
<b>speakerphone</b> Activate the speakerphone during a call: Press the <b>Speaker</b> key (if available, or <b>Options</b> > <b>Spkrphone On</b> ).

features
<b>auto answer</b> (car kit or headset) Automatically answer calls when connected to a car kit or headset: > <b>Settings</b> > <b>Car Settings</b> or <b>Headset</b> > <b>Auto Answer</b>
<b>voice dial</b> (headset) Enable voice dial with headset send/end key: > <b>Settings</b> > <b>Headset</b> > <b>Voice Dial</b>
<b>auto handsfree</b> (car kit) Automatically route calls to a car kit when connected: > <b>Settings</b> > <b>Car Settings</b> > <b>Auto Handsfree</b>

other features—handsfree 79

## network

features
<b>network settings</b> See network information and adjust network settings: > <b>Settings</b> > <b>Network</b>
<b>software update</b> Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to install it later. To install the software update later: > <b>Settings</b> > <b>Phone Status</b> > <b>Software Update</b> > <b>Install Now</b>

## personal organiser

features
<b>set alarm</b> > <b>Tools</b> > <b>Alarm Clock</b>
<b>turn off alarm</b> When an alarm happens: To turn off the alarm, press the <b>Disable</b> key or . To set an eight-minute delay, press the <b>Snooze</b> key. <b>Note:</b> The <b>Snooze</b> key is available only if the phone is already powered on when the alarm sounds.
<b>add new datebook event</b> > <b>Tools</b> > <b>Datebook</b> , scroll to the day, press , press <b>Options</b> > <b>New</b>

other features—network 81

features
<b>see datebook event</b> See or edit event details: • > <b>Tools</b> > <b>Datebook</b> , scroll to the day, press •, press the <b>View</b> key
<b>event reminder</b> When an event reminder happens: To see reminder details, press the <b>View</b> key. To close the reminder, press the <b>Back</b> key.
<b>send datebook event to another device</b> Send a datebook event to another phone, computer, or device: • > <b>Tools</b> > <b>Datebook</b> , scroll to the day, press •, scroll to the event, press <b>Options</b> > <b>Send</b>

features
<b>print datebook month, week, or day over Bluetooth™ connection</b> You can use a Bluetooth wireless connection to send a datebook month, week, or day from your phone to a printer. • > <b>Tools</b> > <b>Datebook</b> Go to the month, week, or day view and press <b>Options</b> > <b>Print</b> . For more about Bluetooth connections, see page 29.
<b>calculator</b> • > <b>Tools</b> > <b>Calculator</b>
<b>currency converter</b> Enter exchange rate, press the <b>OK</b> key, enter amount, and press <b>Options</b> > <b>Convert Currency</b> .

features
<b>view, delete, or manage video clips</b> • > <b>Multimedia</b> > <b>Videos</b> To <b>copy or move</b> a file from your phone memory () to your memory card (), highlight it in the list and press and press <b>Options</b> > <b>Manage</b> > <b>Copy or Move</b> > <b>Memory Card</b> . You cannot copy or move some copyrighted files.
<b>hear, delete, or manage sounds</b> Manage your ring tones and music: • > <b>Multimedia</b> > <b>Sounds</b> To <b>copy or move</b> a file from your phone memory () to your memory card (), highlight it in the list and press and press <b>Options</b> > <b>Manage</b> > <b>Copy or Move</b> > <b>Memory Card</b> . You cannot copy or move some copyrighted files.

## security

features
<b>SIM PIN</b> <b>Caution:</b> If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows <b>SIM Blocked</b> . Lock or unlock the SIM card: • > <b>Settings</b> > <b>Security</b> > <b>SIM PIN</b>
<b>lock feature</b> • > <b>Settings</b> > <b>Security</b> > <b>Lock Application</b>

## fun & games

**Note:** Icons next to a picture, sound, or other object can indicate if the file is locked () , or if it is stored on your phone () or on your memory card () .

For basic information on the camera, see page 36.

features
<b>view, delete, or manage pictures</b> Manage photos, pictures, and animations: • > <b>Multimedia</b> > <b>Pictures</b> To <b>copy or move</b> a file from your phone memory () to your memory card () , highlight it in the list and press and press <b>Options</b> > <b>Manage</b> > <b>Copy or Move</b> > <b>Memory Card</b> . You cannot copy or move some copyrighted files.

features
<b>start micro-browser</b> Just press  . Your phone reads micro-browser settings from the USIM card. When you remove the USIM card, your phone clears the browser cache. To edit your settings, see page 85.
<b>download objects from Web page</b> Download a picture, sound, or other object from a Web page: Press  , go to the page that links to the file, scroll to the link, and select it. <b>Note:</b> Normal airtime and/or carrier usage charges apply.

features
<b>Web sessions</b> A <i>Web Session</i> stores settings that your phone uses to access the Internet. To select or create a Web session: • > <b>Web Access</b> > <b>Web Sessions</b>
<b>clear micro-browser history</b> Clear the micro-browser's history, cache, or cookies: • > <b>Web Access</b> > <b>Browser Setup</b>
<b>download game or application</b> You can download a Java™ game or application the same way you download pictures or other objects: Press  , go to the page that links to the file, scroll to the link, and select it. <b>Note:</b> Normal airtime and/or carrier usage charges apply.

features
<b>start game or application</b> Start a Java™ game or application: • > <b>Games &amp; Apps</b> , scroll to the game or application, press the <i>centre key</i> • <b>Note:</b> To install and run games stored on your memory card, press • > <b>Games &amp; Apps</b> > <b>[Install New]</b> .

## features

### aeroplane mode

You can switch your phone to aeroplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an aeroplane, without interfering with aeroplane communications.

☰ > Ⓐ Airplane Mode > Airplane Mode > On

You can make the aeroplane mode option appear whenever you turn on your phone:

☰ > Ⓐ Airplane Mode > Prompt At Power Up  
> On

## Specific Absorption Rate Data

---

### **This model meets international guidelines for exposure to radio waves.**

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.57 W/kg.<sup>1</sup> As

mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.<sup>2</sup> In this case, the highest tested SAR value is 0.98 W/kg.<sup>1</sup>

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

- 
1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
  2. Please see the Safety and General Information section about body worn operation.

## Information from the World Health Organisation

---

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information:  
<http://www.who.int./peh-emf>

# index

---

## A

accessories 21, 79  
accessory connector port 1  
active line indicator 47  
aeroplane mode 86  
alarm clock 81  
alarm indicator 47  
alert  
  set 51, 54  
  turn off 51, 54, 59  
animation 83  
answer a call 25, 58  
attach a number 60, 63  
audio player 35

## B

backlight 57  
battery 22, 23

## 90 index

instant messaging. See IM  
international access code 64  
iTAP text entry mode 49

## J

Java applications 85

## K

keypad 58, 76

## L

language 76  
linking. See Bluetooth  
  connection  
lock  
  application 83  
  phone 53  
  SIM card 83  
Low Battery message 47

## 92 index

  extending battery life 23  
battery indicator 47  
battery life, extending 29,  
  56, 57  
Bluetooth connection  
  datebook entry, printing  
    82  
  datebook entry, sending  
    82  
  description 29  
  messages, printing 73  
  phonebook entries,  
    printing 71  
  phonebook entries,  
    sending 71  
  restricting access 34  
brightness 57  
browser messages 74

## M

make a call 25  
master clear 78  
master reset 77  
memory card 41  
menu 2, 21, 45, 76, 77  
menu icons 77  
message 71, 72  
message alerts 54  
message indicator 47  
message reminders 76  
micro-browser 74, 84, 85  
Missed Calls message 60  
MP3 sound files 35  
multimedia message 72  
music 84  
mute a call 64

## N

name dial 67  
navigation key 1, 21, 51  
network settings 81

browser. See micro-browser

## C

cables 44  
calculator 82  
call  
  answer 25, 58  
  end 25  
  ending 40  
  make 25  
  recording 40  
call barring 53, 65  
call divert indicator 47  
call diverting 65  
call timers 78  
call waiting 65  
caller ID 60, 61, 69  
camera 36

notepad 64  
number. See phone number  
numeric entry mode 51

## O

object exchange 30  
open to answer 58  
optional accessory 21  
optional feature 21

## P

pairing. See Bluetooth  
  connection  
passwords. See codes  
personalise 76  
phone number 26  
phonebook 60, 63, 67  
photo 36, 83  
picture 83  
picture ID 61, 69  
PIN code 24, 53, 83  
PIN2 code 53

car kit 79  
categories 69  
centre key 1, 51  
centre select key 21  
channels for headlines 28  
clock 55  
codes 52, 53  
conference call 65  
copy files 30  
costs, tracking 78

## D

data call 80  
data indicator 46  
date, setting 55  
datebook 81, 82  
dial a phone number 25, 66  
dialled calls 59  
digit dial 63  
digital audio 35  
display 2, 28, 45, 57, 76  
divert calls 65

power key 1, 24  
printing 32

## Q

quick dial 66

## R

received calls 59  
recent calls 59  
recording a call 40  
redial 60  
reminders 76  
return a call 60  
ring style indicator 47  
ring style, setting 51, 54  
ring tone 84  
ringer ID 61, 68, 76  
ringer volume 51, 66  
roam indicator 46

download media objects 73,  
  84  
DTMF tones 60, 66

## E

earpiece volume 51  
email  
  reading and managing 73  
  sending 72  
  settings 74  
emergency number 61  
emoticon 75  
end a call 25  
end key 1, 25  
ending a call 40  
Enter Unlock Code message  
  53  
external display 52

## F

fax call 80  
fixed dial 66

## S

screen saver 56  
SCREEN3. See headlines  
scrolling 76  
security code 52  
send key 1, 25  
service dial 66  
signal strength indicator 46  
SIM Blocked message 24, 83  
SIM card 21, 24, 53, 66, 83  
skin 57  
smart key 52, 77  
smiley. See emoticon  
soft keys 1, 45, 77  
software update 81  
speakerphone 79  
speed dial 67  
store your number 26  
symbol entry mode 51  
synchronising 80

flip 25, 58  
focus, photos 36

## G

games 85  
GPRS indicator 46  
group mailing list 70

## H

handsfree speaker 52  
headlines 27, 45, 76  
headset 79  
headset jack 1  
hold a call 64  
home screen 2, 45, 76, 77

## I

IM 74  
in-call indicator 47  
Incoming Call message 61  
information services 74

## index 91

## T

tap text entry mode 50  
telephone number. See  
  phone number  
text entry 48  
text message 71, 72  
theme 56  
time, setting 55  
timers 78  
transfer a call 65  
turn on/off 24

## U

unlock  
  application 83  
  phone 24, 53  
  SIM card 83  
unlock code 52, 53  
USB cables 44

## index 93

## **V**

video clip 84  
videos 38, 41  
voice dial 63, 67, 79  
voice message 72  
voicemail 62  
voicemail message indicator  
47, 62  
volume 51, 76

## **W**

wallpaper 55  
Web pages 84  
Web sessions 85  
WHO information 89

## **Y**

your phone number 26

6803637D08