 
 


HELLOMOTO

Introducing your new **MOTORAZR™** maxx V6 3G wireless phone. Here's a quick anatomy lesson.

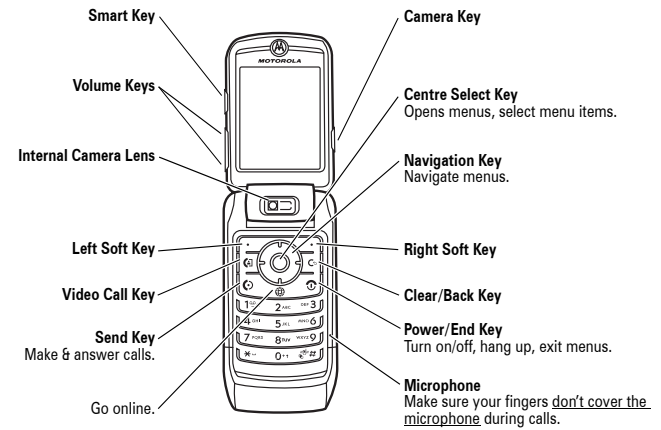 


1

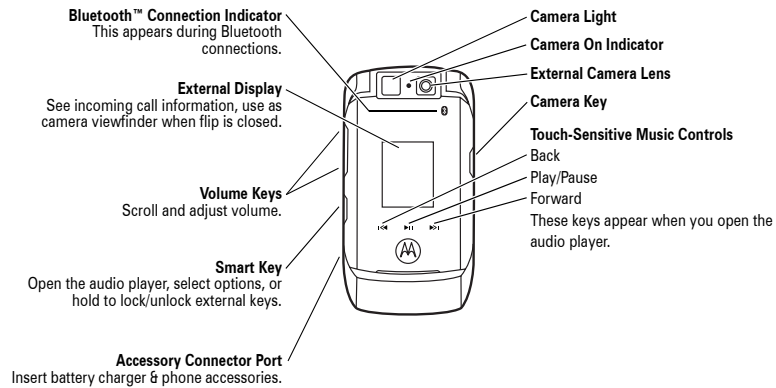

To change your automatic key lock, see page 58. To make your phone light up when you receive calls or messages, see page 61.

2

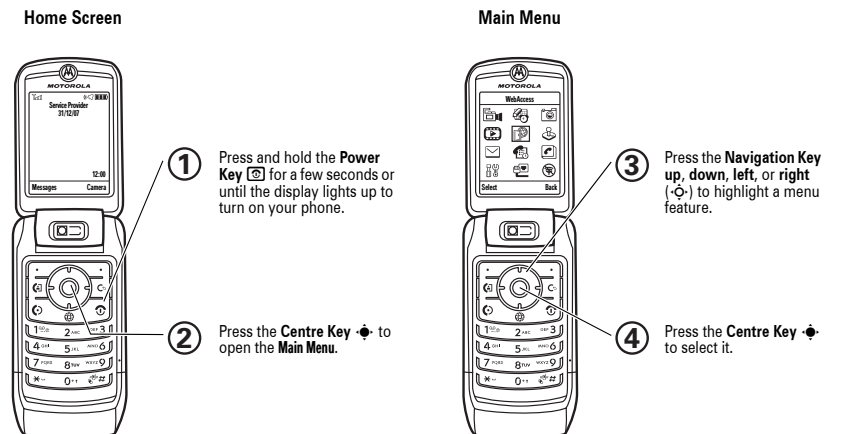

3

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their

proprietor and used by Motorola, Inc. under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows and Windows Me are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© Motorola, Inc., 2006.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for

copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the





core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.







contents





menu map	8	main attractions	28	basics	48	customise	60	other features	70
Safety Information	10	Bluetooth™ wireless	28	display	48	ring style	60	advanced calling	70
Use and Care	19	audio player	34	text entry	52	ring & event lights	61	phonebook	74
EU Conformance	20	photos	37	volume	56	time & date	61	messages	79
Recycling Information	21	videos	39	navigation key	56	wallpaper	62	personalising	83
essentials	22	video calls	41	smart key	56	screen saver	62	call times & costs	85
about this guide	22	text messages	41	external display	57	themes	63	handsfree	86
SIM card	22	memory card	43	handsfree speaker	57	display appearance	63	data calls	87
battery	23	cable connections	46	codes & passwords	57	answer options	64	network	88
turn it on & off	25	phone updates	47	lock & unlock phone	58	calls	65	personal organiser	88
make a call	26			lock & unlock		turn off a call alert	65	security	91
answer a call	26			external keys	58	recent calls	65	fun & games	92
store a phone						redial	67	SAR Data	95
number	26					return a call	67	WHO Information	97
call a stored phone						caller ID	67	index	98
number	27					emergency calls	68		
your phone number	27					voicemail	68		

  menu map

main menu


-  **Video Camera**
-  **Tools**
 - SIM *
 - Calculator
 - Calendar
 - Alarm Clock
 - Dialling Services
 - Fixed Dial *
 - Service Dial *
 - Quick Dial
 - Activation List
-  **Camera**
-  **Multimedia**
 - Media Finder
 - Music
 - Pictures
 - Videos
 - Voice Record
 - Ring Tones
 - Wallpapers
 - Themes
 - Camera
 - Video Camera
 - Voice Record

-  **WebAccess**
 - Browser
 - Bookmarks
 - History
 - Go to Page
 - Browser Setup
 - Web Sessions *
-  **Games & Apps**
 - Help
-  **Messages**
 - Create Message
 - Voicemail
 - Message Inbox
 - Email Msgs
 - Browser Messages
 - Info Services *
 - Outbox
 - Drafts
 - Templates
-  **Recent Calls**
 - (press the  or  to scroll through the call lists)






-  **Phonebook**
-  **Settings**
 - (see next page)
-  **Connection**
 - Bluetooth Link
 - USB Settings
 - MOTOSYNC *
-  **Aeroplane Mode**
 - Aeroplane Mode
 - Prompt At Startup

* optional features









This is the standard main menu layout. Your phone's menu may be a little different.

Tip: For Feature help, select **Help** under  **Games & Apps**.

settings menu

-  **Personalise**
 - Home Screen
 - Main Menu
 - Voice Dial setup
 - Skin
 - Greeting
 - Wallpaper
 - Screen Saver
-  **Ring Styles**
 - Style
 - style Detail
 - Ring Lights
 - Event Lights
-  **Connection**
 - Bluetooth Link
 - USB Settings
 - MOTOSYNC *
-  **Call Divert ***
 - Voice Calls
 - Video Calls
 - Cancel All
 - Divert Status
 - Push to Call Fwd No.
-  **In-Call Setup**
 - In-Call Timer
 - Call Cost Setup *
 - My Caller ID
 - Answer Options
 - Call Waiting
 - MSG Alert

* optional features

-  **Initial Setup**
 - Time and Date
 - Speed Dial
 - Auto Redial
 - Display Timeout
 - Backlight
 - Charging Lights
 - Scroll
 - Language
 - Brightness
 - DTMF
 - Master Reset
 - Master Clear
-  **Phone Status**
 - My Tel. Numbers
 - Credit Info/Available *
 - Active line *
 - Battery Meter
 - Download Location
 - Storage Devices
 - Voice Dial Languages
 - Software Update *
 - Other Information
-  **Headset**
 - Auto Answer
 - Ringer Options
 - Voice Dial
-  **Car Settings**
 - Auto Answer
 - Auto Handsfree
 - Power-off Delay
 - Charger Time
-  **Network**
 - New Network
 - Network Setup
 - Available Networks
 - My Network List *
 - Service Tone
 - Call Drop Tone
-  **Security**
 - Phone Lock
 - Keypad Lock
 - Lock Application
 - Show Private Entries
 - Fixed Dial *
 - Restrict Calls *
 - Call Barring *
 - SIM PIN
 - New Passwords
 - Certificate Mgmt *
-  **Java Settings**
 - Java System
 - Delete All Apps
 - App Vibration
 - App Volume
 - App Priority *
 - App Backlight
 - Set Standby App *
 - DNS IP *
-  **Aeroplane Mode**
 - Aeroplane Mode
 - Prompt At Startup

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.¹

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following instructions.

External Antenna Care

If your phone has an external antenna, use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone and/or may result in non-compliance with local regulatory requirements in your country.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline phone.

Body-Worn Operation: Voice Communication

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting voice communications, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines.

If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 2.5 centimetres (1 inch) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 2.5 centimetres (1 inch) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

Turn off your wireless device whenever instructed to do so by airline staff. If your device offers a flight mode or similar feature, consult airline staff about use in flight. If your device offers a feature that automatically turns on the phone, then turn off this feature before boarding an aeroplane or entering an area where the use of wireless devices is restricted.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 centimetres (6 inches) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 15 centimetres (6 inches) from your pacemaker when the phone is turned ON.

- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your doctor may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road. Using a phone may be distracting in certain circumstances. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices can be found in the "Wireless Phone Safety Tips" at the end of this guide and/or at the Motorola website: www.motorola.com/callsmart.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Gas or Petrol Stations

Obey all posted signs with respect to the use of radio equipment in gas or petrol stations. Turn off your wireless device if instructed by authorised staff.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Damaged Products


If your phone or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorised Service Centre to determine if it has been damaged. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become hot. Take care when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Choking Hazards

Your phone or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your phone and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone (the flashing-light feature is not available on all products).

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion Injuries

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.

- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

1. The information provided in this document supersedes the general safety information in user's guides published prior to January 28, 2005.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Do not expose your phone to water, rain, extreme humidity, sweat, or other moisture.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



microwaves

Do not try to dry your phone in a microwave oven.



dust and dirt

Do not expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions.



the ground

Do not drop your phone.

 
European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

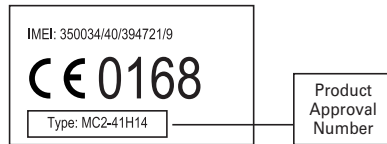

The above gives an example of a typical Product Approval Number.

Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose of the product with household waste.

Recycling Mobile Phones and Accessories

Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

about this guide

This guide shows how to open a menu feature as follows:

Find it: > Messages > **Create Message**

This means that, from the home screen:

- 1 Press the *centre key* to open the menu.
- 2 Press the *navigation key* to scroll to **Messages**, and press the centre key to select it.
- 3 Press the navigation key to scroll to **Create Message**, and press the centre key to select it.

symbols	
	This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.

 
 
SIM card

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries. It can also contain your voicemail, text message, and Internet access settings. If you put your SIM card in another phone, that phone uses your phone number.

To insert and use a **memory card**, see page 43.

Turn off your phone and remove your battery before you install or remove a SIM card.

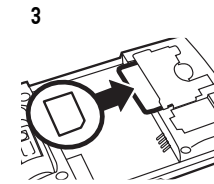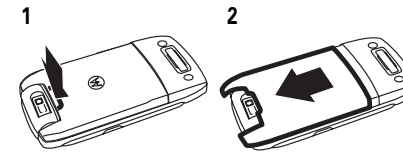

battery

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



 
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

Contact your local recycling centre for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

battery installation

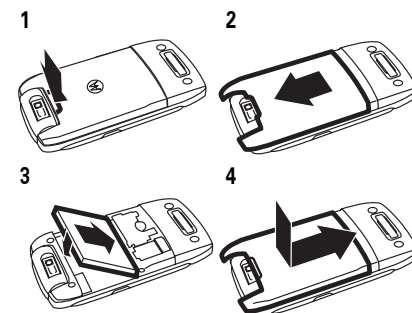


battery charging

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. Your display shows **Charge complete** when finished.

Your phone's battery charging indicator lights up while the battery is charging, and turns off when the battery is fully charged.

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

 The battery charger shipped with this device is designed for Motorola 3G mobile phones.

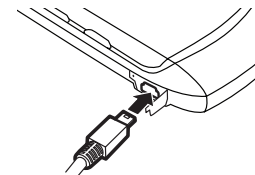



Other chargers might take longer to charge your battery, or cause your calls to fail during charging.

turn it on & off


Caution: Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.

 
To turn on your phone, press and hold for a few seconds or until the keypad or display lights up. If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code.

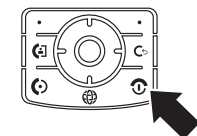

To turn off your phone, press and hold  for a few seconds.


make a call


Enter a phone number and press  to make a call.

To “hang up,” close the flip or press .

To make video calls, see page 41.


answer a call

When your phone rings and/or vibrates, just open the flip or press  to answer.



To “hang up,” close the flip or press .

store a phone number



You can store a phone number in your **Phonebook**:

- 1 Enter a phone number in the home screen.
- 2 Press the **Store** key.
Select **Create New Contact**, if necessary.
- 3 Enter a name and other details for the phone number. To select a highlighted item, press the centre key .
- 4 Press the **Done** key to store the number.

To edit or delete a phonebook entry, see page 75.


To store an email address from the home screen, press  >  **Phonebook** > **New Entry**. Enter the new contact’s name and email information.



call a stored phone number

Find it:  >  **Phonebook**



- 1 Scroll to the phonebook entry.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want.



- 2 Press  to call the entry.

Note: Your phonebook can show you the entries stored in your phone’s memory or on your SIM card. To choose which entries you see, press  >  **Phonebook**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**.

your phone number

From the home screen, press the *clear key*  then  to see your number.

Tip: Want to see your phone number while you’re on a call? Press **Options** > **My Tel. Number**.

You can edit the name and phone number stored on your SIM card. From the home screen, press  , select an entry, press the **View** key, press the **Options** key, and select **Edit**. If you don’t know your phone number, contact your service provider.



main attractions

You can do much more with your phone than make and receive calls!

Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

You can also use Bluetooth™ A2DP stereo headphones to listen to music files you store on your phone.

Note: The use of wireless phones while driving may cause distraction. Discontinue a

call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

 
For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

use a headset or handsfree car kit




Before you try to connect your phone with a handsfree device, make sure the device is on and **ready** in *pairing* or *bonding* mode (see the user's guide for the device).

- 2 Press **Options**, then select:
 - **Manage > Copy** for media files.
 - **Send Contact** for phonebook entries.
 - **Send** for datebook events.
- 3 Select a recognised device name, or select **[Look For Devices]** to search for the device where you want to copy the file.

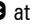

If your phone could not copy the file to the other device, make sure the device is on and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection. To change a device's access setting, see page 33.

receive files from another device


If you do not see the Bluetooth indicator  at the top of your phone display, turn on your phone's Bluetooth feature by pressing  >  **Settings > Connection > Bluetooth Link > Setup > Power > On**.

 
- 1 Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognise each other, place your phone in discoverable mode so the sending device can locate it. Press  >  **Settings > Connection > Bluetooth Link > [Find Me]**.
- 2 Press the **Accept** key on your phone to accept the file from the other device.

Find it:  >  **Settings > Connection > Bluetooth Link > [Add Audio Device]** 

Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list and press the centre key .
- 2 Press the **Yes** or **Ok** key to connect to the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press the **Ok** key.

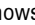When your phone is connected, the Bluetooth indicator  shows in the home screen, and the external Bluetooth indicator light flashes.


You cannot play some copyrighted files over a Bluetooth connection.

Shortcut: When Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just

turn on the device or move it near the phone. During a call or while playing a sound file, you can press **Options > Use Bluetooth** to connect to a headset or handsfree device you have used before.

Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

copy files to another device


You can copy a media file, phonebook entry, datebook event, or Web shortcut from your phone to a computer or other device. 

Note: You can't copy some copyrighted objects.

- 1 On your phone, scroll to the object that you want to copy to the other device.

Your phone notifies you when file transfer is complete. If necessary, press the **Save** key to save the file.

send files to a printer

You can use a Bluetooth connection to send a picture, message, phonebook entry, or datebook view from your phone to a printer. 

Note: You cannot print message **Templates** or a phonebook **Mailing List**.

- 1 On your phone, scroll to the object that you want to print, then press **Options > Print > Bluetooth**. In the datebook, you can print the month, week, or day.




Tip: If you see it, you can print it. After you capture a picture in the camera, you can press the **Options** key and select **Print**.
- 2 If available, choose additional objects or print options.

- 3 Select a recognised printer name listed in the **Printers** menu, or **[Look For Devices]** to search for the printer where you want to print the object.

Note: If you see **Service not Supported** when you try to print, select **Options > Manage > Copy > Bluetooth** instead. Always use this option to print 4x6 photos.

advanced Bluetooth features

A device is *recognised* after you connect to it once (see page 28).

features	
make phone visible to other device	Allow a Bluetooth device to discover your phone:   >  Settings > Connection > Bluetooth Link > [Find Me]

features	
connect to recognised device	Connect your phone to a recognised handsfree device: <ul style="list-style-type: none"> •> Settings > Connection > Bluetooth Link > Audio Devices > device name
drop connection with headset or handsfree device	<ul style="list-style-type: none"> •> Settings > Connection > Bluetooth Link > Audio Devices Scroll to the device name and press the Drop key.

features	
switch to headset or handsfree device during call	During a call, press Options > Use Bluetooth to switch to a recognised headset or car kit. Your phone connects automatically, or shows a list of devices you can select.
play sound files on a recognised headset	While playing a sound file, press Options > Use Bluetooth to switch to a recognised headset. Your phone connects automatically, or shows a list of devices you can select. You cannot play some copyrighted files over a Bluetooth connection.

features	
move multimedia object to device	Caution: Moving an object deletes the original object from your phone. Scroll to the object, press Options > Manage > Move, select the device name.
copy multimedia object to device	Scroll to the object, press Options > Manage > Copy, select the device name.

features	
edit device properties	<ul style="list-style-type: none"> •> Settings > Connection > Bluetooth Link > Found Devices Scroll to the device name and press the centre key. Note: The Access setting can restrict how this device connects to your phone. You can choose Automatic (always connects), Always Ask (asks you before connecting), Just Once, Never, or Custom.

features	
set Bluetooth options	<ul style="list-style-type: none"> •> Settings > Connection > Bluetooth Link > Setup Note: The Bluetooth Connection Indicator (see page 2) lights when your phone has a Bluetooth connection. To disable this indicator, choose Bluetooth Lights > Off under the Setup menu.

Find it: •> Multimedia > Media Finder > Music
 Press • up or down to scroll to an option, and press the centre key • to select it:

options	
All Songs	Show and play individual songs. Note: All of your phone's songs appear in this list. Some songs do not have any Artist, Album, or Genre information, so they don't appear in those lists.
Recently Played	Show songs you played recently.
Playlists	Create or play a playlist (see page 36).
Artists	Select an artist to show or play their songs.
Albums	Select an album to show or play its songs.

options	
Genres	Select a type of music to show or play songs.
Composers	Select a composer to show or play songs.

When you select a song:

- **Play or pause** the song by pressing the centre key •.
- **Skip back or forward** by pressing • left or right.
- **Change volume** by pressing the volume keys.
- **Hide the player** by pressing Options > Hide. This lets you use other phone features while the song plays. To stop the hidden audio player, press [] in the home screen.

Tip: You can listen to tunes on your way. You can use Bluetooth™ A2DP stereo headphones (page 28), and use *aeroplane mode* to make your phone safe to use even while you're on a plane (page 94).

Your phone also has a Ring Tones player. To use it, press •> Multimedia > Media Finder > Ring Tones.

audio player

Your phone can play and store AU, WMA, and MP3 song files. You can use a removable memory card with your phone to store more songs (see page 43).

load music files

To download songs from the Internet, see page 93. To copy files between your phone and a computer, see page 46.

Note: Your phone may not play MP3 files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

create a playlist

Find it: > **Multimedia** > **Media Finder** > **Music** > **Playlists** > **[Create New Playlist]**

 
Open a song list, and press the centre key to select each song you want. After you press the **Done** key, enter a name for your list.

To hear your playlist, highlight it under **Playlists** and press **Options** > **Play**.

play music with your phone closed

You can close your phone while you listen to music. When your phone is closed, music controls light up on the outside, and the

external display shows the song artist, title, and time.

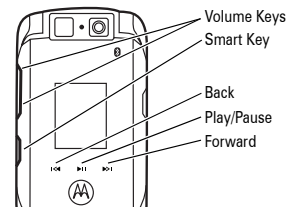

- Press the volume keys to adjust playback volume.
- Hold the smart key to lock or unlock the side keys.
- Press the smart key to open the audio player menu. Press your volume keys to scroll through the menu, and press the smart key to select a menu item (or pause a song).

2 Press the centre key to take the photo in the viewfinder. You can:

- Press the **Options** key to store or discard the photo.

If you press **Options** > **Print**, you can print the picture over a Bluetooth™ connection (see page 31).

- Press the **Send** key to send the photo in a message.

Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.

- Press to discard the photo and return to the active viewfinder.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
Go To Pictures	See stored pictures and photos.
Go To Video Mode	Switch to the video camera.
Internal View/External View	Switch to the camera facing you (Internal) or facing away from you (External).
Light On/Light Off	Turn the camera light on or off, for the external view. Note: The light stays on until you take a picture, receive a phone call, or select Light Off .

 
photos

To view, edit, or delete photos you've taken, see page 92.

Your camera lens is on the back of your phone when the phone is open.

Note: Next to your phone's external lens is a **camera on indicator**. This can blink when your camera is on, to let people around you know that they might be in your photo or video.

1 Press > **Camera** to see the camera viewfinder.

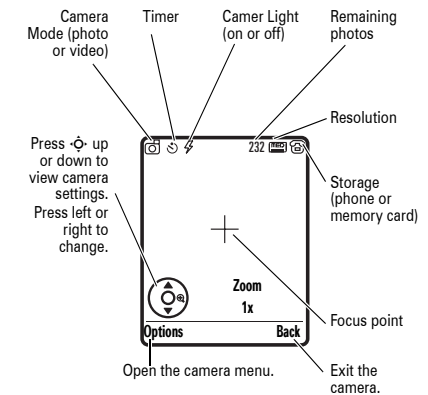

options	
Auto-Timed Capture	Set a timer for the camera to take a photo.
Camera Setup	Open the setup menu to adjust photo settings.
Switch Storage Device	Choose to store videos on your phone or a memory card.
Free Space	See how much memory remains. Note: Your service provider may store some content in user memory before you receive the phone.

self portrait

If you close your phone while the viewfinder is active, the external display shows the image. Press the volume keys to zoom, or press the smart key to capture and store the image.

 
videos

To view, edit, or delete videos you've recorded, see page 93.

Your camera lens is on the back of your phone, when your phone is open.

Note: Next to your phone's external lens is a **camera on indicator**. This can blink when your camera is on, to let people around you know that they might be in your photo or video.

Press **⬇** > **Video Camera** to see the video viewfinder.

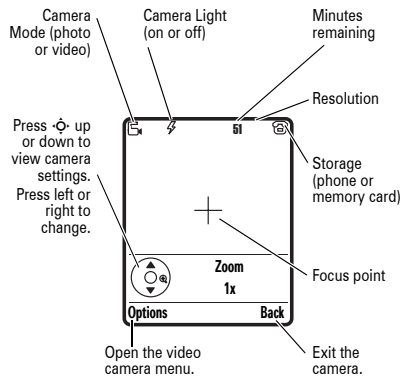

Note: The number of minutes remaining is an estimate.

Tip: If you want to send your video in a message, the video length must be set to

40 main attractions

send a text message

A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and you can put text and media objects on each page. You can send a message to other compatible phones or to email addresses.

Find it: **⬇** > **Messages** > **Create Message** > **Messages**

1 Press keypad keys to enter text on the page (for details about text entry, see page 52).

To insert a **picture, sound, or other object** on the page, press **Options** > **Insert**. Select the file type and the file.

To insert **another page** in the message, enter text or objects on the current page and press **Options** > **Insert** > **New Page**. You

MMS. To set length, press **Options** > **Video Camera Setup** > **Video Length**.

1 Press the centre key **⬇** to start recording the video in the viewfinder.

2 Press the **Stop** key to stop recording the video. You can:

- Press the **Options** key to preview, store, or discard the video.

To play a stored video from the home screen, press **⬇** > **Multimedia** > **Media Finder** > **Videos** > **All Videos** > **video name**.

- Press the **Send** key to send the video in a message.

Enter text and press **Send To**, then scroll to a recipient address and press the centre key **⬇** to select it. Press the **Options** key to enter a new number. To send the message, press the **Send** key.

can enter more text and objects on the new page.

2 When you finish the message, press the **Send To** key.

3 To **send** the message, press the **Send** key.

receive a text message

When you receive a message, your phone plays an alert, and the display shows **New Message** with a message indicator, such as **✉**.

Press the **Read** key to open the message.

If a multimedia message contains media objects:

- Photos, pictures, and animations show as you read the message.
- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.

Note: Some other phones or networks do not support messages with videos.

- Press **⬇** to discard the video and return to the active viewfinder.

video calls

If you call someone who has a 3G video phone, you can see each other while you talk. If your phone is roaming on a **non-3G network**, video calls will not work (see the Roam indicator on page 50).

Note: Next to your phone's external lens is a **camera on indicator**. This can blink when your camera is on, to let people around you know that they might be in your photo or video.

make a video call

1 Enter a phone number and press **⬇** to see the video call preview.

- Attached files are added to the end of the message. To open an attachment, scroll to the file indicator/filename and press the **View** key (image), **Play** key (sound), or **Open** key (phonebook vCard, datebook vCalendar entry, or unknown file type).

manage text messages

You can sort and move your messages.

Find it: **⬇** > **Messages** > **Message Inbox**

Scroll to a message and press the **Options** key. Your options include:

options	
Sort by	Sort messages by Time , Sender , Priority , or other details. Note: You can also sort the messages in your Email Msgs and Outbox lists.

2 Press **⬇** to make the call.

During the call:

- Press the **Stop Video** key to change the call to a voice call with the speakerphone on.
- If you accept another **incoming voice call**, your phone changes this video call to a voice call.
- If you accept another **incoming video call**, your phone ends this video call.

3 To end the call, press **⬇**.

text messages

To create a group mailing list, see page 78. For more message features, see page 79.

42 main attractions

main attractions 41

options	
Mark/Unmark as SPAM	Mark the selected message with a SPAM icon. Note: To turn on a SPAM filter, press ⬇ > Messages , then press > Options > Setup > Message Setup > SPAM Filter > On . This automatically adds a SPAM icon and turns off notification for new messages from anyone not in your phonebook.

memory card

 
You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).

main attractions 43

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

install a memory card

- 1 Remove the battery door (see page 24).
- 2 Make sure the memory card's metal contacts are facing down, and slide the top of the memory card under the metal band.
- 3 Replace the battery door.

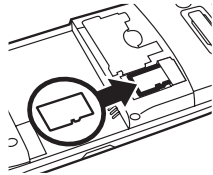

see and change memory card information

To **see the files** stored on your memory card and on your phone, open a file list, such as **Pictures** (see page 92). Icons can indicate if a file is stored in your phone memory (📁) or on your memory card (📁). To copy or move a file from your phone to your memory card, highlight it in the list and press **Options** > **Manage** > **Copy** or **Move** > **Memory Card**. You cannot copy or move some copyrighted files.

 
To **copy files** between your memory card and a computer, you can use a cable connection (see page 46) or a Bluetooth connection (see page 29).

To see your **memory card name, available memory**, and other information about the card:

Find it: ⌂ > ⚙️ **Settings** > **Phone Status** > **Storage Devices**

cable connections

🔌 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

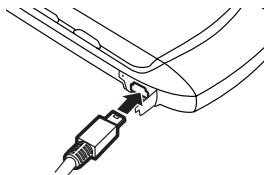

Note: Motorola Original USB data cables and supporting software may be sold separately. Check your computer or hand-held device to determine the type of cable you need. To make **data calls** through a connected computer, see page 87.



connect your memory card to a computer

You can use a cable connection to access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Disconnect the cable from your phone, if it is connected, then press ⌂ > ⚙️ **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Memory Card**.

This directs the USB connection to your memory card.

Connect the cable to your phone and to an available USB port on your computer. Then follow these steps:

- 1 Press ⬅️ to scroll to the memory card that is installed.
- 2 Press the centre key ⬇️ to see the memory card information. Your phone stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.
or
Press **Options** to see the **Storage Dev. Menu**, which lets you **Format** or **Rename** the memory card.

store and use protected content

If you try to play a copyrighted file, it might ask you to download a licence. Some licences only let you play a file for a certain number of times or days.

On your computer:

- 1 Open your "My Computer" window, where your phone's memory card shows as a "Removable Disk" icon.
- 2 Click on the "Removable Disk" icon to access the files on your phone's memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows:
audio files: > mobile > audio
screen savers: > mobile > picture
wallpapers: > mobile > picture
video clips: > mobile > video
- 4 When you finish, disconnect your phone by selecting the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen. Then disconnect the "USB Mass Storage Device."

For example, a licence may allow you to play the content of your download five times or use the content for three days before it expires.

You cannot send, copy, or change copyrighted files.

To download a file, see page 93. To activate downloaded copyrighted files:

Find it: ⌂ > ⚙️ **Tools** > **Activation List** > *file type* > *file*

You can see file's **Status, Type, Activation**, and **999 Remaining**.

- 5 Disconnect the cable from your phone and computer.

On your phone:

To return to **Data** as your USB default connection, press ⌂ > ⚙️ **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Data connection**.

phone updates

Sometimes we think of ways to make your phone's software faster or more efficient after you've purchased your phone. You can find out if your phone can be updated and register for free update notifications at: <http://www.hellomoto.com/support/updates>

Note: Software updates do not affect your phonebook entries or other personal entries. If you receive a software update but choose to install it later, see page 88.

 
basics

See page 1 for a basic phone diagram.

Tip: Want some help? Press **Help** > **Games & Apps** > **Help**. Use the icons in **Help** to find information about phone features.

display

The *home screen* shows when you turn on the phone.

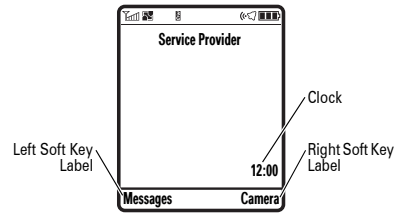


Note: Your home screen might look different from the one shown, depending on your service provider.

To dial a number from the home screen, press number keys and **Call**.

Press **Up**, **Down**, **Left**, or **Right** in the home screen to open basic menu features.

Press the centre key **Menu** to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

 Status indicators can show at the top of the home screen:

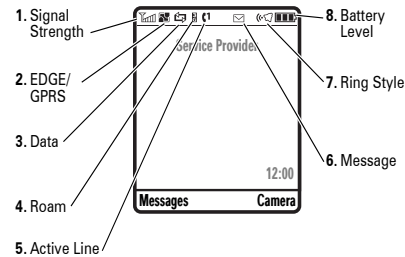

- 1 Signal Strength Indicator** – Vertical bars show the strength of the network connection. You can't make or receive calls when **Y** or **Y0** shows.
- 2 EDGE/GPRS Indicator** – Shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) or *General Packet Radio Service* (GPRS) network connection. Indicators can include:

- GPRS PDP context active
- EDGE
- GPRS packet data available

- 3 Data Indicator** – Shows connection status.

- secure packet data transfer
- unsecure packet data transfer
- secure application connection
- unsecure application connection
- secure *Circuit Switch Data* (CSD) call
- unsecure CSD call

High-Speed Downlink Packet Access (HSDPA) data transfer

Bluetooth™ connection is active

- 4 Roam Indicator** – Shows when your phone is seeking or using a network outside your home network. Indicators can include:

- 2G home
- 2G roam
- 2.5G home
- 2.5G roam
- 3G home
- 3G roam
- HSDPA home
- HSDPA roam

HSDPA is *High-Speed Downlink Packet Access*, available on some networks.

- 5 Active Line Indicator** – Shows **1** to indicate an active call, or **2** to indicate when call diverting is on. Indicators for dual-line-enabled SIM cards can include:

- line 1 active
- line 1 active, call divert on
- line 2 active
- line 2 active, call divert on

When an alarm is activated, can show here.

- 6 Message Indicator** – Shows when you receive a new message. Indicators can include:

- text message
- voice message

 
- 7 Ring Style Indicator** – Shows the ring style setting.

- loud ring
- vibrate & ring
- soft ring
- vibrate then ring
- vibrate
- silent

- 8 Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

text entry

Some features let you enter text.

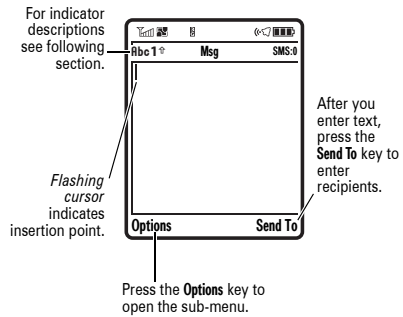


Press **[#]** in a text entry view to select an entry mode:

entry modes	
[1] or 1	Primary text entry mode can be set to any iTAP™ [1] or tap 1 mode.
[2] or 2	Secondary text entry mode can be set to any iTAP™ [2] or tap 2 mode, or set to None if you don't want a secondary entry mode.
123	Numeric mode enters numbers only.
@%&	Symbol mode enters symbols only.

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**.

 For example, if you press **[7] [7] [6] [4]**, your display shows:

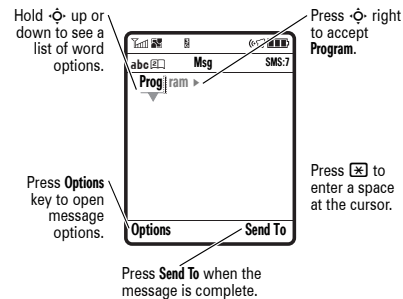

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.

Tip: Don't worry if you forget how iTAP works. In a text entry display, you can press **Options > Text Setup > Text Tutorial** to see an explanation.

tap and tap extended modes

Press **[#]** in a text entry view to switch to tap mode. If you don't see **Abc 1** or **Abc 2**, press **Options > Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **TAP** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. The **Tap Extended** mode works the same way, but includes more special characters and symbols.

iTAP™ and Tap mode tips

 
- Press **[0]** in a text entry view to change text case to all capital letters (**ABC**), no capitals (**abc**), or next letter capital (**Abc**).
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP or Tap mode.
- Press **[1]** to enter punctuation or other characters.
- Press **[Left]** to move the flashing cursor to enter or edit message text.
- Press **[Delete]** to delete the character to the left of the cursor. Hold **[Delete]** to delete the word.
- To cancel your message, press **[Cancel]**.

iTAP™ mode

Press **[#]** in a text entry view to switch to iTAP mode. If you don't see **[1]** or **[2]**, press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, if you press **[7]** one time, your display shows:

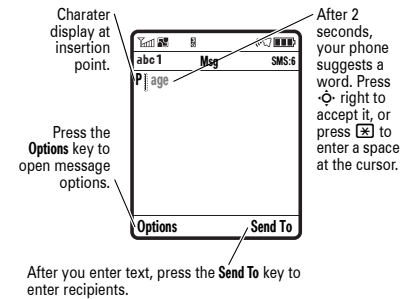

The first character of every sentence is capitalised. If necessary, press **[Down]** down to change the character to lowercase before the cursor moves to the next position.

numeric mode

Press **[#]** in a text entry view until you see **123**. Press the number keys to enter the numbers you want.

Shortcut: You can press and hold a number key to temporarily switch to numeric mode from iTAP™ or Tap modes. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.

 
symbol mode

Press **[#]** in a text entry view until your phone shows a list of symbols. Scroll to the symbol you want, then press the centre key **[Center]**.

volume

Press the volume keys to:



- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen

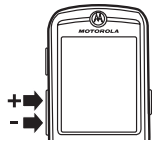


Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Silent** or back by holding **[#]** in the home screen.



To change your ringer volume when your phone is closed, see page 57.

  

navigation key

 
Press the navigation key  up, down, left, or right to scroll to items in the display. When you scroll to an item, press the centre key  to select it.

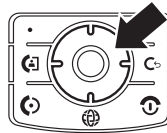

smart key

  The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the centre key ). The smart key usually does the same thing as pressing the centre key . To find the smart key, see page 1. To change what the smart key does in the home screen, see page 84.

 To **manually lock** your phone:
Press  >  **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  >  **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 68). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

lock & unlock external keys

When your phone is closed, your external keys (the smart key, volume keys, music keys, and camera key) lock to prevent accidental key presses.



external display

When you close your phone, the external display shows the date, status indicators, and notifications for incoming calls and other events. For a list of phone status indicators, see page 49.

set phone ring style in external display

- 1 Press a volume key to see **Ring Styles**.
- 2 Press the smart key repeatedly, until the style you want appears.
- 3 Press a volume key to return to the home screen.

To change how long your phone waits before it automatically locks your external keys:

 >  **Settings** > **Security** > **Keypad Lock** > **Timer** > *a time interval* or **Off**

Note: If you choose **Off**, you can still manually lock your external keys by holding the smart key.

To **unlock** your external keys, press smart key once, then hold the smart key (the key below your volume keys).

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **Options** key and select **Speakerphone On** to turn the handsfree speaker on. Your display shows **Speakerphone On** until you turn it off or end the call.

 
Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it:  >  **Settings** > **Security** > **New Passwords**

You can also change your **SIM PIN** or call barring passwords.

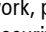If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

customise

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

- Loud
- Soft
- Vibrate
- Vibe & Ring
- Vibe then Ring
- Silent

The ring style profile's indicator shows at the top of your home screen. To choose your profile:

Find it: **Settings** > **Ring Styles**
> **Style: style name**

To choose an **analogue, digital, or no** clock for your home screen, press **Settings** > **Personalise** > **Home Screen** > **Clock**.

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Note: Your theme can also set your wallpaper (page 63).

Find it: **Settings** > **Personalise**
> **Wallpaper**

options	
Picture	Press up or down to select a picture, or select None for no wallpaper.

Shortcut: In the **home screen**, press the volume keys up or down to quickly change your ring style profile. With your **phone closed**, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change.

Tip: Do you get a lot of text messages? If you don't want to hear incoming message alerts during phone calls, press **Settings** > **In-Call Setup** > **MSG Alert** > **Not in Call**.

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it: **Settings** > **Ring Styles**
> **style Detail**

options	
Layout	Select Centre to centre the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.

screen saver

Set a photo, picture, or animation as a screen saver. The screen saver shows when the flip is open and no activity is detected for a specified time.

Note: Your theme can also set your screen saver (page 63).

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

 
Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Scroll to the alert you want, then press the centre key.
- 3 Press the **Back** key to save the alert setting.

ring & event lights

Your phone has lights on the outside that can pulse for incoming calls or messages, or while you charge your battery.

To set the light for your **incoming calls**, press

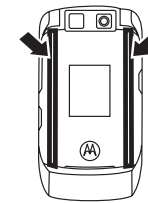

Find it: **Settings** > **Personalise**
> **Screen Saver**

options	
Picture	Press up or down to select a picture or animation, or select None for no screen saver.
Delay	Select the length of inactivity before the screen saver shows.

themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more.

To **apply** a theme, press **Multimedia** > **Themes** > *theme*.

To **download** a theme, see page 93.

Settings > **Ring Styles** > **Ring Lights**.

To set the light for your **incoming messages**, press **Settings** > **Ring Styles** > **Event Lights**.

To turn your **battery charging** light on or off, press **Settings** > **Initial Setup** > **Charging Lights**.

time & date

Your phone needs the time and date for the datebook.

To **synchronise** the time and date with the network: Press **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **On**.

To **manually** set the time and date, turn off **Autoupdate**, then: Press **Settings** > **Initial Setup** > **Time and Date** > *time* or *date*.

To **delete themes you downloaded**, press **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Delete** or **Delete All**.



To **preview** a theme, press **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Preview**.



display appearance

To choose a phone **skin** that sets the look and feel of your phone's display: Press **Settings** > **Personalise** > **Skin**. Your theme can also set your phone skin (page 63).



To set your display **brightness**: Press **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press  >  **Settings** > **Initial Setup** > **Backlight**.

Note: To turn the backlight on or off for Java™ applications, press  >  **Settings** > **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press  >  **Settings** > **Initial Setup** > **Display Timeout**.

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find it:  >  **Settings** > **In-Call Setup** > **Answer Options**

options	
Multi-key	Answer by pressing any key.
Open To Answer	Answer by opening the flip.

calls


To make and answer calls, see page 26.

turn off a call alert


You can press the volume keys to turn off a call alert before answering the call.



recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see a list of dialled calls.

Find it:  >  **Recent Calls**, press  or  to select > **Received Calls** or **Dialled Calls**



Scroll to a call. A  next to a call means the call connected.

- To call the number, press .
- To see call details (like time and date), press the centre key .
- To see the **Last Calls Menu**, press **Options**. This menu can include:



options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.



calls 65

options	
Video Call	Make a video call to the number.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Send Voice Msg	Record and send a voice message to the number.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.

options	
Send Tones	Send the number to the network as DTMF tones. Note: This option shows only during a call.
Filter by	Select dialled or received calls.
Notepad	Open the number in a text editor.
Call Times	Open your call time information. 
Call Cost	Open your call cost information. 

redial

 
- 1 Press  from the home screen to see a list of recent calls.
- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal**, and you see  **Call Failed**, you can press  or the **Retry** key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.


return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press the **View** key to see the received calls list.

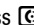- 2 Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID)  shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.


You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 76).

To show or hide **your phone number** from the next person you call, enter the phone number and press **Options** > **Hide ID/Show ID**.


emergency calls

Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.


Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number. 

Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:


Find it:  >  **Messages** > **Voicemail**




Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.




 
Note: You can't do the following: **Insert Pause** (pause), **Insert Wait** (wait), or **Insert 'n'** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.

other features







advanced calling






features
voice dial a number not stored in the phonebook (digit dial)
Press and hold  .
When prompted, say “ digit dial ” (within two seconds). When prompted again, say the digits you want to dial (within two seconds per digit).
Your phone recognises the digits you want. To voice dial a phonebook entry, see page 74.









features
adapt your voice dial
You can improve voice dial operations by training the phone to recognise your voice.
 >  Settings > Personalise > Voice Dial setup > Adapt digits
attach a phone number 
Dial an area code or prefix for a phonebook number, then press Options > Attach Number .









features
notepad
Press  > Recent Calls , press the Options key, then > Notepad .
<ul style="list-style-type: none">To call the number, press .To create a phonebook entry with the number in the No. field, press the Store key.To open the Dialling Menu to attach a number or insert a special character, press Options.
international calls 
If your phone service includes international dialling, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.









features
hold a call
Press Options > Hold to put all active calls on hold.
mute a call
Press the Mute key (if available) or Options > Mute to put all active calls on mute.

features
call waiting 
When you're on a call, you'll hear an alert if you receive a second call.
Press  to answer the new call.
<ul style="list-style-type: none">To switch between calls, press the Switch key.To connect the two calls, press the Link key.To end the call on hold, press Options > End Call on Hold.
To turn the call waiting feature on or off, press  >  Settings > In-Call Setup > Call Waiting > On or Off .
conference call 
During a call:
Dial next number, press  , press the Link key.





features
transfer a call 
During a call:
Options > Transfer , dial transfer number, press  .
automatic call diverting 
Set up or cancel automatic call diverting:
 >  Settings > Call Divert
Choose Voice Calls or Video Calls to set up diverting, or Cancel All to cancel diverting.
You can set how long your phone waits before it diverts a call (5, 10, 15, 20, or 25 seconds).

features
manual call diverting 
You can set your phone to divert an incoming call only when you press a key.
To set the number where your phone diverts the calls:
 >  Settings > Call Divert > Push to Call Fwd No. , and enter the phone number
To choose which key you press to divert incoming calls:
 >  Settings > Personalise > Home Screen > Home Keys , select one of the key presses in the list, and then select Push to Call Forward
restrict calls 
Restrict outgoing or incoming calls:
 >  Settings > Security > Restrict Calls
Tell your phone to allow All , None , or only the calls from your Phonebook .

features
call barring 
Restrict your voice or video calls to block all calls, international calls, or all calls except ones on your home network.
 >  Settings > Security > Call Barring
fixed dial 
When you turn on fixed dialling, you can call only numbers stored in the fixed dial list.
Turn fixed dialling on or off:
 >  Settings > Security > Fixed Dial
Use the fixed dial list:
 >  Tools > Dialling Services > Fixed Dial


features
<p>service dial </p> <p>Your service provider might give you phone numbers for taxi companies or other services. These phone numbers are stored on your SIM card. To see them:</p> <p> >  Tools > Dialling Services > Service Dial</p>
<p>quick dial </p> <p>Dial preprogrammed phone numbers:</p> <p> >  Tools > Dialling Services > Quick Dial</p>
<p>DTMF tones</p> <p>Activate DTMF tones:</p> <p> >  Settings > Initial Setup > DTMF</p> <p>To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press Options > Send Tones.</p>





74 other features—phonebook





 
features
<p>set ringer ID for a phonebook entry</p> <p>Assign a ring alert (ringer ID) to an entry:</p> <p> >  Phonebook > <i>entry</i>, then press Options > Edit Contact > Ringer ID > <i>ringer name</i></p> <p>Note: The Ringer ID option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 78.</p> <p>Activate ringer IDs:</p> <p> >  Settings > Ring Styles > <i>style Detail</i> > Ringer IDs</p>

76 other features—phonebook




 
phonebook

features
<p>voice dial a phonebook entry (name dial)</p> <p>Voice dial a number stored in the phonebook:</p> <p>Press and hold .</p> <p>When prompted, say “name dial” (within two seconds). When prompted again, say the entry’s name (within two seconds).</p> <p>Your phone matches your voice to a phonebook entry name. To voice dial a number not stored in the phonebook, see page 70.</p>

 



features
<p>set picture ID for a phonebook entry</p> <p>Assign a photo or picture to show when you receive a call from an entry:</p> <p> >  Phonebook > <i>entry</i>, then press Options > Edit Contact > Picture > <i>picture name</i></p> <p>Note: The Picture option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 78.</p>
<p>set picture ID view for phonebook</p> <p>Show entries as a text list, or with picture caller ID photos:</p> <p> >  Phonebook, then press Options > Setup > View by > <i>view name</i></p>





features
<p>speed dial a phonebook entry</p> <p>You can assign the keys  to  to phonebook entries. Then, when you press and hold a key, your phone calls the entry.</p> <p>Note: Your service provider might have assigned some keys, such as  for your voicemail number. You can only speed dial phonebook entries that are stored on your phone (not on your SIM card).</p> <p>To assign a speed dial key, press  >  Phonebook and scroll to the phonebook entry. Then, press Options > Add to Speed Dial and pick a speed dial key.</p> <p>To use a speed dial key, just press and hold the key while in your home screen.</p>

other features—phonebook 75

 features
<p>set category for a phonebook entry</p> <p> >  Phonebook > <i>entry</i>, then press Options > Edit Contact > Category > <i>category name</i></p> <p>Note: The Category option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 78.</p> <p>When you open your phonebook, press  or  to see your categories.</p>

other features—phonebook 77

 features
<p>edit or delete a phonebook entry</p> <p>Edit a number stored in the phonebook:</p> <p> >  Phonebook, scroll to the phonebook entry, and press Options. You can select Edit Contact, Delete, or other options.</p> <p>Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press  and  to see the entries you use frequently or entries in other categories.</p>

features
<p>set category view for phonebook</p> <p> >  Phonebook, then press Options > Filter by > Category > <i>category name</i></p> <p>You can show all entries, entries in a predefined category (Business, Personal, General, VIP), or entries in a category you create.</p> <p>Shortcut: When you open your phonebook, press  or  to see your categories.</p>

features

create group mailing list

You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:

• > ☰ Phonebook, then press **Options > Create New > Message List**

You can select the list name as an address for multimedia messages.

Note: A **Message List** cannot include entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 78

sort phonebook list

Set the order in which entries are listed:

• > ☰ Phonebook, then press **Options > Setup > Sort by > sort order**

You can sort the phonebook list by **First Name** or **Last Name**.

features

copy one phonebook entry

Copy an entry from the phone to the SIM card, or from the SIM card to the phone:

• > ☰ Phonebook, scroll to the entry, press **Options > Copy to SIM Card** or **Copy to Phone**

copy multiple phonebook entries

Copy multiple phonebook entries between the phone and SIM card:

• > ☰ Phonebook, scroll to one entry, press **Options > Select Multiple to**, then select **Copy to SIM Card** or **Copy to Phone**


features

send phonebook entry to another device

Send a phonebook entry to another phone, computer, or device:

• > ☰ Phonebook, scroll to the entry, press **Options > Send Contact**

For more information about copying files to another device, see page 29.

print phonebook entry over Bluetooth™ connection 

You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer.

• > ☰ Phonebook

Scroll to the entry you want to print, and press **Options > Select Multiple to > Print**.


You cannot print a **Mailing List**. For more about Bluetooth connections, see page 28.

messages

For basic text message features, see page 41.

Your phone reads message settings from the USIM card. If you put another USIM card in your phone, your phone sends and receives messages for the phone number on the new card.


features

send email 

• > ✉ Messages > Email Msgs > **Create Email**

Note: To use email, you might need to enter a **User ID** and **Password** in your email settings (see page 82).


features

send voice message 


 




• > ✉ Messages > **Create Message > New Voice Msg**

To record the voice message, press the **Record** key, speak, then press the **Stop** key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.

features

read and manage messages 

  
• > ✉ Messages > **Message Inbox**

Icons next to each message indicate if it is read  or unread . Icons can also indicate if the message is locked , urgent , or low priority , or if it has an attachment .

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.

To open a message, press •. Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.


features

read and manage email 

• > ✉ Messages > **Email Msgs**

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.


To open a message, press •. Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

store message objects 

Go to a multimedia message page, or scroll to an object in a message, then:

Options > Store

features


print message over Bluetooth™ connection 


You can use a Bluetooth wireless connection to send a message from your phone to a printer.



• > ✉ Messages > **Message Inbox**, **Email Msgs**, **Outbox**, or **Drafts**

Scroll to the message you want to print and press **Options > Print**.

You cannot print message **Templates**. For more about Bluetooth connections, see page 28.

features
store text messages on your SIM card 
To store incoming text messages on your SIM card, press:
<ul style="list-style-type: none"> • > Messages, then press Options > Setup > Message Setup > Text Msg Setup > Default Storage > SIM Card.

features
edit email settings 
You can edit the settings for your Email connections. To use email, you need to store your email User ID and Password .
<ul style="list-style-type: none"> • > Messages, then press Options > Setup > Email Msg Setup > Account Settings
If you have more than one email account, select an account to edit.
Your phone shows a list of email settings. Here is where you store your email User ID and Password .
Note: To create a new account, select New Entry in the Account Settings list. Your display shows a folder for each email account under • > Messages > Email Msgs.



features
browser messages 
Read messages received by your micro-browser:
<ul style="list-style-type: none"> • > Messages > Browser Messages
info services 
Read subscription-based information services messages:
<ul style="list-style-type: none"> • > Messages > Info Services

personalising

features
language
Set menu language:
<ul style="list-style-type: none"> • > Settings > Initial Setup > Language


features
scroll
Set the scroll bar to Up/Down or Wrap Around in menu lists:
<ul style="list-style-type: none"> • > Settings > Initial Setup > Scroll
activate ringer IDs
Activate ringer IDs assigned to phonebook entries and categories:
<ul style="list-style-type: none"> • > Settings > Ring Styles > <i>style</i> Detail > Ringer IDs
ring volume
<ul style="list-style-type: none"> • > Settings > Ring Styles > <i>style</i> Detail > Ring Volume
keypad volume
<ul style="list-style-type: none"> • > Settings > Ring Styles > <i>style</i> Detail > Key Volume

features
reminders
Set reminder alerts for messages that you receive:
<ul style="list-style-type: none"> • > Settings > Ring Styles > <i>style</i> Detail > Reminders
menu view
Show the main menu as graphic icons or as a text-based list:
<ul style="list-style-type: none"> • > Settings > Personalise > Main Menu > View
main menu
Reorder your phone's main menu:
<ul style="list-style-type: none"> • > Settings > Personalise > Main Menu > Reorder




features
show/hide menu icons 
Show or hide menu feature icons in the home screen:
<ul style="list-style-type: none"> • > Settings > Personalise > Home Screen > Home Keys > Icons
change home keys 
Change features for the soft keys, navigation key, and smart key in the home screen:
<ul style="list-style-type: none"> • > Settings > Personalise > Home Screen > Home Keys
master reset
Reset all options except unlock code, security code, and lifetime timer:
<ul style="list-style-type: none"> • > Settings > Initial Setup > Master Reset

features
master clear
Caution: Master clear erases all information you have entered (including phonebook and datebook entries) and content you have downloaded (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.
<ul style="list-style-type: none"> • > Settings > Initial Setup > Master Clear

call times & costs


Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.







The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features
call times 
Show call timers:
<ul style="list-style-type: none"> • > Recent Calls, press the Options key, then > Call Times
in-call timer 
Show time or cost information during a call:
<ul style="list-style-type: none"> • > Settings > In-Call Setup > In-Call Timer
call cost 
Show call cost trackers:
<ul style="list-style-type: none"> • > Recent Calls, press the Options key, then > Call Cost

handsfree



Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.



features
speakerphone 
Activate the speakerphone during a call: Press the Speaker key (if available, or Options > Speakerphone On).


 
features
auto answer (car kit or headset) 
Automatically answer calls when connected to a car kit or headset: • >  Settings > Car Settings or Headset > Auto Answer
voice dial (headset) 
Enable voice dial with headset send/end key: • >  Settings > Headset > Voice Dial
auto handsfree (car kit) 
Automatically route calls to a car kit when connected: • >  Settings > Car Settings > Auto Handsfree



data calls

To connect your phone with a USB cable, see page 46.



features
send data 
Connect your phone to the device, then place the call through the device application.
receive data 
Connect your phone to the device, then answer the call through the device application.

features
setting up Exchange ActiveSync 
You can use the Internet to synchronise your phone's phonebook and datebook entries with an email account on a Microsoft® Exchange 2003 Server. You need to know the email account's user name and password , the Microsoft® Exchange server name , and the user domain name . Confirm that the Mobility option is enabled on the email account, and that data service is activated with your phone service provider. To set up an ActiveSync partner, press • >  Settings > Connection > MOTOSYNC > Exchange , press the Options key, then > Setup . Enter the server details, including Server Name , Domain , and the Web Session to use. To set up a Web Session , see page 93.


features
using Exchange ActiveSync 
Once you set up an Exchange ActiveSync partner, you can schedule your phone to synchronise with the account automatically. To schedule synchronisation, press • >  Settings > Connection > MOTOSYNC > Exchange , press the Options key, then > Auto Sync Setup . Enter the time and days you want your phone to synchronise.


 
features
software update 
Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to download it and install it later. To install a software update you downloaded: • >  Settings > Phone Status > Software Update > Update Now


network

features
network settings 
See network information and adjust network settings: • >  Settings > Network


personal organiser

features
set alarm
• >  Tools > Alarm Clock

features
turn off alarm
When an alarm happens: To turn off the alarm, press the Disable key or  . To set an eight-minute delay, press the Snooze key. Note: The Snooze key is available only if the phone is already powered on when the alarm sounds.
add new datebook event or task
Your datebook can store events (with a start and end time that can repeat) or tasks (with a due date). • >  Tools > Calendar , scroll to the day, press •, press Options > Create New Event or Create New Task

features
see datebook event or task
See or edit event or task details: • >  Tools > Calendar , scroll to the day, press •. Tip: Keeping up with life can be tough work. To see a list of your upcoming events or tasks, open the datebook and press Options > View > Organised Events or Organised Tasks .

features
<p>change datebook settings</p> <p>☛ > ☞ Tools > Calendar, then press Options > Setup</p> <p>You can choose the Default View that appears when you open your datebook, and you can show or hide the Tasks On Day View. You can tell your phone to Power On if it is turned off when a datebook alert occurs. Turn on Lunar Calendar if you do not want to use a solar calendar.</p>
<p>event reminder</p> <p>When an event reminder happens: To see reminder details, press the View key. To close the reminder, press the Back key.</p>

features
<p>send datebook event to another device</p> <p>Send a datebook event to another phone, computer, or device:</p> <p>☛ > ☞ Tools > Calendar, scroll to the day, press ☛, scroll to the event, press Options > Send</p>
<p>print datebook month, week, or day over Bluetooth™ connection </p> <p>You can use a Bluetooth wireless connection to send a datebook month, week, or day from your phone to a printer.</p> <p>☛ > ☞ Tools > Calendar</p> <p>Go to the month, week, or day view and press Options > Print.</p> <p>For more about Bluetooth connections, see page 28.</p>

features
<p>create voice record</p> <p>☛ > ☞ Multimedia > Voice Record</p> <p>Press ☛. When prompted, speak into the phone.</p> <p>Note: Recording phone calls is subject to varying Laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.</p>
<p>play voice record</p> <p>Play back a voice record:</p> <p>☛ > ☞ Multimedia > Media Finder > Voice Record > All Voice Records > <i>voice record</i></p>
<p>calculator</p> <p>☛ > ☞ Tools > Calculator</p>

features
<p>currency converter</p> <p>☛ > ☞ Tools > Calculator, then press Options > Exchange Rate</p> <p>Enter exchange rate, press the Ok key, enter amount, and press Options > Convert Currency.</p>

security


features
<p>SIM PIN</p> <p>Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows SIM Blocked.</p> <p>Lock or unlock the SIM card:</p> <p>☛ > ☞ Settings > Security > SIM PIN</p>

features
<p>lock feature</p> <p>☛ > ☞ Settings > Security > Lock Application</p>




fun & games







 
 
Note: Icons next to a picture, sound, or other object can indicate if the file is locked (🔒), or if it is stored on your phone (📱) or on your memory card (💾).





For basic information on the camera, see page 37.

features
<p>view, delete, or manage pictures</p> <p>Manage photos, pictures, and animations:</p> <p>☛ > ☞ Multimedia > Media Finder > Pictures > All Pictures</p> <p>To copy or move a file from your memory card (💾) to your phone memory (📱), highlight it in the list and press Options > Manage > Copy or Move > Memory Card. You cannot copy or move some copyrighted files. </p>

features
<p>view, delete, or manage video clips</p> <p>☛ > ☞ Multimedia > Media Finder > Videos > All Videos</p> <p>To copy or move a file from your memory card (💾) to your phone memory (📱), highlight it in the list and press Options > Manage > Copy or Move > Memory Card. You cannot copy or move some copyrighted files. </p>
<p>start micro-browser </p> <p>Just press 🌐.</p> <p>Your phone reads micro-browser settings from the USIM card. When you remove the USIM card, your phone clears the browser cache. To edit your settings, press ☛ > ☞ WebAccess > Web Sessions.</p>

features
<p>download objects from Web page </p> <p>Download a picture, sound, or other object from a Web page:</p> <p>Press 🌐, go to the page that links to the file, scroll to the link, and select it.</p> <p>Note: Normal airtime and/or carrier usage charges apply.</p>
<p>Web sessions </p> <p>A <i>Web Session</i> stores settings that your phone uses to access the Internet. To select or create a Web session:</p> <p>☛ > ☞ WebAccess > Web Sessions</p>
<p>clear micro-browser history </p> <p>Clear the micro-browser's history, cache, or cookies:</p> <p>☛ > ☞ WebAccess > Browser Setup > Clear History, Reset Cache, or Clear Cookies</p>

features	
<p>download game or application </p> <p>You can download a Java™ game or application the same way you download pictures or other objects:</p> <p>Press , go to the page that links to the file, scroll to the link, and select it.</p> <p>Note: Normal airtime and/or carrier usage charges apply.</p>	
<p>start game or application </p> <p>Start a Java™ game or application:</p> <p> >  Games & Apps, scroll to the game or application, press the centre key .</p> <p>Note: To install and run games stored on your memory card, press  >  Games & Apps > [Install New].</p>	

features	
<p>aeroplane mode</p> <p>You can switch your phone to aeroplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an aeroplane, without interfering with aeroplane communications.</p> <p> >  Aeroplane Mode > Aeroplane Mode > On</p> <p>You can make the aeroplane mode option appear whenever you turn on your phone:</p> <p> >  Aeroplane Mode > Prompt At Startup > On</p>	

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.47 W/kg.¹ As

mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 1.17 W/kg.¹

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

-
1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
 2. Please see the Safety and General Information section about body worn operation.

Information from the World Health Organisation

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information:
<http://www.who.int./peh-emf>

index

A

accessories 22, 86
accessory connector port 1
active line indicator 51
aeroplane mode 94
alarm clock 88, 89
alarm indicator 51
alert
 lights 61
 set 56, 57, 60
 turn off 56, 60, 65
animation 92
answer a call 26, 64
attach a number 66, 70
audio player 34

98 index

international access code 71
iTAP text entry mode 53

J

Java applications 94

K

keypad 64, 83

L

language 83
licences 45
light 61
linking. See Bluetooth connection
lock
 application 92
 phone 58
 SIM card 91
Low Battery message 51

100 index

B

backlight 63
battery 24, 25
 extending battery life 23
battery indicator 51
battery life, extending 62, 63, 64
Bluetooth connection
 datebook entry, printing 90
 datebook entry, sending 90
 description 28
 indicator 29, 34
 messages, printing 81
 phonebook entries 79
 restricting access 33
brightness 63

M

make a call 26
master clear 85
master reset 84
Media Finder 34
memory card 43
menu 3, 22, 49, 83, 84
menu icons 49, 84
message 80, 82
message alerts 60
message indicator 42, 51
message reminders 84
micro-browser 83, 93, 94
Missed Calls message 67
MMS, defined 42
MP3 sound files 34, 35
multimedia message 41, 80, 82
mute a call 71

browser messages 83
browser. See micro-browser

C

cables 46
calculator 91
call
 answering 26, 64
 barring 58, 73
 diverting 72, 73
 end 26
 ending 26, 41
 making 26
 timers 85
 waiting 72
call divert indicator 51
caller ID 66, 67, 76
camera 37

N

name dial 74
navigation key 1, 22, 56
network settings 88
notepad 71
number. See phone number
numeric entry mode 55

O

object exchange 29
open to answer 64
optional accessory 22
optional feature 22

P

pairing. See Bluetooth connection
passwords. See codes
personalise 83
phone number 27
phonebook 66, 70, 74, 75

car kit 86
categories 77
center key 1
centre key 56
centre select key 22
clock 61
codes 57, 58
conference call 72
copy files 29
copyrighted files 45
costs, tracking 85

D

data call 87
data indicator 50
date, setting 61
datebook 89, 90
dial a phone number 26, 73, 74
dialled calls 65
digit dial 70
digital audio 34

photo 37, 92
picture 92
picture ID 67, 76
PIN code 25, 58, 91
PIN2 code 58
power key 1, 25, 26
printing 31

Q

quick dial 74

R

received calls 65
recent calls 65
redial 67
reminders 84
restrict calls 73
return a call 67
ring lights 61
ring style indicator 51
ring style, setting 56, 57, 60

display 3, 48, 63
divert calls 72, 73
downloaded files
 from Web pages 93
 in messages 81
DTMF tones 66, 74

E

earpiece volume 56
EDGE indicator 49
email
 reading and managing 81
 sending 79
 settings 82
emergency number 68
end a call 26, 41
end key 1, 26
Enter Unlock Code message 58
event lights 61
external display 39, 57

ringer ID 67, 76, 83
ringer volume 56, 83
roam indicator 50

S

screen saver 62
scrolling 83
security code 57
send key 1, 26
service dial 74
signal strength indicator 49
SIM Blocked message 25, 91
SIM card 22, 25, 58, 74, 82, 91
skin 63
smart key 56, 57, 84
soft keys 1, 49, 84
software update 88
speakerphone 86
speed dial 75
store your number 27
symbol entry mode 55

F

fax call 87
fixed dial 73
flip 26, 64

G

games 94
GPRS indicator 49
group mailing list 78

H

handsfree speaker 57
headset 86
headset jack 1
hold a call 71
home screen 3, 48, 84

I

in-call indicator 51
Incoming Call message 67
information services 83

index 99

synchronising 87, 88

T

tap text entry mode 54
telephone number. See phone number
text entry 52
text message 80, 82
theme 63
time, setting 61
timers 85
transfer a call 72
turn on/off 25

U

unlock
 application 92
 phone 25, 58
 SIM card 91
unlock code 57, 58
USB cables 46

index 101

V

video clip 93
videos 40
voice dial 70, 74, 86
voice message 80
voice record 91
voicemail 68
voicemail message indicator
 51, 68
volume 56, 83

W

wallpaper 62
Web pages 93
Web sessions 93
WHO information 97

Y

your phone number 27

6803513F08