



MOTO[™] VE465

Quick Start Guide

congratulations!

Congratulations on your new **MOTO™** VE465 CDMA wireless phone! Its rugged, sporty design fits your energetic lifestyle.

- **Rich Multimedia** — Take pictures and video in a snap with the 1.3 megapixel camera with 4x digital zoom. Listen to your favorite music with the digital music player, and watch your music come to life with stunning visual effects.
- **Features at Your Fingertips** — Use the external control buttons to activate and control the music player, turn Bluetooth power on and off, or mute the phone, without opening the flip.

more information

To learn even more about your phone and accessories, go to www.motorola.com/support.

Caution: Before using your phone for the first time, please read the important **legal and safety** information at the back of your *User's Guide*.

 
contents

your phone	4
main menu	6
settings menu	7
let's go	8
basics	9
turn it on & off	9
make & answer calls	9
end a call	10
store a phone number	10
call a stored number	11
personalize	12
home screen shortcuts	12
ringtones	13
wallpaper	16
skins	17
external control buttons	18
using external buttons	18
mute button	19
Bluetooth® power button	20
music player buttons	20


music	21
introduction	21
play music—flip closed	21
play music—flip open.	23
playlists	27
wake up music player	28
customize music player	29
music player tips	29
accessories	30

your phone

the important keys & connectors

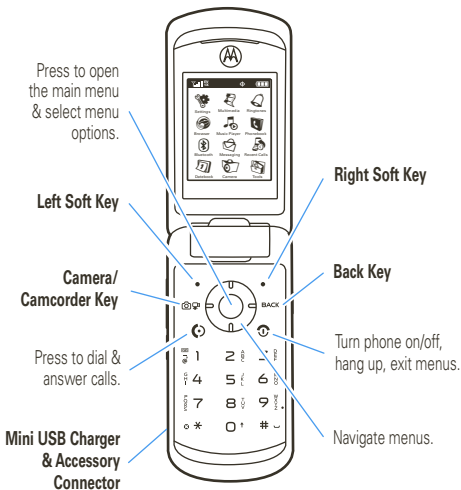

your phone

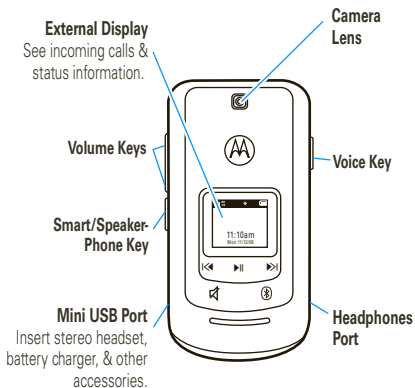 

To use the external control buttons, see page 18.

main menu



Settings

- (see next page)



Multimedia

- Music & Sounds
- Camera
- Pictures
- Camcorder
- Videos
- Storage Device



Ringtones



Browser



Music Player



Phonebook



Bluetooth®



Messaging

- Voicemail
- Create Message
- Inbox
- Outbox
- Drafts



Recent Calls

- Received Calls
- Missed Calls
- Dialed Calls
- All Calls
- Timers



Datebook



Camera



Tools

- Voice Commands
- Datebook
- Alarm Clock
- World Clock
- Calculator
- Notepad

This is the standard main menu layout.

Your phone's menu may be different.

settings menu

 
- **Sounds**
 - Call Ringtone
 - Message Ringtone
 - Voicemail Ringtone
 - Ring & Vibrate
 - Alert Reminders
 - Service Alerts
 - Power On/Off
 - Voice Readout
 - Keypad Volume
 - Volume Sidekeys
- **Display**
 - Banner
 - Backlight
 - Brightness
 - Wallpaper
 - Skins
 - Clock Format
- **Phone**
 - Airplane Mode
 - Shortcuts
 - Language
 - Location
 - Security
 - Network Selection
 - Active Line
 - Text Learning
- **Call**
 - Answer Options
 - Auto Retry
 - TTY Setup
 - One Touch Dial
 - Int'l Dialing
 - DTMF Tones
 - Hearing Aid
- **USB**
 - Mass Storage
 - Modem/COM
- **Bluetooth**
 - Add New Device
- **Storage Device**
 - Save Options*
 - Phone Memory
 - Memory Card*
- **Phone Info**

* available only when optional memory card installed


let's go

let's get you up & running


- 1** Cover




- 2** microSD

 

- 3** Battery

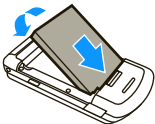 

- 4** Replace cover

 

- 5** Charge



- Remove microSD




 
Caution: See your *User's Guide* for battery use & safety information.

basics


here are some basics to get you started

turn it on & off


Press and hold  for a few seconds or until the display turns on.



make & answer calls


To make a call, enter a phone number and press .



To answer a call, when your phone rings and/or vibrates, just open the flip or press .





Note: Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances. Check with your service provider, as emergency numbers vary by country. Your phone may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Do not solely rely on your wireless phone for essential communications, such as medical emergencies.

end a call



To **hang up**, close the flip or press .


store a phone number

To store a phone number in your **Phonebook**:

- 1 Enter a phone number in the home screen.
- 2 Press **Save**.
- 3 With **Create New Contact** highlighted, press .
- 4 Set the number type (**Mobile 1**, **Mobile 2**, **Home**, **Work**, or **Fax**) and press .
- 5 Enter a name for the phone number, and enter other information as desired. (Press  up or down to highlight entry areas. To select a highlighted entry area, press .)
- 6 Press **Save** to store the entry.

call a stored number

Find it:  >  Phonebook

- 1 Scroll to **Contact List** and press .
- 2 Scroll to the contact you want to call.

Shortcut: In your **Contact List**, use the keypad to enter the first letters of a contact you want.

- 3 Press  to call the contact.

personalize

go ahead, add your personal touch...

home screen shortcuts

From the home screen, press the navigation key up, down, left, or right to go directly to your favorite features.

 
To change the home screen shortcuts:

Find it:  >  **Settings** > **Phone** > **Shortcuts**

Select a direction, then choose the feature you want to access when you press the navigation key in that direction.

You can **show** or **hide** the icons in the home screen that indicate the shortcuts for the navigation key.

Find it:  >  **Settings** > **Phone** > **Shortcuts** > **Show Shortcuts**

Note: You can press  to select the features in the home screen even when the icons are hidden.

personalize

 
ringtones

To set ringtones for incoming calls and for other events (such as new messages):

Set **Master Volume** to **High**, **Med High**, **Medium**, **Low Med**, **Low**, **Vibrate Only**, **Alarm Only**, **1 Beep**, or **All sounds off**. Then, select and assign ringtones.

set master volume

From the home screen, press the volume keys up or down to select a **Master Volume** setting:

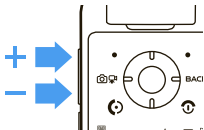

High, **Med High**, **Medium**, **Low Med**, **Low**—Phone rings for incoming calls and other events, depending on the detail settings.



1 Beep—Phone beeps once to indicate an incoming call.

Vibrate Only—Phone vibrates to indicate an incoming call.

Alarm Only—Phone plays an audible alarm to alert you to events. You can't change detail settings for events.



All sounds off—Phone does not alert you to incoming calls and events.

set ringtones


Tip: You can also set ringtones by pressing  >  **Ringtones**, scrolling to a ringtone and pressing **Set As**, then selecting the ringtone type.

To set ringtones **for calls**:

Find it:  >  **Settings** > **Sounds** > **Call Ringtone**

- 1** Press  to acknowledge the **Shuffle Multiple** message.
- 2** Select **Single Tone** to assign a single ringtone to incoming calls, then scroll to the ringtone you want and press .

Note: Your phone plays each ringtone you highlight.

Select **Shuffle Multiple** to select downloaded ringtones to play randomly for incoming calls. Scroll to each downloaded ringtone you want and press . When you finish selecting ringtones, press **Done**.


Note: **Phonebook** entries with assigned Ringer IDs will not be affected. **Shuffle Multiple** works only with downloaded ringtones and depletes your battery's charge more quickly than **Single Tone**.

- 3** Press  to return to the home screen.

personalize

To set ringtones for **incoming text, multimedia, or voicemail messages**:

Find it:  >  Settings > Sounds

- 1 Select **Message Ringtone** or **Voicemail Ringtone**.
- 2 Scroll to the ringtone you want and press .

Note: Your phone plays each ringtone you highlight.

- 3 Press  to return to the home screen.

buy ringtones

Find it:  >  Settings > Sounds

- 1 Select **Call Ringtone** and then **Single Tone**, or select **Message Ringtone** or **Voicemail Ringtone**.
- 2 Select **Buy Ringtone**.




Your phone connects to the ringtone collections Web site. Follow the prompts to browse ringtone lists and to buy and download a ringtone.



Note: Normal airtime and/or carrier usage charges apply.

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Find it:  >  **Settings** > **Display** > **Wallpaper**

- 1** Select **Main Screen** (the screen you see when the flip is open) or **Front Screen** (the screen you see with the flip closed) and press .
- 2** To assign a single picture as a wallpaper, select **Single** and press , then scroll to the picture you want and press .



To select downloaded or captured pictures to be shown randomly as wallpapers, select **Shuffle Multiple** and press , then scroll to each downloaded or captured picture you want and press . When you finish selecting pictures, press **Done**.

- 3** Press  to return to the home screen.

skins

Set the overall look and feel of your phone's screen.

Find it:  >  **Settings** > **Display** > **Skins**

 
- 1** Scroll to the name of a skin and press .
- 2** Press  to return to the main screen.

external control buttons

press & go ...

using external buttons

With your phone's flip closed, you can use external control buttons to play music, turn on Bluetooth® power, or mute the phone.

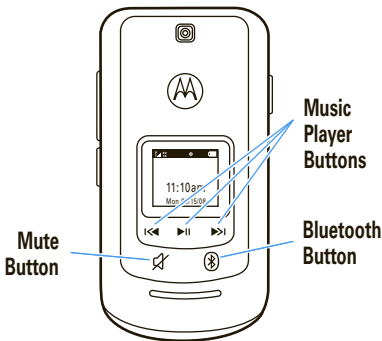



If the external display times out while you are using the external control buttons, press the smart/speakerphone key to turn it back on.

external control buttons

Tip: Lock the external control buttons when not using them so you don't accidentally activate them when the flip is closed. To lock the buttons, press and hold the smart/speakerphone key. Press and hold the smart/speakerphone key again to unlock them.

mute button

During a call, press the mute button  to **mute your voice**. You will still be able to hear the other party. Press the mute button again to unmute your voice.

When the phone is idle (not in a call and not playing music), press and hold the mute button  to **change the Master Volume setting to Vibrate Only**. Press and hold the mute button again to switch back to the previous ringer setting.

external control buttons

Bluetooth® power button

To turn **Bluetooth power on and off**, press the **Bluetooth button** (Ⓜ). For more information on Bluetooth wireless connections, see your *User's Guide*.

music player buttons

To **activate the music player or resume music playback after closing the flip**, press the music player **play/pause** button (▶||). Use the music player touch controls to control music playback (see the next section).

when music is what you need...

introduction

Note: You must have **an optional microSD memory card** installed in your phone to use the music player.

Play your music wherever and whenever you want on your phone's music player.

For instructions on copying music to your phone, see your *User's Guide*.

play music—flip closed

- 1 Unlock the external control buttons, if needed (see page 19).
- 2 Press the smart/speakerphone key to activate the external control buttons.

Note: If the external display is not lit, press the smart/speakerphone key to turn it back on. Press it again to activate the external control buttons.

- 3 Press the play/pause button ▶||.

Your phone displays the **Music Player** menu.

music

To make menu selections:

music buttons	
scroll up/ down through menu	Press ► or ◀.
select menu option	Press ► .



To control music playback:

music buttons	
play/resume play	Press ►.
pause	Press .
fast forward	Press & hold ►► .
next song	Press ►► .
rewind	Press & hold ◀◀ .
previous song	Press ◀◀ .

music

play music—flip open

To activate your phone's music player **while the flip is open**:

Find it:  >  **Music Player**

Your phone shows the **Music Player** menu:



music


The **Music Player** menu includes:

option	
All Songs	Play a song. Note: All songs are listed here. Some songs do not have Artist , Album , or Genre information, so that information is not included.
Playlists	Create or play a playlist.
Artists	Play music by an artist.
Albums	Play music from an album.
Genres	Play music by genre (type of music) such as rock or jazz.

Note: If you can't find artist, album, or genre information for a song in **Artists**, **Albums**, or **Genres**, the information may not be available. All songs, with or without this information, are listed in **All Songs**.

music




 

While a song is playing, the music player shows the song title, artist, and artwork, if available. Your phone's screen will look similar to this:

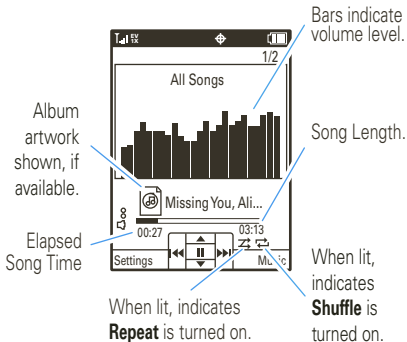

Note: If you receive a call during a song, the music player pauses the song until the call is over.

music

    Use these keys to control music playback:

controls with flip open	
pause/play	Press  . or Press Options and select Pause . Press Resume to resume play.
fast forward	Press & hold  right (for at least two seconds).
next song	Press  right .
rewind	Press & hold  left .
previous song	Within first two seconds of song, press  left .
restart song	After first two seconds of song, press  left .
scroll up/down through list	Press  up or down.
turn off player	Press  .

playlists


Personalize your music collection by creating your own playlists.

When you name a playlist:


- The name must be fewer than 32 characters.
- The name cannot include these characters: / \ : * ? < > | " !

To create a playlist:

Find it:  >  **Music Player** > **Playlists**

- 1 Press **Options** and select **Create Playlist**.
- 2 Enter a name for the playlist and press **Done**.
- 3 With the new playlist highlighted on the **Playlists** screen, press **Options**, then select **Add a Song**. Scroll to a desired song and press .


Repeat this step to add more songs.

- 4 Press  when you finish adding songs.

music

To delete a playlist:

Find it:  >  **Music Player** > **Playlists**

- 1** Scroll to the playlist and press **Options**.
- 2** Scroll to **Delete Playlist** and press .
- 3** When prompted to confirm the deletion, select **Yes**.

wake up music player

While the music player is active, your phone may conserve battery power by turning off the external display and external control buttons (if the flip is closed) or the inside display and keypad backlights (if the flip is open).



To turn displays and lights back on:

flip closed Press any external control button.

flip open Press a number key.

music

customize music player

Find it:  >  Music Player

Press **Settings**, then select one of the following options: **Repeat**, **Shuffle**, **Audio Effects**, and **Visual Effects**.

When you press **Settings** while a song is actively playing, you will also see **Add to Playlist** and **Background Play**.

music player tips

- **Note: Optional accessory required.** Turn off the player before connecting the phone to a computer. If you connect the phone to a computer while the player is turned on, the phone automatically turns off the player.
- **Note: Optional accessory required.** If you use a headset with the phone, music plays through the headset. Music plays through the phone speaker when the headset is disconnected.

accessories



Bluetooth® Wireless
Stereo Headphones S9



Vehicle Power Adapter



Bluetooth® Wireless
Headset H375



Bluetooth® Wireless
Headset H680



Bluetooth® Wireless
Headset H12



Travel Charger

<http://www.hellomoto.com>

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. All other product or service names are the property of their respective owners.

© 2009 Motorola, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68000201511-B

www.motorola.com

