

Social Networking

When you add social networking accounts (like **Facebook** or **MySpace**) to MOTOBLUR, friends appear in your phone's **Contacts**, and updates appear in **Social Status** and **Social Networking** widgets.

Find it: > > **Add account**

Sign into your social networking account with the user name or email and password you set up on that account (the same as on your computer). If you don't have accounts, you can visit their websites to set them up.

To add a **Social Networking** widget, touch and hold a blank spot on your home screen, then touch **Motorola widgets**.

Email & Text Messages

Find it: > > **Universal Inbox**



In your inbox:

€ To create an email, text, or other message, touch **+**. Choose the message type, then enter the recipient and message. In text messages and emails, touch Menu for options.

€ To forward, save attachments, or use other options for a text message, open it, then touch and hold it.



€ To enter names and text with voice recognition, just touch a text box, then touch on the display keypad.

Tip: To turn on/off the green notification light that flashes at the top of your phone, touch Menu > **Settings** > **Display** > **Notification LED**.

Please don't text and drive.

To add email accounts, touch > > **Add account**.

€ **Email** is for most personal and other accounts that are not on a Microsoft® Exchange Server.

To sign into your account, use the user name or email and password that you set up on that account (the same as on your computer). For account details, contact the account provider.

When you sign into your account, you may see your friends and contacts in your **Contacts** list.

 
€ **Corporate Sync** is for work email accounts on a Microsoft® Exchange Server. Enter your user and server details from your business IT department.

Note: This requires an enterprise data plan. Some work accounts might require you to add a password lock to your phone for security.

To change your settings, touch > > Menu .

Photos & Videos


Find it: > > **Camera**

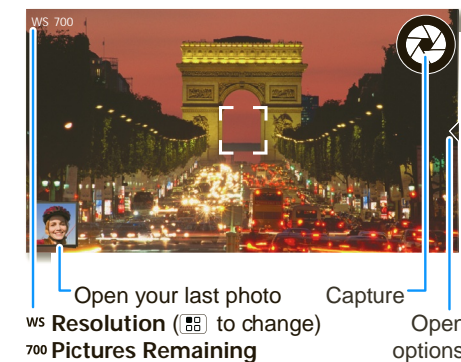

Tip: Touch the screen to open options, then choose the **Front** or **Back** camera.


To open camera **Settings**, touch Menu . Photos are stored on your memory card.

 Find it: > > **Camcorder**

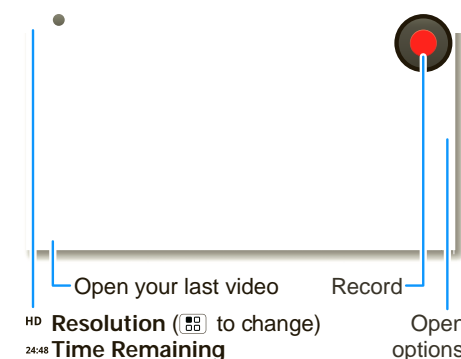


Apps

 Find it: > > **Market**

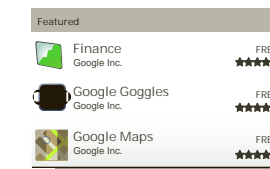

 Touch an app to open its details or install it

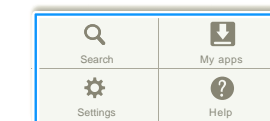

Touch for a menu where you can open search, downloads, or help

€ To find an app, touch the search icon or Menu > **Search**. To download, touch the app.

€ To reinstall downloaded apps or load your apps on a new device, touch **Downloads**.

€ To get help, touch Menu > **Help**.

To manage or remove apps on your phone, touch Menu > **Settings** > **Applications** > **Manage applications**. Touch an app in the list, then touch **Uninstall** (for apps you downloaded), **Clear cache**, or other options.

AT&T Features & Services

€ **AT&T Navigator**™ —Get driving directions quickly and conveniently. AT&T Navigator requires a separate subscription.

€ **AT&T Code Scanner**—View mobile web sites & video clips, get coupons or learn more about your favorite products using 2D QR and Data Matrix barcodes as well as 1D UPC codes that you find in magazines, in stores, and online.

 
€ **U-verse Mobile Live TV**—Transform your phone into a wireless TV. U-verse Mobile Live TV requires a subscription and data plan, and is not available in all areas. Programs are subject to change.

For information on setting up or using these services, visit att.com/Tutorials. To add these services, contact your local AT&T store or call 1-800-331-0500.

Wi-Fi®, DLNA™ & Bluetooth® Connections

Find it: Menu > **Settings** > **Wireless & networks**

€ In **Wi-Fi settings**:

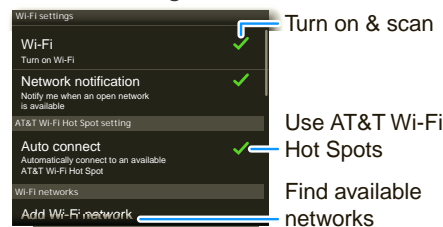

Connect to a Wi-Fi network for faster Internet access and downloads. You can connect to DLNA Certified devices on the network to share media files: > > **Media Share**.

See www.attwifi.com for terms, conditions & charges.

€ In **Bluetooth settings**:

Touch **Bluetooth** to turn it on and scan for a Bluetooth headset or car kit, then touch a device that was found to connect it.

€ In **Mobile hotspot**:

Make your smartphone a mobile hotspot to share broadband with up to 8 Wi-Fi enabled devices. This requires an appropriate data plan with tethering.

Memory Card & USB

You can add more space to store videos, music, and other files by installing a removable microSD memory card.



To manage memory card files, touch > > **Files**. Touch a file or folder to open, touch and hold a file to **Delete** or **Share**.

You can use a USB cable to transfer your pictures, videos, music, ringtones and more, from your computer to the memory card in your phone:

1. Connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer.



2. Your phone should show in the status bar. Flick down the status bar and touch to choose a memory card connection. You should be able to access the memory card from your computer.

Icons & Battery Life

At the top of the screen, icons on the left notify you about new messages or events (flick the bar down for details). Icons on the right tell you about phone status:

	Bluetooth	Wi-Fi
	GPS	flight mode
	silent ring	vibrate ring
	mic mute	speakerphone
	alarm set	network (full)
H+	4G ready	4G transferring
	3G ready	3G transferring
	charging	charged

To get the most out of your battery, touch Menu > **Settings** > **Battery Manager** > **Battery mode**, then choose the best mode for you (for details, touch the icons to the right of each mode).

Be aware that Mobile hotspot usage, videos, music, pictures, and widgets that update can reduce battery life between charges.

Motorola Mobility, Inc.
Consumer Advocacy Office
600 N US Hwy 45
Libertyville, IL 60048
www.motorola.com

Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at: 1-800-734-5870 (United States) 1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)
Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply for voice, messaging, data, and other services. Contact AT&T Mobility for details. 4G speeds delivered by HSPA+ with enhanced backhaul. Available in limited areas. Availability increasing with ongoing backhaul deployment. Learn more at att.com/network.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. Google, the Google logo, Android and Android Market are trademarks of Google, Inc. Service provided by AT&T Mobility. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies. All other product or service names are the property of their respective owners.

© 2011 Motorola, Mobility Inc. Portions © 2011 AT&T Intellectual Property. All rights reserved. Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment. Bluetooth ID: B016890 MOTOROLA ATRIX 4G (MB860) Manual Number: 68014204002-A