



motorola RAZR_{model V3i}



Accessories



Bluetooth® Headset H300*



One Touch Headset HS700



Bluetooth® Headset H500*



RAZR^{WIRE}™ Bluetooth® Eyewear*



Bluetooth® Headset H700*

*Music will not play through these devices.



Leather Carrying Case



Travel Charger CH700



Bluetooth® USB PC Adapter PC850



Motorola Phone Tools Version 4.0



MicroSD Removable Memory Card



EMU Stereo Headset



High Performance Car Charger VC700




Bluetooth® Car Kit IHF1000*

Connections

Tip for Connecting to Charger

- Plug connector into phone
- May take up to 10 seconds for phone to indicate charging
- Remove connector and charger cord when charge complete

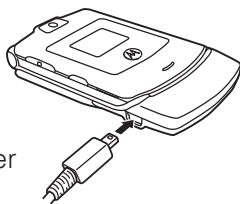

Changing To Memory Card

- Press > Multimedia > Open file list - picture, videos, or sounds
- Press > Switch Storage Device
- Scroll to Memory Card > Select

Personalize

Changing Wallpaper and Screensaver

- Press > Settings > Personalize > Wallpaper or Screensaver > Picture > Change
- Scroll up and down with to Picture > Select

Changing Your Ringtone

- Press > Multimedia > Sounds > scroll to desired ringtone
- Press > Apply as Ring Tone > Select

Video

Playing Video Clip

To play a video clip stored on the phone:

- Press > Multimedia > Videos > Select video clip > Play

Recording a Video Clip

- Press > Multimedia > Video Camera
- Point the camera lens at the video subject
- Press Capture to begin video
- Press Stop
- Press Options to store or send in a message
- Press Discard to delete video

Recording Video Clips and Sending in a Message

- Open phone and press > Multimedia > Video Camera
- Press Capture to begin video recording
- Press Stop to end
- Press Options > Send in a message

If you choose to store the video continue to the next step or delete the video and return to active viewfinder

- Scroll to Send in Message
- Enter text > Send To
- Scroll and press the center of to select address > Send

TIP


Press the center of to quickly save and store video

Voice Commands

Commands can open various applications on the phone.

- To open Camera, Voicemail, Redial, or Received Calls:
- Press and release Voice key
- Phone prompts user to say a command
- Say Command and phone opens application

Make a Call with Voice Commands

- Press and release Voice Button
- Say Name or Digit Dial
- When prompted either say the name of the phonebook entry or say the digits in the phone number
- By training the phone to recognize the voice can improve voice dial.
- Press  > Settings > Personalize > Voice Dial Setup > Adapt Digits


NOTE: The phone will ask for verification after you speak when using Name or Digit Dial.

Bluetooth®

Headset


- The headset must be charged for two hours prior to starting
- The headset must be paired with the phone before it can be used. Please see the Bluetooth Pairing Instructions that came with the headset
- Bluetooth must be turned On in the phone (see following steps)

Turning Bluetooth Power On

- The phone's Bluetooth feature is off by default
- Press  > Settings > Connection > Bluetooth Link > Setup > Power > Change > On

NOTE: Turn Bluetooth power off to extend the battery time

Pair with Headset

- Headset must be powered on and in pair mode
- Press the call button on the headset for 6 to 10 seconds until blue indicator light comes on
- On phone Press  > Settings > Connection > Bluetooth link > Handsfree > [Look for Devices]
- Press OK or Yes to pair
- Enter the pass key 0000 and press OK

NOTE: When headset is successfully paired with phone, the blue indicator light changes from a constant light to a flashing light


NOTE: Music can not be played through the Bluetooth headset


Phone




Getting Started



Install/Remove SIM Card

1. 
2. hold the sim card with the gold plate facing down and slide under the retention bar

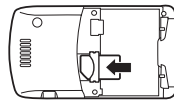



Install/Remove the Battery

1. 
2. align battery contacts to terminals located at the base of the compartment

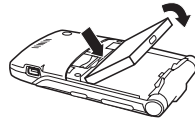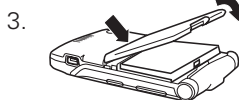

Installing Memory Card

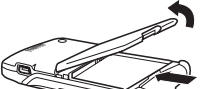

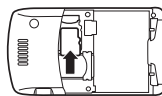1. 
2. slide the memory card with the print facing upwards under the metal clip and into the card slot





TIP

The Memory Card can be removed and replaced with another card without powering the phone off



Turning Phone On and Off

- To turn the phone on, press and hold  for 2 seconds, may take up to 4 seconds for display to illuminate
- To turn the phone off, press and hold 

Methods to Conserve Battery Life

- Disconnect Bluetooth® devices
- Backlight will turn off if no activity is detected
- Decrease time backlight stays lit: Press  > Settings > Initial Setup > Backlight
- Decrease time the display stays on: Press  > Settings > Initial Setup > Display Timeout

Search Phonebook Entry By Name

- Press  > Phonebook >  > Setup > Search Method > Jump To or Find > Jump To
- The Jump To method immediately jumps to entries that begin with the letters on the key
- The Find method: type in the first three letters of the name > Search

iTunes®

Install iTunes

- Install the iTunes software from the CD that came with the phone or download iTunes software for free at www.itunes.com/download
- From computer click on Download iTunes – Free
- Install software version 6.0.1 or later is required to work with the phone.

Operating System – Mac OSX v.10.3.6 or Windows 2000 or XP with latest service pack

iTunes – 6.0.1. or later

Add Songs

- On the computer, add music to the iTunes Music library by importing songs from audio CD's or purchasing music from the iTunes Music Store.
- To import a song from a CD, insert the CD and click the Import CD icon at the top right corner

Transferring Music to Your Phone

Your Motorola phone supports audio files with a bit rate up to 128kbps for AAC format, or 192kbps for MP3 format. Please see the User Guide for the detailed steps on changing default preferences.

Transfer Songs to the Phone

- Connect the phone to computer using the cable that came with phone
- From Computer:
- iTunes will open automatically on the computer
 - The phone will appear as an icon in the source menu. It may take up to one minute for the phone to appear as an icon in the source menu
 - From the library or a playlist drag and drop songs to the phone icon
 - Transfer has finished when computer shows Mobile Phone update is Complete
 - Click on the eject icon on computer, or remove cable from phone when display shows that it is safe to remove

NOTE: *Memory Card must be installed to transfer music*




NOTE: *To transfer music it will take approximately 30-45 seconds for a 4MB song*

Access iTunes


 
- Press 

NOTE: It may take up to 5 seconds for iTunes to launch

Play a Song

- Press  > Scroll to Songs or Playlist
- Press  to the right to view songs
- Scroll with  to song > Play

Play an Entire Album

- Press  > scroll and select Albums, or Artists, or Playlist
- Use the  to scroll right > All > Play

TIP

Phone must be disconnected from computer to play songs



Hide Mode

- While Playing a song in iTunes Press  > Hide

NOTE: For more information on iTunes please go to www.hellomoto.com

Using iTunes in Airplane Mode

To safely access the address book, games, camera, and music in areas where cellular network access is prohibited:




- Press  > Settings > Airplane Mode > Airplane Mode > On/Off
- To be prompted for airplane mode settings each time phone powers on:
- Press  > Settings > Airplane Mode > Prompt at Start Up > On or Off

Imaging


 

Reformatting Your Memory Card

Please reformat the memory card if the phone is having troubling recognizing iTunes or the card. You can reformat your memory card to erase files.

NOTE: When you reformat your memory card, all files stored on the card (music, pictures, videos) will be permanently deleted.

- Press  > Settings > Phone Status > Storage Devices
- Press  to highlight the memory card
- Press  > Format


 
Taking a Picture

- Press  > Multimedia > Camera
- Point Camera lens at the photo subject
- Press  in any direction to adjust Camera Settings
- Press Capture to take a picture
- Press Send to send or press  to Store only


TIP

Press the center of  to quickly save and store photo

Change Picture Resolution




- **NOTE:** Sending a High Resolution picture can be network dependent. It may be necessary to reduce the picture resolution to send via MMS.
- **NOTE:** Need to have your Memory Card installed and set as default storage device in phone to take a High Resolution photo.
- Press  > Multimedia > Camera >  > Pictures Setup > Resolution

Taking a Self Portrait



- With phone closed, press and hold the smart key
- Use the external display to aim the camera
- Press the smart key to take picture
- Open the phone to view picture
- Press center of the  to Store

Messaging

Sending a Message and a Picture Using MMS

- Press  > Messages > Create Message > New Multimedia Message
- Use keypad to enter text
- Press  > Insert > Picture
- Scroll to select picture > Insert
- Finish entering text and press Send To
- Scroll and press the center of  to select address > Send

Creating an SMS

- Press  > Messages > Create a Message > New Short Message
- Enter text and press Send To
- Scroll and press the center of  to select address > Send



If you have any doubts or need advice, we will be pleased to assist you. Visit www.hellomoto.com, which offers several customer service options. You may also contact the Motorola Client Service Centre by dialing 0800 666 8676 (Argentina), 800-201-442 (Chile), 01-800-700-1504 (Colombia), 01 800 021 0000 (México), 0800-100-4289 (Venezuela) or 0-800-52-470 (Perú).

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. The iTunes Trademark is owned by Apple Computer and any use of such marks by Motorola, Inc. is under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners. © Motorola, Inc., 2006. 6809496A63-0