



MOTORAZR™ VE20

User's Guide

HELLOMOTO


Thanks for purchasing the MOTORAZR™ VE20 CDMA wireless phone! It's an affordable phone with a sleek design that's sure to get attention.

Impressive Inside and Out — Sleek styling with all the right features, including rich imaging and multimedia. Take pictures and video in a snap with the 2 megapixel camera with 4x digital zoom. Listen to your favorite music with TELUS mobile music, and watch your music come to life with stunning visual effects.


Features at Your Fingertips — Go to the recent calls list, activate TELUS mobile music, or turn on Bluetooth® power, using external touch sensitive keys with vibrational response.

My Phone, My Way – It's your phone—make it that way. Customize your home screen with personal pictures, change wallpapers, and use your favorite song as your ringtone.

Here's a quick anatomy lesson.

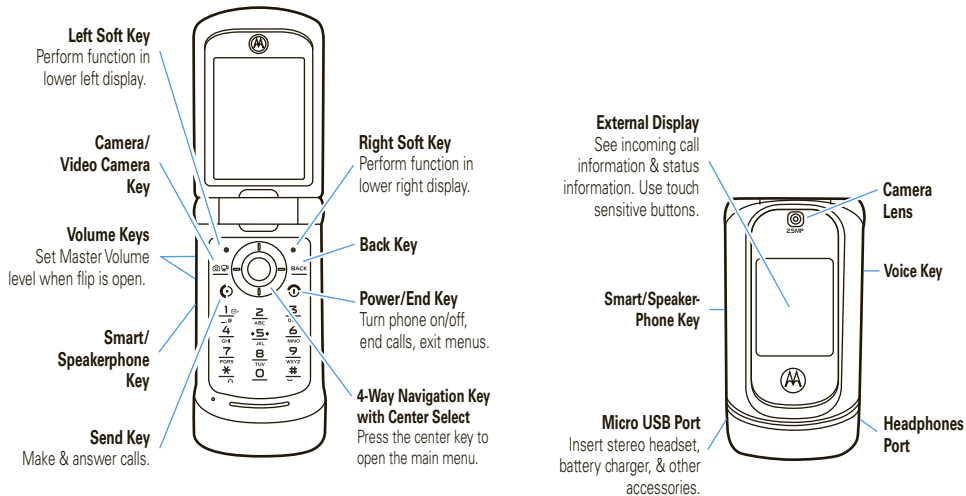


Home Screen

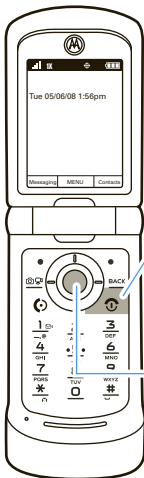

1 Press and hold the **Power Key** (⏻) for a few seconds, or until the display lights up, to turn on your phone.

2 Press the **Menu Key** (☰) to open the **Main Menu**.

Main Menu

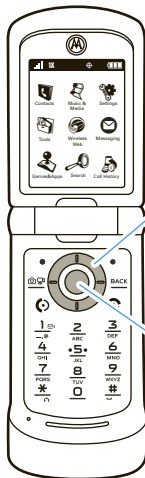

3 Press the **Navigation Key** (⬆️, ⬇️, ⬅️, or ➡️) to highlight a menu feature.

4 Press the **Center Key** (⬇️) to select it.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
www.hellomoto.com

Note: Do not ship your phone to the above address. If you need to return your phone for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Microsoft, Windows and Windows Me are registered trademarks

of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation. TELUS is a trademark of TELUS, Inc. All other product or service names are the property of their respective owners.

© 2008 Motorola, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68000201074-A

contents

menu map	7	if you forget a code	25	ring & vibrate	37
Use and Care	9	lock & unlock phone.	25	answer options	38
get started	10	keypad lock	26	wallpaper	38
about this guide.	10	lock side keys & touch sensitive		skins	39
battery	11	buttons.	27	backlight	39
turn it on & off	16	lock application	28	brightness	39
make & answer calls	16	manage memory	28	banner	39
store a phone number.	16	TTY operation	31	menu language	39
call a stored number	17	airplane mode	32	dial fonts	39
view your phone number ..	17	tips & tricks	33	clock format	40
basics	18	personalize	34	restore phone	40
home screen	18	TELUS Quick Find		AGPS & your location.	40
external display	21	Powered by i QiX™.	34	AGPS limitations & tips ...	41
touch sensitive buttons	22	sounds	35	calls	43
adjust volume	23	voice readout	37	redial a number	43
handsfree	23	key volumes	37	automatic retry	43
codes	25	alert reminders	37	turn off a call alert	43

call history	44	text entry tips	56	personal organizer	85
return a missed call.	45	messages	57	connections	87
speed dial	46	send a multimedia		cable connections	87
one-touch dial	47	message	57	Bluetooth connections	88
emergency calls	47	receive a message	59	service & repairs	94
AGPS during an		instant messaging.	60	SAR Data	95
emergency call	47	voicemail	61	Safety Information	98
attach number.	48	more messaging features . .	61	Industry Canada Notice	102
insert special characters . . .	48	entertainment	64	FCC Notice	102
international calls	49	TELUS mobile music.	64	Warranty	103
hearing aid	49	TELUS mobile radio™	65	Hearing Aids	107
in-call options	49	TELUS mobile TV™	65	WHO Information	108
call times.	49	take photos	65	Registration	108
more calling features	51	record videos.	68	Export Law	109
text entry	52	fun & games	71	Recycling Information	109
set entry modes	53	manage sounds.	75	Perchlorate Label	110
tap mode.	54	tools	77	Privacy and Data Security . .	110
iTAP™ mode	55	voice recognition.	77	Driving Safety	111
numeric mode.	55	contacts	82	index	113
symbol mode	56	network.	84		

menu map

main menu



Contacts



Music & Media

- Telus mobile music
- Telus mobile radio™
- Telus mobile TV™
- Ringtones & Sounds
- Camera
- Pictures
- Video Camera
- Videos
- Storage Device Tools



Settings

- (see next page)



Tools

- Bluetooth
- Voice Commands
- Datebook
- Alarm Clock
- World Clock
- Calculator
- Notepad



Wireless Web



Messaging

- Voicemail
- Create Message
- Inbox
- Messenger
- Outbox
- Drafts
- View Online Album



Games & Apps



Search



Call History

This is the standard main menu layout.
Your phone's menu may be different.

settings menu

- **Sounds**

- Call Ringtone
- Message Ringtone
- Voicemail Ringtone
- Ring & Vibrate
- Alert Reminders
- Service Alerts
- Power On/Off
- Voice Readout
- Keypad Volume
- Volume Sidekeys

- **Display**

- Banner
- Backlight
- Brightness
- Wallpaper
- Skins
- Dial Fonts
- Clock Format

- **Phone**

- Airplane Mode
- Shortcuts
- Language
- Location
- Security
- Network Selection
- Active Line
- Text Learning
- TELUS Quick Find

- **Call**

- Answer Options
- Auto Retry
- TTY Setup
- One Touch Dial
- Int'l Dialing
- DTMF Tones
- Hearing Aid
- Auto Prepend '1'

- **USB Mode**

- Mass Storage
- Modem/COM

- **Phone Info**

- My Number
- SW/HW Version
- Icon Glossary

- **App Settings**

- **Software Update**

* available only when optional memory card installed

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



microwaves

Don't try to dry your phone in a microwave oven.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



the ground

Don't drop your phone.

get started

CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

about this guide





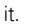
This guide shows how to locate a menu feature as follows:

Find it:  >  Call History > Dialed Calls

This means that, from the home screen:

1 Press the *center key*  to open the menu.

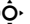10 [get started](#)

- Press the *navigation key*  to scroll to  **Call History**, and press  to select it.
- Press the *navigation key*  to scroll to **Dialed Calls**, and press  to select it.

symbols



This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

battery

conserve battery charge

Using certain features can quickly deplete your battery's charge. **These features can include downloading music, replaying video clips, and using Bluetooth® wireless connections.**

You can conserve your battery's charge by doing the following:

- Turn Bluetooth power off when not in use (see page 88).
- Turn off wallpaper (see page 38).
- Reduce backlight display time (see page 39).

battery use & safety

IMPORTANT: HANDLE AND STORE BATTERIES PROPERLY TO AVOID INJURY OR DAMAGE. Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the phone or battery come in contact with water.** Water can get into the phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your carrier or contact Motorola even if they appear to be working properly.

- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your battery near a heat source.** Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
 - Do **not** dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
 - Avoid leaving your phone in your car in high temperatures.

DOs

- **Do avoid dropping the battery or phone.** Dropping these items, especially on a hard surface, can potentially cause damage.
- **Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures.**

IMPORTANT: USE MOTOROLA ORIGINAL PRODUCTS FOR QUALITY ASSURANCE AND SAFEGUARDS.

To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a “Motorola Original” hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorized Service Center.

Important: Motorola’s warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

PROPER AND SAFE BATTERY DISPOSAL AND RECYCLING

Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbrc.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national






recycling organizations for more information on how to dispose of batteries.

Warning: Never dispose of batteries in a fire because they may explode.


install the battery

- 1 Press the battery cover release button.
- 2 While continuing to press the release button, slide the cover down slightly, then lift it away from the phone.
- 3 With the gold contacts facing down and toward the lower end of the battery, insert the battery, lower end

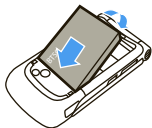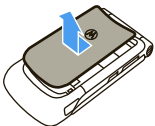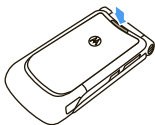

first. Push it completely into place.

- 4 Fit the battery cover back onto the phone and slide it forward into place.

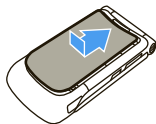


charge the battery

New batteries are not fully charged. Before you can use your phone, you need to install and charge the battery. Some batteries perform best after several full charge/discharge cycles.

To charge using the charger:

- 1 Insert the charger into the micro USB connector on your phone as shown. Plug the other end of the charger into the appropriate electrical outlet.

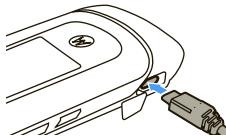

- 2 During charging, the battery level indicator at the upper right of the screen flashes on and off. When charging is complete, **the battery level indicator remains on**. Unplug the charger.

Note: When you charge the battery, the battery level indicator shows charging progress. At least one segment of the indicator must be visible to ensure full phone functionality while charging.

To charge from your computer:



You can charge the battery by connecting a cable from your phone's micro USB port to a high-power USB connector on a computer (not a low-power one, such as the USB connector on your keyboard or bus-powered USB hub). Typically, USB high-power connectors are located directly on your computer.


Both your phone and your computer must be turned on, and you must have correct software drivers installed on your computer. Cables and software


drivers are available in Motorola Original™ data kits, sold separately.


Notes for charging your phone's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.


turn it on & off


To turn on your phone, press and hold  for a few seconds or until the display turns on. If prompted, enter your four-digit unlock code.

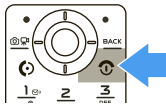


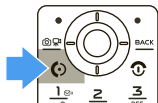
To turn off your phone, press and hold  for two seconds.

make & answer calls

To make a call, enter a phone number and press .

To answer a call, when your phone rings and/or vibrates, just open the flip or press .





To hang up, close the flip or press .



store a phone number


Note: TELUS Quick Find is set to **On** when your phone is shipped. This new feature provides many advantages. See page 34 for more information.

To store a phone number in your **Contacts** when **TELUS Quick Find is set to Off** (see page 34):

- 1 Enter a phone number in the home screen.
- 2 Press **Save**.
- 3 With **Create New Contact** highlighted, press .
- 4 Set the number type (**Mobile 1**, **Mobile 2**, **Home**, **Work**, or **Fax**) and press .
- 5 Enter a name for the phone number, and enter other information as desired. (Press  up or down to highlight entry areas. To select a highlighted entry area, press .)
- 6 Press **Save** to store the entry.

call a stored number

Find it:  >  **Contacts**

- 1 Scroll to **Contact List** and press .
- 2 Scroll to the entry you want to call.



Shortcut: In your **Contact List**, use the keypad to enter the first letters of an entry you want.

- 3 Press  to call the entry.

view your phone number

Find it:  >  **Settings** > **Phone Info** > **My Number**

You will see your phone number at the top of the screen.

You can also view your number by pressing , then .


Tip: Want to see your phone number while you're on a call? Press **Options** > **Phone Info** > **My Number**.

basics

See page 2 for a basic phone diagram.

home screen

The *home screen* displays when you are not on a call or using the menu. You must be in the home screen to make a call.

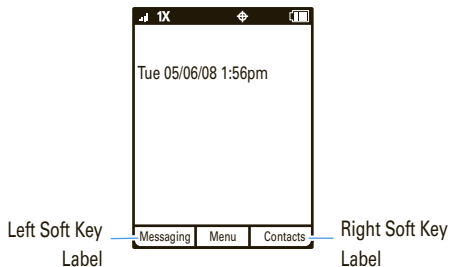

Note: Your home screen may look different than the screen shown here.





Soft key labels show the current soft key functions. For soft key locations, see page 2.




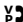



Status indicators can show at the top of the home screen:



















Indicators and alerts are discussed in the next section.



system status indicators

indicator	
	Signal Strength —Vertical bars show the strength of the network connection.
	Digital —Phone is in a CDMA digital coverage area.
EV 	EVDO Coverage —Phone is in an EVDO (fast broadband internet service) coverage area.
1X	1xRTT —Phone is in a 1xRTT coverage area. (1xRTT offers higher voice and data transmission than CDMA.)
EV 1X 	EVDO/ 1xRTT Coverage —Phone is in an area with both EVDO coverage and 1xRTT coverage.

indicator	
	Airplane Mode —Phone's features that require voice or data transmission are turned off (see page 32).
	Roaming —Phone is in a digital coverage area and is roaming off network.
	SSL —Indicates phone is using Secure Sockets Layer (SSL) secure data transmission.
	Voice Privacy —Phone is using a secure channel for a voice call.
	Data Call —Shows during an active data call.
	Dormant —Indicates phone is dormant and PPP session is active.
	No Service —Phone is in area with no service coverage.

indicator	
	TTY —Phone is in TTY mode (see page 31).
	Voice Call —Shows during an active voice call.
	E911 Only —Location is set to Off (E911 Only).
	Location On —Location is set to On.
	Keys/Phone Locked —Phone and/or keypad is locked.
	Battery Level —Shows battery charge level. The more bars, the greater the charge.
	Bluetooth On —Your phone's Bluetooth power is On.
	Bluetooth Active —Your phone is paired to another Bluetooth device.

indicator	
	Bluetooth Connected —Your phone is connected to another Bluetooth device.
	All Sounds Off —Master Volume is set to All Sounds Off (see page 23).
	Alarm Only —Master Volume is set to Alarm Only (see page 23).
	Vibrate Only —Master Volume is set to Vibrate Only (see page 23).
	Speakerphone On —Speakerphone is on.
	Missed Call —Phone received an unanswered call.
	New Message —Phone received a new text message.
	New Calendar Event —A calendar event has been created.

indicator	
	New Voicemail Message —Phone received a new voicemail message.
	Alarm On —An alarm has been set.

home screen shortcuts

From the home screen, you can press the navigation key up, down, left, or right as shortcuts to your favorite features. You can **change** the shortcuts to suit your needs:




Find it:  >  Settings > Phone > Shortcuts

Select a direction, then choose the feature you want to open when you press the navigation key in that direction.


You can **show** or **hide** icons in the home screen that indicate the shortcuts for the navigation key.

Find it:  >  Settings > Phone > Shortcuts
> Show Shortcuts

Note: You can press  to select the features in the home screen even when the icons are hidden.


external display

When you close your phone, the external display shows the time and date, status indicators, notifications for incoming calls and events, and touch sensitive buttons to activate the camera and TELUS mobile music ®. For a list of status indicators, see page 18. For information on touch sensitive buttons, see the next section.

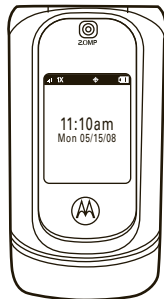

touch sensitive buttons

With your phone's flip closed, you can use touch sensitive buttons to use the camera, play music, or see your call history.

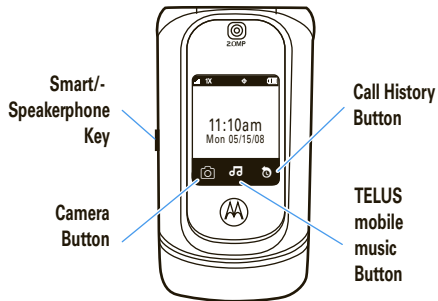

To activate the touch sensitive buttons, press the smart/speakerphone key.


Note: If the external display is not already lit, press the smart/speakerphone key once to turn it back on, and a second time to activate the touch sensitive buttons.

When you press a touch sensitive button or touch control, **you'll feel a vibration** that confirms your selection.

If the external display times out while you are using the touch sensitive buttons or touch controls, **press the smart/speakerphone key** to turn it back on.


Note: Lock the touch sensitive buttons when you aren't using them (see page 27) so you don't accidentally activate them when the flip is closed.

touch camera


To activate the phone's camera, press and hold the camera button . Your phone shows the camera viewfinder screen. Use the camera touch controls to zoom in and out and take a photo (see page 68).




touch music player


To activate TELUS mobile music to resume music playback after closing the flip, press the TELUS


mobile music button . Use the music player touch controls that appear on the screen to control music playback (see your *Getting Started Guide*).

touch call history

To see a list of all recent dialed, received, and missed calls, press the recent calls button . The phone shows the **All Calls** list.

Press  and  to scroll up and down through the list of calls. Press  to call a highlighted number.


To exit the **All Calls** list and return to the idle external display, scroll to  **Back** and press [OK].

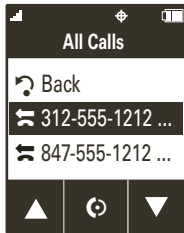

adjust volume

Press the volume keys up or down to:

- turn off an incoming call alert
- adjust the earpiece volume during calls
- change sound settings (see next section)

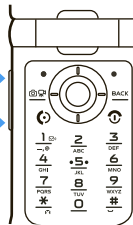


handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.


To activate the handsfree speaker during a call, press and hold the smart/speakerphone key.

You will hear an audible alert, and your phone will show the speakerphone indicator  and **SPEAKER PHONE ON** on the main screen.

The handsfree speaker stays on until you press and hold the smart/speakerphone key again or turn off the phone.

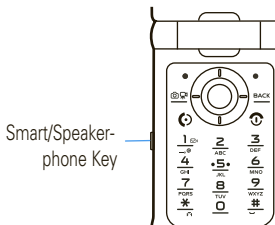

To turn off the handsfree speaker, press and hold the smart/speakerphone key. Your phone will show **SPEAKER PHONE OFF** on the main screen.

To end the call, press the power/end key . You will hear an audible alert.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

accessory volume settings (car kit or headset)



To adjust volume of headsets or car kit accessories that are enabled for Bluetooth wireless connections, press your phone's volume keys up or down during an active call.


codes

Your phone's four-digit **unlock code** is originally set to **1234** or to the **last four digits of your phone number**. The six-digit **security code** is originally set to **183729**. Your service provider may reset these codes before you get your phone.

If your service provider didn't change the unlock code, you should change it to prevent unauthorized use of your phone. The unlock code must contain four digits.

To change the unlock code:

Find it:  >  Settings > Phone > Security

- 1 When prompted, enter the four-digit unlock code and press **Done**.
- 2 With **Edit Lock Code** highlighted, press .
- 3 Enter the new code in both entry fields and press **Done**.

if you forget a code

Your phone's four-digit unlock code is set at the factory to **1234** or to the last four digits of your phone number. The six-digit security code is set to **183729**.

If you forget your security code, contact your service provider.

lock & unlock phone


You can lock your phone manually or set it to lock automatically whenever you turn it off.

To lock or unlock your phone, you need the four-digit unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you have to unlock it to answer**.

You can make emergency calls on your phone even when it is locked (see page 47).

manual lock

Find it:  >  Settings > Phone > Security

- 1 When prompted, enter the four-digit unlock code and press **Done**.
- 2 Scroll to **Lock Phone Now** and press .
- 3 When prompted, enter the four-digit unlock code and press **Done**.


To unlock your phone:

When you see **Enter Unlock Code**, enter your four-digit unlock code and press **Done**.

automatic lock

To lock the phone whenever you turn it on:

Find it:  >  Settings > Phone > Security

- 1 When prompted, enter the four-digit unlock code and press **Done**.
- 2 Scroll to **Phone Lock Setting** and press .



- 3 Scroll to **On Power Up** and press .

The phone will be locked whenever it is turned on. To unlock the phone when you turn it on, enter the four-digit lock code in the **Enter Lock Code** entry area and press **Done**.

keypad lock

You can lock the phone's keypad to prevent accidental key presses.




To lock the keypad manually:

With the flip open, press and hold  from the home screen. To unlock the keypad, press **Unlock**, then press .

To lock the keypad after a timer expires:

Find it:  >  Settings > Phone > Security

- 1 When prompted, enter the four-digit unlock code and press **Done**.

- 2 Scroll to **Keypad Lock Setting** and press .
- 3 Scroll to **Timed** and press .
- 4 Scroll to **2 Seconds**, **4 Seconds**, or **8 Seconds**, and press .

The keypad will be locked whenever it is at the home screen and no keys are pressed for the period of time you selected. To unlock the phone, enter the four-digit lock code in the **Enter Lock Code** entry area and press **Done**.


lock side keys & touch sensitive buttons

Note: When you lock the side keys, you can still use the volume keys to dismiss an incoming call.

When your phone's flip is closed, you can lock the phone's side keys (see page 2) and touch sensitive buttons (see page 22). This prevents you from

accidentally changing the **Master Volume** setting with the volume keys or activating the touch sensitive keys.

To lock the side keys and touch sensitive buttons, **press and hold the smart/speaker-phone key** on the left side of the phone.

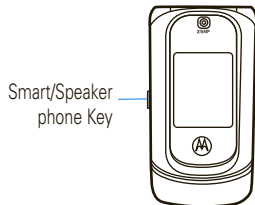



If you press a locked side key when flip is closed, you see **Press and Hold Smart Key to Unlock Keypad**. If you open the flip, the side keys are temporarily unlocked and can be used as normal. When you close the flip again, the side keys are locked.

To unlock the side keys and touch sensitive buttons, **press and hold the smart/speakerphone key**.

lock application

Find it:  >  Settings > Phone > Security

- 1 When prompted, enter the four-digit unlock code and press **Done**.
- 2 Scroll to **Restrictions** and press .
- 3 Scroll to the desired application and press :
Calls, Messages, Location, Data Modem, Brew, Browser.

manage memory



Note: The microSD memory card is an **optional accessory**, available separately.



You can store multimedia content such as songs and photos on your phone's internal memory or on a removable microSD memory card.

Note: If you download a copyrighted file to your phone and store it on your memory card, you can use the file only when your memory card is inserted in your


phone. You cannot send, copy, or change copyrighted files.

install memory card



- 1 Remove the battery door from your phone (see page 14). If necessary, remove the battery.
- 2 Slide the memory card cover back to unlock it, then lift it to expose the opening for the memory card.

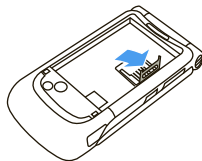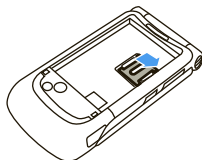

- 3 With the gold contacts down, place the memory card into the card opening.

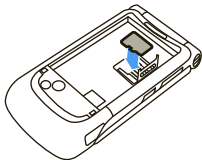

- 4 Close the memory card cover, then slide it forward to lock it into place.

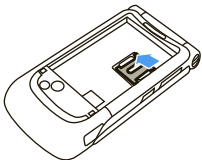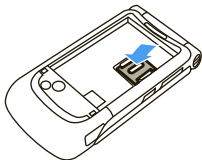

- 5 Replace the battery and battery door.




Caution: Don't remove your memory card while your phone is using it or writing files to it.

To remove the memory card, lift the memory card cover and remove the card.

set memory for multimedia content



You can download and store multimedia content in phone memory or on the memory card.


Find it:  >  Music & Media > Storage Device Tools

- 1 With **Save Options** highlighted, press .
- 2 Scroll to **Pictures, Videos, or Sounds**, and press .
- 3 Select **Phone Memory** or **Memory Card** and press .

view memory information

Find it:  >  Music & Media > Storage Device Tools

- 1 Select **Phone Memory** or **Memory Card** and press .
- 2 If you selected **Phone Memory** in step 1, select **Phone Memory Usage**, **My Pictures**, **My Videos**, or **My Sounds**, and press .






If you selected **Memory Card** in step 1, select **Memory Card Usage**, **My Pictures**, **My Videos**, **My Sounds**, or **Format Memory Card**, and press .

move files from phone to memory card

You can move files (such as photos, videos, sound, and music files) to the memory card to free up phone memory.

Note: Moving a file to the memory card deletes it from phone memory.

Find it:  >  Music & Media > Storage Device Tools

- 1 Select **Phone Memory** or **Memory Card** and press .
 - 2 Scroll to **My Pictures**, **My Videos**, or **My Sounds**, and press .
 - 3 Press **Options**, then scroll to **Move** and press .
 - 4 Scroll to each file you want to move and press . Press **Mark All** if you want to move all files.
- Note:** Files that were preloaded on your phone can't be moved.
- 5 When you have selected all files that you want to move, press **Done**.
 - 6 When your phone asks if you want to move the file(s), select **Yes** and press  to confirm that you want to move the file.

TTY operation




You can use an optional TTY device with your phone to send and receive calls. You must plug the TTY device into the phone's headset jack and set the phone to operate in one of three TTY modes.



Use a TSB-121 compliant cable (provided by the TTY device manufacturer) to connect the TTY device to the phone.



Set the phone volume to level 4 (middle setting) for proper operation. If you experience a high number of incorrect characters, adjust the volume as needed to minimize errors.

For optimal performance, your phone should be at least 12 inches (30 centimeters) from the TTY device. Placing the phone too close to the device may cause high error rates.

set TTY mode

 When you set your phone to a TTY mode, it operates in that mode whenever the TTY device is connected.

Find it:  >  **Settings** > **Call**

- 1 Scroll to **TTY Setup** and press .
- 2 Scroll to one of the following **TTY Setup** options and press .

option	
Voice	Set to standard voice mode.
TTY	Transmit and receive TTY characters.
VCO	Receive TTY characters but transmit by speaking into phone microphone.
HCO	Transmit TTY characters but receive by listening to phone earpiece.

When your phone is in TTY mode, during an active call your phone displays the international TTY mode, the international TTY symbol, and the mode setting.

airplane mode

Note: Consult airline staff about the use of **Airplane Mode** in flight. Turn off your phone whenever instructed to do so by airline staff.







Use *airplane mode* to turn off your phone's calling features in locations where wireless phone use is prohibited. **You cannot make or receive calls or use Bluetooth wireless connections in airplane mode,** but you can use your phone's other non-calling features.



Find it:  >  Settings > Phone > Airplane Mode

> On or Off

tips & tricks

From the home screen (page 18), you can use shortcuts:

To...	Do this...
redial a number	Press  , then scroll to the number you want to call and press  again.
lock/unlock keypad	To lock the keypad, press and hold  .  To unlock the keypad, press Unlock (the right soft key), then press  .
take photos	Press  .

To...	Do this...
turn handsfree speaker on and off	With the flip open, press and hold the smart/speakerphone key (see page 24).
see your number	Press  , then  .

personalize


TELUS Quick Find Powered by i | QiX™

Note: TELUS Quick Find must be set to **On** in order for TELUS Quick Find Powered by i | QiX™ to work.

TELUS Quick Find Powered by i | QiX™ is a discovery tool that helps you access the full range of features and services on your phone, quickly and easily, without having to remember where or how to locate them.

Use TELUS Quick Find Powered by i | QiX™ when you want to listen to music, send a message, find a video clip, or go to a menu option. From the home screen, use the keypad to enter real words to enter the name of a song, a **Contacts** entry, a filename for a video clip, or

a menu options. As you enter letters, TELUS Quick Find Powered by i | QiX™ will present you with a list of songs, contact entries, pictures, and other items that match the letters you enter.

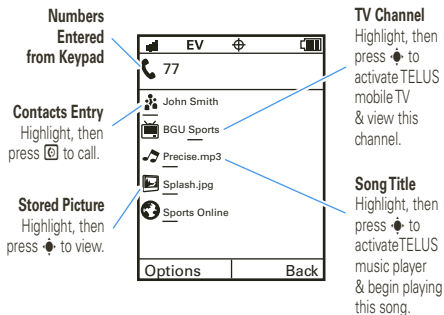

Your phone ships with TELUS Quick Find Powered by *i | QiX™* activated. **To activate/deactivate TELUS Quick Find Powered by *i | QiX™*:**

Find it:  >  Settings > Phone > TELUS Quick Find

sounds

You can set how your phone alerts you to incoming calls or other events.

master volume

From the home screen, press the volume keys up or down to select a **Master Volume** setting:

High, Med High, Medium, Low Med, Low, 1 Beep—Phone rings for incoming calls and other events, depending on the detail settings.

1 Beep—Phone beeps once to indicate an incoming call.

Vibrate Only—Phone vibrates to indicate an incoming call.

Alarm Only—Phone plays an audible alarm to alert you to events. You can't change detail settings for events.


All sounds off—Phone does not alert you to incoming calls and events.

sounds for calls, events, & alerts

Note: **Master Volume** must be set to **High, Med High, Medium, Low Med, Low, or 1 Beep** (see previous section).

To assign ringtones for calls:

Find it:  >  Settings > Sounds > Call Ringtone

- 1 Press  to acknowledge the message about **Shuffle Multiple**.


- 2 Select **Single Tone** to assign a single ringtone to incoming calls.

Select **Shuffle Multiple** to select downloaded ringtones to play randomly for incoming calls.

Note: **Contacts** entries with assigned Ringer IDs will not be affected. The **Shuffle Multiple** option works only with downloaded ringtones and depletes your battery's charge more quickly than **Single Tone**.

- 3 If you selected **Single Tone**, scroll to the desired ringtone and press .

Note: Your phone plays each ringtone that you scroll to and highlight.


If you selected **Shuffle Multiple**, scroll to each downloaded ringtone you want and press . When you have selected all of the ringtones you want, press **Done**.

- 4 Press  to return to the home screen.

To assign ringtones to alert you to incoming text, multimedia, or voicemail messages:

Find it:  >  Settings > Sounds

- 1 Scroll to **Message Ringtone** or **Voicemail Ringtone** and press .

- 2 Scroll to the ringtone you want and press .

Note: Your phone plays each ringtone that you scroll to and highlight.

- 3 Press  to return to the home screen.

voice readout

You can set your phone to **speak aloud** when you press keys, receive a call with caller ID available, or scroll through the **Contacts** or **Call History** lists.

Find it:  >  Settings > Sounds > Voice Readout

key volumes

To set the volume of the tones played when you press keypad keys:

Find it:  >  Settings > Sounds > Keypad Volume

To set whether your phone plays tones when you press side keys:

Find it:  >  Settings > Sounds > Volume Sidekeys

alert reminders

Set how many times your phone plays a message alert:

Find it:  >  Settings > Sounds > Alert Reminders

Select **Once**, **Every 2 Minutes**, **Every 15 Minutes**, or **Off**.

ring & vibrate

Set your phone to ring **and** vibrate when you receive an incoming call or message.


Note: **Master Volume** must be set to **High**, **Med High**, **Medium**, **Low Med**, or **Low** (see page 35).

Find it:  >  Settings > Sounds > Ring & Vibrate

answer options

You can use different methods to answer an incoming call.



Find it:  >  Settings > Call > Answer Options




options	
Flip Open	Answer by opening the flip.
Any-Key	Answer by pressing any key.
Send Only	Answer only by pressing the send key  .
Auto Answer with Handsfree	Automatically answer incoming calls when the phone is connected to a handsfree device such as a car kit or headset.

wallpaper


Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Find it:  >  Settings > Display > Wallpaper

- 1 Select **Main Screen** (the screen you see when the flip is open) or **Front Screen** (the screen you see with the flip closed) and press .
- 2 To assign a single picture as a wallpaper, select **Single** and press .

To select downloaded or captured pictures to be shown randomly as wallpapers, select **Shuffle Multiple** and press . Acknowledge the message about **Shuffle Multiple** and press .
- 3 If you selected **Single**, scroll to the desired picture and press .

If you selected **Shuffle Multiple**, scroll to each downloaded or captured picture you want and



press . When you have selected all of the pictures you want, press **Done**.

- 4 Press  to return to the home screen.

skins

Set the overall look and feel of your phone's screen.

Find it:  >  **Settings** > **Display** > **Skins**

- 1 Scroll to the name of a skin and press .
- 2 Press  to return to the main screen.

backlight

Set the amount of time that the display and keypad backlights stay on.

Find it:  >  **Settings** > **Display** > **Backlight**



brightness

Find it:  >  **Settings** > **Display** > **Brightness**

banner

Set a heading to display near the top of the home screen:

Find it:  >  **Settings** > **Display** > **Banner**

menu language

Find it:  >  **Settings** > **Phone** > **Language**

dial fonts



Set the phone to display numbers that you enter in large type:

Find it:  >  **Settings** > **Display** > **Dial Fonts**

clock format

Set how your phone shows the current time:

Find it:  >  **Settings** > **Display** > **Clock Format**



- 1 Scroll to **Inside Clock** (main screen) or **Outside Clock** (external display) and press .
- 2 Select **Digital 12** for a 12-hour clock, **Digital 24** for a 24-hour clock, **Analog** for a dial clock, or **Off** for no clock, and press .

restore phone

Reset all options except unlock code, security code, and lifetime timer:

Find it:  >  **Settings** > **Phone** > **Security**


- 1 When prompted, enter the four-digit unlock code (see page 25) and press **Done**.

- 2 Scroll to **Restore Phone** and press .
- 3 Confirm that you want to reset the phone by scrolling to **Yes** and pressing .
- 4 When prompted, enter the four-digit unlock code (see page 25) and press **Done**.


The screen does not change while the phone resets all options. After a few seconds, the phone turns off and then back on.

AGPS & your location

Your phone uses the *Automatic Location Information* (ALI) feature, along with AGPS satellite signals, to tell the network where you are physically located.

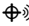When ALI is set to **Location** > **On** your phone shows the  (ALI on) indicator. Services may use your known location to provide useful information (for example, driving directions, or the location of the nearest bank). Your phone prompts you when the network or a

service asks for your location. You can refuse at this point.

When ALI is set to **Location > Emergency Only**, your phone displays the  (ALI off) indicator, and the phone does not send location information unless you call the emergency phone number (such as 911).

Find it:  >  **Settings > Phone > Location**

AGPS limitations & tips

Your phone uses *Assisted Global Positioning System* (AGPS) satellite signals to estimate your location. If your phone cannot find strong satellite signals, your AGPS might be slower, less accurate, or it might not work at all. AGPS provides only an approximate location, often within 150 feet (45 meters) but sometimes much farther from your actual location.



To improve AGPS accuracy:



- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.
- Move away from radios, entertainment equipment, and other electronic devices that might interfere with or block AGPS satellite signals.
- If your phone has a retractable antenna, extend the antenna.
- Hold your phone away from your body, and point the phone antenna toward the sky. Do not cover the antenna area with your fingers.

AGPS uses satellites controlled by the U.S. government and subject to changes implemented in accordance with the Department of Defense AGPS user policy and the Federal Radio Navigation Plan. These changes might affect AGPS performance.

calls

To make and answer calls, see page 16.

redial a number

- 1 Press the send key  to see the **All Calls** list.
- 2 Scroll to the entry you want to call.
- 3 Press the send key  to redial the number.



Note: The **All Calls** list includes numbers that were busy when you dialed.


automatic retry

When you receive a **busy signal**, your phone displays **Call Failed, Number Busy**.



When you turn on automatic retry, your phone automatically redials a busy number for four minutes. When the call connects, your phone rings or vibrates once, displays **Redial Successful**, and completes the call.


Find it:  >  > **Settings** > **Call** > **Auto Retry**

When automatic retry is turned off, you can manually activate the feature to redial a phone number. When you hear a fast busy signal and see **Call Failed**, press  or **RETRY**.



turn off a call alert

When you hear a call alert for an incoming call, you can press the volume keys to turn off the alert before answering the call.

call history

Your phone keeps a record of your unanswered calls. When you miss a call, your phone shows the  (missed call) indicator and **[Number] Missed Calls**.

Find it:  >  **Call History**

- 1 Scroll to **Received Calls**, **Missed Calls**, **Dialed Calls**, or **All Calls**, and press .
- 2 Scroll to an entry.
- 3 Press  to call the number.

To see call details (like time and date), press .


To send a message to the entry, press **Send Msg.**

To access a menu of options (see the table following these steps), press **Options**.

The **Options** menu can include:


option	
Save	Create or update a Contacts entry with the number in the No. field.
Lock	Prevent the selected entry from being deleted.
Delete	Delete the selected entry (if the entry isn't locked).
Delete All	Delete all unlocked entries.
Timers	View call timers (see page 50).
Dial 1+Number	Add a 1 to the beginning of the number, and redial the number.

return a missed call






Your phone keeps a record of your unanswered calls. When you miss a call, your phone shows the  (missed call) indicator and **[Number] Missed Calls**.

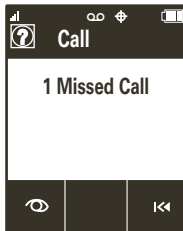
flip closed

If the phone's flip is closed when you miss a call, you see a missed call message on the external display.




To view missed calls immediately:

- 1 Press  to view the **Missed Calls** list:
- 2 Press  and  to scroll up and down through the list of calls. Press  to call a highlighted number.
- 3 To exit the **Missed Calls** list and return to the idle external display, scroll to  **Back** and press **[OK]**.

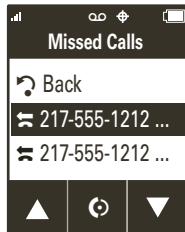


To view a missed call later:

Press  to return to the idle display. For more information on viewing and returning missed calls, see page 44.

To return a missed call later, select **View Later** when you see the missed calls indicator. For more information on viewing and returning missed calls, see page 44.

flip open

To view missed calls immediately:

- 1 When you see the missed call indicator, select **View Now** to see the missed calls list.
- 2 Scroll to an entry on the list.
- 3 To call the entry, press .

To see call details (like time and date), press .

Press **Options** to open the missed calls **Options** menu (see page 44).


Press **Send Msg** to send a message to the entry.

speed dial

Note: Speed dial number 1 is already assigned to your voicemail number.


To assign a speed dial number to an entry:

Find it:  >  **Contacts** > **Speed Dial**

- 1 Scroll to an unassigned speed dial location entry and press **Set**.
- 2 Scroll through the **Contact List** to the entry to be assigned the number and press .
- 3 When prompted, select **Yes** to confirm your selection.


To see an entry's speed dial number:

Find it:  >  **Contacts** > **Contact List**

As you scroll through entries, speed dial numbers are identified by the speed dial indicator .

To activate speed dialing, you must set **One Touch Dial** to **On**:

Find it:  >  **Settings** > **Call** > **One Touch Dial**

To speed dial a number, enter the speed dial number for the entry you want to call and press .


one-touch dial

To one-touch dial a speed dial number 1 through 9, press and hold the single-digit speed dial number (key **1** through **9**) for that entry for one second.


emergency calls

Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

Note: Emergency numbers vary by country. Your phone's preprogrammed number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Enter the emergency number.
- 2 Press  to call the emergency number.

AGPS during an emergency call

When you make an emergency call, your phone can use *Assisted Global Positioning System* (AGPS) satellite signals to tell the emergency response center your approximate location. 

The AGPS feature has limitations, so always tell the emergency response center your best knowledge of your location. Remain on the phone for as long as the emergency response center instructs you.

AGPS **might not work** for emergency calls:

- Your phone's AGPS feature must be turned on (see page 40).
- Your local emergency response center might not process AGPS location information. For details, contact your local authorities.

For best results:

- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.
- Move away from radios, entertainment equipment, and other electronic devices that might interfere with or block AGPS satellite signals.

If your phone cannot find strong AGPS satellite signals, the location of the nearest cell tower in contact with your phone is automatically provided to the emergency response center.

attach number

While dialing (with digits visible on the display), press **Options**, then scroll to and select **Attach Number** to attach a number from your **Contacts** or a **Call History** list.

insert special characters



While entering a number, press **Options** and select one of these options:


- **Insert Pause (p)**—Your phone pauses for two seconds before it dials the next digit.
- **Insert Wait (w)**—Your phone waits until the call connects, then prompts you for confirmation before it dials the next digit(s).

international calls

If your phone service includes international dialing, you can **set your phone to automatically insert your local international access code**:



Find it:  >  Settings > Call > Int'l Dialing > Automatic

When Int'l Dialing is set to **Automatic**, **insert your local international access code** (indicated by +) by pressing and holding . Then, use the keypad to dial the country code and phone number.

hearing aid

You can set your phone for hearing aid compatibility:

 >  Settings > Call > Hearing Aid

Note: For more information about hearing aid compatibility, see “Hearing Aid Compatibility with Mobile Phones” on page 107.

in-call options

During an active call, press **Options** to access these options:

Contacts

Recent Calls

Phone Info

Message Center

Bluetooth Menu


Datebook

Games & Apps

Note: When you have a Bluetooth device connected during a call, you may also see **Audio to Phone** and **Disconnect Bluetooth** options. When you have **TTY Mode** on, you may also see a **TTY Setup** option.

call times

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by

pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

features

minute beep

Set your phone to beep every minute during a call:

 >  Settings > Sounds > Service Alerts > Minute Beep

features

view call times

 >  Call History > Timers

Scroll to and view the times for **Last Call**, **All Calls**, **Received Calls**, **Dialed Calls**, **Roaming Calls**, **Transmitted Data**, **Received Data**, **Total Data**, **Last Reset**, **Lifetime Calls**, or **Lifetime Data Counter**.

reset call times or data volumes

 >  Call History > Timers

To reset individual timers: Scroll to the timer you want to reset and press **Reset**. When prompted, select **Yes** to confirm that you want to reset the timer.

To reset all timers: Press **Reset All**. When prompted, select **Yes** to confirm that you want to reset all timers.

more calling features

features

DTMF Tones

Your phone can send *Dual Tone Multi Frequency* (DTMF) tones for calling card calls or other automated touch-tone calls.

Set up DTMF tones:

 >  Settings > Call > DTMF Tones

Select **Short** or **Long**.

conference call




During a call, dial the next number and press


, then press  again.

text entry

Some features require you to enter information. The following is a sample of a screen for entering information for a **Contacts** entry:

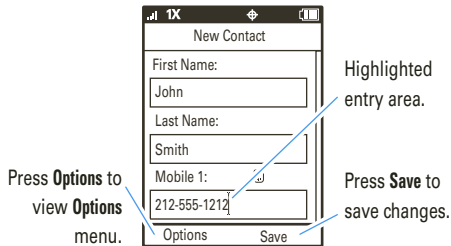

The following is a sample screen for composing a message:

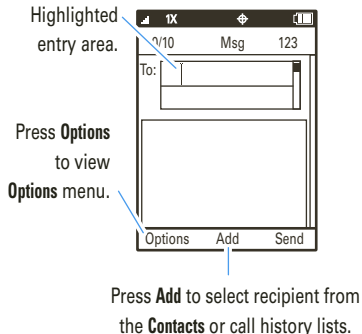

set entry modes


Multiple text entry modes make it easy for you to enter names, numbers, and messages. The default mode is **Abc** (tap mode, first character of a sentence in uppercase).

To select an entry mode from a text entry screen:


- 1 Press **Options** (the left soft key).
- 2 Select **Entry Mode**.
- 3 Select one of the following:

entry modes	
iTAP English	Let the phone predict each English word as you press keys (see page 55).
iTAP French	Let the phone predict each French word as you press keys.
Abc	Enter letters and number, first character of a sentence in uppercase.

entry modes	
ABC	Enter letters and numbers, all characters in uppercase (not available when editing a contact).
123	Enter numbers only.
Symbols	Enter symbols.

When text mode is set to ABC or Abc, press  in any text entry screen to toggle through these **capitalization options**:

abc	no uppercase letters
Abc	first letter of a sentence in uppercase
ABC	all uppercase letters

When text mode is set to iTAP English or iTAP French, press  in any text entry screen to toggle between these **capitalization options**:

entry mode	capitalization options
iTAP English	iEng first letter of sentence in uppercase (English)
	iENG all uppercase letters (English)
	ieng all lowercase letters (English)
iTAP French	iFra first letter of sentence in uppercase (French)
	iFRA all uppercase letters (French)
	ifra all lowercase letters (French)

Note: Your phone may not contain all of the languages listed.

tap mode

This is the standard method for entering text on your phone.

Regular **Tap** method cycles through the letters and numbers of the key you press. The **Tap Extended** method cycles through letters, numbers, **and** symbols. If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry mode, see page 53.


- 1 Press a key once to insert the first letter on the key, twice for the second letter, and so on. If you pause briefly, your phone accepts the last letter displayed and waits for the next entry.
- 2 Enter the remaining characters in the same way.

Tip: Press  to enter a space.

iTAP™ mode

iTAP software provides a predictive text entry method that combines your key presses into common words.


When you enter three or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog**, you might see:

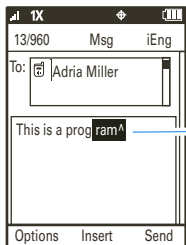


Press  right to accept **program**. Enter a space after prog to keep only **prog**.

If you want a different word (such as **progress**), continue pressing keys to enter the remaining letters.

If you enter a word your phone does not recognize, your phone stores the word to use as a future word option. When you run out of phone memory for unrecognized words, your phone deletes the oldest word to add new words.

Press  up or down to view other possible combinations, and select the one you want.


Press  right to enter the highlighted combination when it spells a word. A space is automatically inserted after the word.

Press  to enter punctuation or other characters.

numeric mode


After selecting numeric mode, press the number keys to enter the numbers you want.



symbol mode

When you select symbol mode, your phone shows the **Symbols** screen. Scroll to the symbol you want and press  to select it. To see more symbols, press **Prev** or **Next**.

text entry tips

To enter a space, press .

To enter punctuation or other special character while entering text, press  repeatedly until you see the punctuation mark or character you want.

To delete the character to the left of the cursor, press . **To delete an entire word**, press and hold .

messages

send a multimedia message





A multimedia message (MMS) contains embedded media objects such as photos, pictures, animations, sounds, and voice records. You can also insert a vcard for a contact or a calendar event. You can send a multimedia message to other wireless phones with multimedia messaging capabilities and to email addresses.


create & send message










Find it:  >  **Messaging** > **Create Message**

- 1 Enter a phone number or email address.

or

Press  to select **Add**. On the **Add Recipients** screen, select **Contacts**, **Recent Calls**, or **Categories**. Press  to mark each entry you want to include as a message recipient, and press **Done** when finished.

- 2 Scroll down to the text entry area and enter message text.
- 3 Press  to select **Insert**.

- 4 To insert a prewritten message**, scroll to **Preset Msg** and press . Then scroll to the quick text you want to insert and press .
- To insert a sound**, scroll to **Audio** and press . Then scroll to the desired sound and press .
- To insert a stored picture or video clip**, scroll to **Pictures** or **Video** and press . Then scroll to the desired object and press **Ok**.
- To **insert a Vcard for a contact** in your **Contacts**, scroll to **Contact Info** and press . Then scroll to the desired entry and press .
- To insert an event from your phone's Datebook**, scroll to **Calendar Event** and press . Then scroll to the desired event and press .
- 5** To insert a message subject, set message priority, or set delivery options, press **Options** (see page 59).

- 6** Press **Send** to send the message.

When you press **Options** from the **Msg** message entry screen, you see the messaging **Options** menu, which can include the following:


Note: The options you see depend on the type of message you are sending and the type of object you insert into the message.

options	
Entry Mode	Specify the entry mode to use (see page 53).
Save to Draft	Save the message, without sending it, in the Drafts folder.
Insert Subject	Enter the message subject.
Insert Object	Insert quick text, picture, video, sound, vcard, or calendar event.
Add Recipients	Enter message recipients from the Contacts or a Call History list.

options	
Priority	Set to Normal or High .
Delivery	Select Deferred Delivery to schedule the message to be sent at a later time. Select Delivery report if you want to receive a report on whether or not the message was sent successfully.
Delete Object	Delete an object you inserted into the message.
Cancel Message	Cancel delivery of the message and exit with or without saving the message to the Drafts folder.

receive a message




When you receive a multimedia message, your phone plays an alert and displays the  (new message) indicator and a **New Message** notification.

Open the flip and select **View Now** to read the message immediately, or select **View Later** to save it in your **Inbox** for viewing later.

To read messages in your **Inbox**:


Find it:  >  **Messaging** > **Inbox**

- 1 Scroll to the message you want to read.
- 2 Press  to open the message. Your phone displays the media object, then the message.

- 3 Press **Reply** if you want to respond to the message.

Press **Options** to view and select from these options: **Reply with Copy**, **Forward**, **Lock/Unlock**, **Save To Contact**, **Start Slide Show**, **Save Object**, **Message Details**, **Delete Message**, **Delete Multiple**, **Delete All**, **Sort By**, **Save Quick Text**, **Create Message**.

Note: The options you see depend on the type of message you receive and whether the message contains multimedia objects.

Press  to return to the message **Inbox**.

Multimedia messages can contain different media objects:

- Photos, pictures, and animations are displayed when you read the message.

- A sound file begins playing when the message text is displayed. Use the volume keys to adjust the volume.
- If the message includes an attached file, select the file indicator or filename and press **VIEW** (for an image file), **PLAY** (for a sound file), or **OPEN** (for an object such as a **Contacts** or **Datebook** entry or an unknown file type).

instant messaging

Find it:  >  **Messaging** > **Messenger**

Connect with family and friends anytime, anywhere, with Windows Live™ Messenger. For more information, please visit:


www.telusmobility.com/messaging.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.




Note: Your service provider may give you additional information about using voicemail.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press **Call** to listen to the message.

To **check** voicemail messages later:

Find it:  >  **Messaging** > **Voicemail**

Press  (send key) to call your voicemail number.

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

more messaging features

features

send text message



 >  **Messaging** > **Create Message**


Press **Options** to perform other actions on the message.

create quick text



Enter and store **Preset Msg** (prewritten) messages that you can select and send later.

 >  **Messaging**


Press **Options**, then scroll to **Quick Text** and press .
Press **Options**, then select **New**.

features

send quick text



 >  Messaging

Press **Options**, then scroll to **Quick Text** and press . Scroll to the quick text message you want to send and press **Send**.

set up messaging



 >  Messaging


Press **Options**. Select **Auto Cleanup** to erase messages automatically. Select **Callback #** to insert a callback number automatically into messages that you send. Select **Signature** to create a signature line that is inserted automatically at the end of messages that you send. Select **Auto Receive** to set whether received messages are automatically downloaded to your phone.

features

view sent message



 >  Messaging > **Outbox**

Scroll to the message you want to view and press .

Press **Options** to access the following options: **Resend**, **Forward**, **Lock**, **Save to Contact**, **Message Details**, **Delete Message**, **Delete Multiple**, **Delete All**, **Sort By**, or **Create Message**.

delete messages



Delete all messages or only messages from the **Outbox** or **Drafts** folder:

 >  Messaging

Press **Options**, then scroll to and select **Delete**. Select **Inbox**, **Drafts**, **Sent**, or **All**.


To delete Inbox or Outbox messages automatically, press **Options**, then select **Auto Cleanup**.

features

drafts



 >  Messaging > Drafts

To complete and send a saved draft message, scroll to the message and press .

or

To view and select other options, press **Options** to access the following: **Send**, **Edit**, **Lock**, **Save to Contact**, **Delete**, or **Create Message**.

Note: The options you see depend on your service provider.

store message objects



Go to a multimedia message slide, or highlight an object in a letter, then press **Options** and select **Save Object**.

entertainment

TELUS mobile music

Find it:  >  Music & Media > TELUS mobile music 

Note: You must have an **optional microSD memory card** installed in your phone to use TELUS mobile music. TELUS mobile music requires that you format the memory card (see your *Getting Started Guide*). All music files must be stored on the “my_music” folder on the memory card. If you download music from TELUS, the folder is already created. If not, create the “my_music” folder on your memory card (see your *Getting Started Guide*).

TELUS mobile music lets you browse, preview, and download music directly to your mobile phone so you can listen to your favorite tunes on the go. For more information, please visit: www.telusmobility.com/music.

load music onto your computer

To load music onto your computer, you can **purchase Microsoft® Windows® Media DRM-protected music files** from supported on-line music stores (such as www.telusmobility.com/music).

You can also **load song files from a music CD** onto your computer:

- 1 Insert the music CD in your computer's CD drive.
- 2 Launch Microsoft Windows Media Player 11.
- 3 Copy the music CD to the media player library (also called *ripping* the CD).

If your computer is connected to the Internet, the media player may retrieve information such as song titles, album name, artist name, and album artwork.

This information will display in your phone's music player after you transfer the music to your phone.

transfer & play music



Note: Before you copy files to your phone, make sure the files are in a format that the phone recognizes. Your phone's music player can play the following types of audio files: AAC, AAC+, MIDI, MP3.

See your *Getting Started Guide* for instructions on **transferring music files to your phone** and **playing music with TELUS mobile music**.

TELUS mobile radio™



Find it:  >  Music & Media > TELUS mobile radio



TELUS mobile radio, powered by XM Satellite Radio, gives you access to a wide range of 100% commercial-free music, plus the best in comedy, talk, and entertainment, right on your TELUS mobile

phone. For more information, please visit:

www.telusmobility.com/mobileradio.

TELUS mobile TV™



Find it:  >  Music & Media > TELUS mobile TV



Get real-time TV on your phone so you can watch your favorite shows anytime, anywhere. For more information, please visit:


www.telusmobility.com/tv.

take photos


The camera lens is on the front of the phone when the flip is closed and on the back of the phone when the flip is open (see page 2). **To get the sharpest photos, wipe the lens clean with a dry cloth before you take a photo.**



take a photo—flip open


With the phone powered on and the flip open:

- 1 Press the camera/video camera key  to activate the camera.

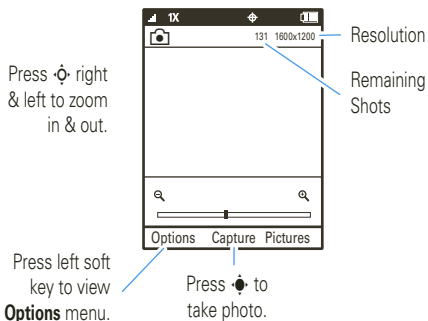Your phone shows the active camera viewfinder screen:



Tip: You can also activate your phone's camera by pressing  **Music & Media** > **Camera**. Press the camera/video camera key  to toggle between the camera and video camera.

- 2 Point the camera lens at the subject.
Press  right and left to zoom in and out.
To view other options, press **Options** (see page 67).

- 3 Press  to take the photo.

- 4 Press **Save** to save the photo.

Press **Send**, then select **in Message** to send the photo in a multimedia message (see page 57).

Press **Send**, then select **Online Album** to save the photo to an online album (availability is network/subscription dependent).




Press **Delete** to delete the photo and return to the active photo viewfinder.

- 5 Press  to return to the main screen.


When the camera is active, press **Options** to view and select these options:

option	
Resolution	Set resolution to 1600x1200 , 1280x960 , 640x480 , 320x240 , or Picture ID .
Self Timer	Set the camera to take a photo after a specific interval: 3 seconds , 5 seconds , or 10 seconds . Or turn it off.
Add Picture Frame	Select a custom frame for your photo.
Brightness	Adjust image brightness by scrolling left or right from -2 to 2 .

option	
White Balance	Adjust for different lighting conditions by scrolling left or right to choose from Auto , Sunny , Cloudy , Tungsten , Fluorescent , or Darkness .
Color Effects	Scroll left or right to select Normal , Antique , Black & White , or Negative .
Switch Storage Device	Specify where you want to save photos (Phone or Memory Card). This option is available only if you have a memory card inserted. 


take a photo—flip closed

- 1 Make sure the touch sensitive buttons are unlocked (see page 27).
- 2 Press the smart/speakerphone key to activate the touch sensitive buttons.
- 3 Press the camera button to activate the camera.

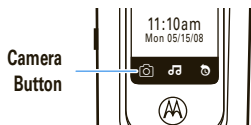

Your phone displays the camera viewfinder.

Press and to zoom in and out.

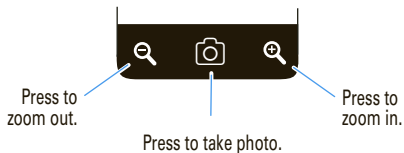


- 4 Press the touch sensitive button to take the photo.
The photo is automatically saved, and the phone returns to the active viewfinder screen on the external display.
- 5 Press the smart/speakerphone key to exit the camera.


record videos

- 1 Press and **hold** the camera/video camera key to activate the camera.

Tip: You can also activate your phone's video camera by pressing **Music & Media** > **Video Camera**.

Your phone shows the active video camera viewfinder screen:

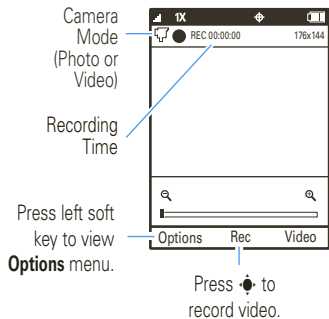


Tip: Press the camera/video camera key  to toggle between the camera and video camera.

- 2 Point the camera lens at the subject.

Press  right and left to zoom in and out.

To view other options, press **Options** (see the table following these steps).

- 3 Press  to begin video recording.
- 4 Press **Stop** to stop video recording.
- 5 Press **Save** to save the video clip.

Press **Send**, then select **in Message** to send the video clip in a multimedia message (see page 57).

Press **Send**, then select **Online Album** to save the video clip to an online album (availability is network/subscription dependent).




Press **Delete** to delete the video clip and return to the active video camera viewfinder.

- 6 Press  to return to the main screen.

When the video camera viewfinder is active, press **Options** to set video recording options:

option	
Resolution	Set resolution to Large (320 x 240) or Small (176 x 144) .

option	
Video Length	<p>Set the maximum length of video clips to 2 Minutes, 5 Minutes, Fit to Memory, or Fit to MMS.</p> <p>Tip: To send your video clip in a multimedia message, the video length must be set to Fit to MMS.</p>
Self Timer	<p>Set the video camera to begin recording after a specific interval: 3 seconds, 5 seconds, or 10 seconds. Or turn it off.</p>
Brightness	<p>Adjust image brightness by scrolling left or right from -2 to 2.</p>

option	
White Balance	<p>Adjust for different lighting conditions by scrolling left or right to choose from Auto, Sunny, Cloudy, Tungsten, Fluorescent, or Darkness.</p>
Color Effects	<p>Scroll left or right to select Normal, Antique, Black & White, or Negative.</p>
Switch Storage Device	<p>Specify where you want to save video clips (Phone or Memory Card). This option is available only if you have a memory card inserted. </p>

fun & games

launch browser

 >  Web Browser






view pictures

 >  Music & Media > Pictures

- 1 Scroll left and right to view pictures.


Press **Options** to open the **Options** menu (see the table following these steps).

If you see **Slideshow** at the bottom middle of the screen, press  to see a “slideshow” presentation of all pictures, shown in sequence. Press  to pause the slideshow. Press **Settings** to modify slideshow settings. Press  to end the slideshow and return to the picture viewer screen.

If you see **Ok** at the bottom middle of the screen and the message **Buy Wallpaper**, press  to purchase and download pictures.

- 2 Press  to return to the **Multimedia** menu.

While viewing pictures, press **Options** from the playback screen to access these options:

options	
Send	Send the selected picture to an Online Album in a multimedia message (see page 57), or to another device through a Bluetooth® wireless connection. 
Set As	Set the picture as a picture ID (see page 82).
Capture	Open the active camera viewfinder screen.

options	
Rename	Change the name of the selected picture.
Move	Move the selected picture to another device through a Bluetooth connection, from phone memory to memory card, or from memory card to phone memory.
Lock/Unlock	Lock the selected picture to prevent it from being deleted.
Print	Use a Bluetooth connection with a printer to print the selected picture.
Delete	Delete the selected picture.
Delete All	Delete all unlocked pictures.


options	
Mark	Mark the selected picture. After you mark one or more pictures, press Options to see these options: Unmark, Mark All, Unmark All, Move Marked to Memory Card, Move Marked to Phone, Delete Marked, Lock Marked, Unlock Marked.
Mark All	Mark all pictures. After you mark all clips, press Options to see these options: Unmark, Mark All, Unmark All, Move Marked to Memory Card, Move Marked to Phone, Delete Marked, Lock Marked, Unlock Marked.
File Info	See detailed information about the selected video clip.

play videos

To play video clips that you have recorded or received in multimedia messages:

Find it: > Music & Media > Videos


Your phone shows the video clip playback screen:

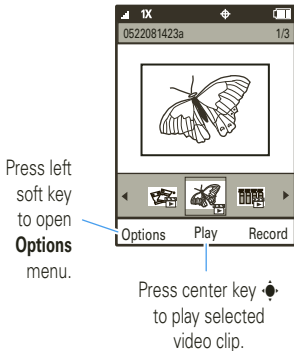

- 1 Scroll left or right to highlight a video clip.


Press **Options** to open the **Options** menu (see the table following these steps).

- 2 Press to play a highlighted video clip.

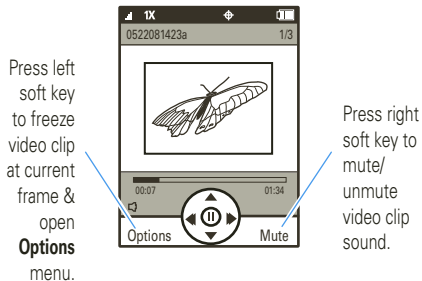







See the table following these steps for instructions on controlling video playback.


During video clip playback, press **Options** to view and select these options: **Extract Current Frame**, **Videos**, **File Info**.

- 3 When the video clip has finished playing, press  to return to the playback screen.

Use these keys to control video playback:

video playback controls	
pause/play	Press  .
fast forward	Press & hold  right (for at least two seconds).
next video clip	Press  right .
rewind	Press & hold  left (for at least two seconds).
previous video clip	Within first two seconds of video clip playback, press  left .
return to beginning of clip	After first two seconds of video clip, press  left .

video playback controls

toggle between portrait & landscape Press  down.

When a video clip is not playing, press **Options** from the playback screen to access these options:

options

Send	Send the selected clip in a multimedia message (see page 57).
Rename	Change the name of the selected video clip.
Move	Move the selected video clip to another device through a Bluetooth® wireless connection, from phone memory to memory card, or from memory card to phone memory.

options	
Lock/Unlock	Lock the selected video clip to prevent it from being deleted.
Delete	Delete the selected video clip.
Delete All	Delete all unlocked video clips.
Trim	Edit the length of the video clip.
Mark	Mark the selected clip. After you mark one or more clips, press Options to see these options: Unmark, Mark All, Unmark All, Delete Marked, Lock Marked, Unlock Marked.
Mark All	Mark all video clips. After you mark all clips, press Options to see these options: Unmark, Mark All, Unmark All, Delete Marked, Lock Marked, Unlock Marked
File Info	See detailed information about the selected video clip.

Note: Your phone's options may vary. Most options apply only to user-recorded videos, and are not available for pre-installed videos.



manage sounds

You can record sounds for later playback.

create a sound

- 1 Press and hold the voice key on the right side of the phone (see page 2


Tip: You can also press  >  **Music & Media** > **Ringtones & Sounds** > **Sounds** > **Record New.**

- 2 Press  to begin recording.
- 3 Press  again to stop recording.

Tip: From the home screen and with the flip open, press and hold the voice key on the right side of the phone (see page 2) to go to the **Record New** screen, then record a sound as instructed above.

play a sound

Find it:  >  Music & Media > Ringtones & Sounds > Sounds

Scroll to the sound title and press . Press **Options** to open a menu that can include these options: **Send**, **Rename**, **Move**, **Lock**, **Delete**, **Delete All**, **Mark**, **Mark All**, **File Info**.

tools

voice recognition

Your phone's voice recognition feature lets you make calls and complete other actions by speaking commands to your phone.

voice recognition tips

- Say the names of **Contacts** entries exactly as listed. For example, to call the mobile number for an entry named Bill Smith, say "Call Bill Smith mobile." (If the entry includes only one number for Bill Smith, say "Call Bill Smith.")
- Speak numbers at a normal speed and volume, and pronounce each digit distinctly. Avoid pausing between digits.

- You can set your phone to play voice command instructions through the speakerphone by pressing the voice key, which opens the **Voice Commands** menu. If you use the **Call** command to place a call, the audio plays through the phone's earpiece when the call connects. You can turn this feature off (see page 81).

voice commands

- 1 Press and **release** the voice key on the right side of the phone.

Your phone says **Please say a command** and shows a list of voice commands.

2 Say one of the following commands:

feature

Call <Name or #>

Place a call to:

- a **Contacts** entry whose name you speak
- a phone number you speak
- your voicemail number
- the last number you called

For example, you could say “Call Bill Smith mobile,” “Call 8475551212,” “Call voicemail,” or Call last number.”

feature

Send Msg <Name or #>

Send a message to:

- a **Contacts** entry whose name you speak
- a phone number you speak
- all the members of a **Group** whose name you speak

For example, when prompted to say a command, you could say “Send message to Bill Smith mobile,” “Send message to 8475551212,” or “Send message to Family.” Your phone would open the **Msg** entry screen, with Bill Smith’s mobile number, the number **8475551212**, or the group named **Family** in the **To** field. For instructions on sending a message, see pages 57.

feature

Go To <Shortcut>

Go to the menu or perform the action you specify:

Contacts, Call History, Messaging, Settings, Camera, Music Player, or Redial.

Note: If you don't have any content (music, call history, and so on), the phone returns to the home screen.

Check <Item>

View the item on the screen that you say aloud:

Status, Voicemail, Messages, Missed Calls, Time, Signal Strength, Battery, or Volume.

feature

Contact <Name>

Look up a contact by saying the contact's name.

Play <Playlist>

Play a playlist with the music player by saying the name of one of your playlists.


Note: If you don't have any music, the phone returns to the home screen.

Help

See help information for the voice recognition feature.

voice recognition settings

To modify voice recognition settings:

- 1 Press and release the voice key on the right side of the phone.
- 2 Press **Settings**.
- 3 Scroll to the desired option and press .

voice recognition settings

Digit Dial Readout

Set your phone to say numbers aloud as you press them on the keypad.

voice recognition settings

Confirmation

If your phone is not sure that it has correctly identified a name or number that you speak, it can display up to three choices and prompt you to confirm the correct one.

You can control when choice lists appear:

Automatic—Display a list of choices from multiple alternatives.

Always Confirm—Always display a list of choices when there are multiple alternatives.

Never Confirm—Never display a choice list. The phone chooses from the best alternatives.

voice recognition settings

Sensitivity

You can fine tune your phone's ability to recognize voice commands. Select **Most Sensitive**, **Recommended**, or **Least Sensitive**.

If sensitivity is too strict, your phone often rejects voice commands and displays "Please repeat ..." or "No match found." Select **Most Sensitive**.

If sensitivity is too forgiving, you experience false activations (indicating that the phone detects a wrong match). Select **Least Sensitive**.

Adaptation

Follow the prompts on your screen to improve recognition of spoken words. Adaptation takes about sixty seconds and requires you to be in a quiet place (no background noise).

voice recognition settings

Prompts

Mode—Set whether your phone says **Prompts**, **Readout** (to read every word on the screen), or **Tones Only**.

Audio Playback—Set how you want to hear prompts: **Automatic** detection, **Speakerphone**, or through your **Earpiece**.



Call Alert

For an incoming call, set whether you hear a **Ring Only**, **Caller ID then Ring**, or **Caller ID Repeat** (repeat the name until you answer or the call goes to voicemail).

To access in-device help for a setting you speak, press **Info**.

contacts

create entry

Find it:  >  **Contacts** > **New**

For information on creating a new entry, see page 16.

view entry

Find it:  >  **Contacts** > **Contact List**

call entry


 >  **Contacts** > **Contact List**

Scroll to the entry you want to call and press .

edit entry

To modify or delete an entry:



Find it:  >  **Contacts** > **Contact List**

Scroll to the entry and press **Options**, then scroll to the option you want and press .

ringer IDs

When you assign a ringtone to an entry, your phone plays that ringtone when you receive a call from that entry.



Find it:  >  **Contacts** > **Contact List**

- 1 Scroll to the entry and press **Options**, then select **Edit Contact**.
- 2 Scroll to **Ringer ID** and press .
- 3 Scroll to the desired ringtone.
Note: As you scroll through settings, your phone plays a sample of each setting you highlight.
- 4 Press  to select the highlighted ringtone.

picture IDs

Assign a photo or picture to show when you receive a call from an entry:

Find it:  >  **Contacts** > **Contact List**

- 1 Scroll to the entry and press **Options**, then select **Edit Contact**.
- 2 Scroll to **Picture** and press .
- 3 Scroll left or right to the desired picture and press .

Press **Options** and select **Capture** to take a new photo (see page 65) to use as a picture ID.

set default number

Set the primary number for an entry with multiple numbers. This will be the number your phone shows when listing **Contact List** entries.


Find it:  >  **Contacts** > **Contact List**

- 1 Scroll to the entry and press **Options**, then select **Edit Contact**.
- 2 Scroll to the number to be set as the default number and press **Options**, then select **Set as Default**.

sort entries

Set whether **Contact List** entries are listed in alphabetical order by first or last name:

Find it:  >  **Contacts** > **Contact List**

- 1 Press **Options**, then select **Sort Name**.
- 2 Scroll to **First Name** or **Last Name** and press .


groups


To send a text message to many people at once, you can add **Contact List** entries to **Groups**. Then, when you enter a group's name as a message recipient, the message is sent to all members of that group.

Your **Contacts** list comes with several groups already created, and you can create your own additional groups.

To add entries to a group:

Find it:  >  **Contacts** > **Groups**

- 1 Scroll to the group name and press **Options**, then select **Add Contacts**.
- 2 Scroll to each entry you want to add to the group and press .

A check mark appears in the box beside an entry when you select it. To deselect an entry, scroll to the entry and press  to remove the check mark.

- 3 When you finish selecting entries, press **Done** to save your selections.

To create a new group:

Find it:  >  **Contacts** > **Groups**

- 1 Press **New**.
- 2 Enter the new group name and press **Save**.

network

features

network settings



View network information and adjust network settings:

 >  **Settings** > **Phone** > **Network Selection**

Scroll to the desired network setting and press .

call connect tones



Set phone to play a tone when a call connects:

 >  **Settings** > **Sounds** > **Service Alerts** > **Call Connect**

features

call drop tone



Set phone to play an alert tone whenever the network drops a call. (Because digital networks are so quiet, a call drop alert may be your only indication that a call was dropped.)

•◂ > ⚙ Settings > Sounds > Service Alerts > Voice Call Drop

personal organizer

features

add datebook event

•◂ > 🗓 Tools > Datebook

Scroll to the desired day and press **Add**, then enter event information and press **Done**.

features

view datebook event

View or edit event details:

•◂ > 🗓 Tools > Datebook

Scroll to the desired day and press •◂, then scroll to the *event* and press •◂.

To edit the event, press **Edit**.

event reminder

Press **View** to view an event reminder.

Press **Exit** to dismiss an event reminder.

set alarm

•◂ > 🕒 Tools > Alarm Clock

Select **Alarm 1**, **Alarm 2**, or **Alarm 3**, then turn on the alarm, specify the alarm time, recurrence, and alert type.

features

turn off alarm

Press **Off** or .

calculator

Calculate numbers:


 >  **Tools** > **Calculator**

view world clock

To view the current time in cities around the world:

 >  **Tools** > **Calculator**

Scroll left or right to see the time in a desired city.


Or, press **Cities**, then scroll to the city you want and press . Press **Set DST** to set Daylight Savings Time for a city.

features

notepad

Your phone stores the most recent digits you entered in the **Notepad**. These digits can be a number that you called or a number that you entered and want to save for later. You can also create notes with information that you want to save for later.

 >  **Tools** > **Notepad**

Your phone shows a list of notes. To view the contents of a note, scroll to the note and press . To create a new note, press **New**.

connections

cable connections



Your phone has a micro USB port that allows you to connect it to a computer.

Note: Motorola Original™ data cables and supporting software are sold separately. Check your computer to determine the type of cable you need.

If you use a USB cable connection:

- Make sure both your phone and the computer are turned on.
- Make sure to connect the phone to a high-power USB port on your computer (not a low-power one such as the USB port on your keyboard or bus-powered USB hub). Typically,

USB high-power ports are located directly on your computer.

Note: If you connect your phone to a low-power USB port, the computer may not recognize your phone.

Specify the correct USB setting on your phone:

Find it:  >  Settings > USB Mode

Scroll to **Modem/COM** and press .



Bluetooth® connections



Your phone supports Bluetooth wireless connections. You can connect your phone to a Bluetooth headset or car kit, or connect to another device to transfer files.

To view a list of Bluetooth profiles supported by your phone:

Find it:  >  Tools > Bluetooth

- 1 Press **Options**, then scroll to **Supported Profiles** and press .
- 2 To see more information about a profile, scroll to the profile name and press .

For more Bluetooth wireless connections support information, go to www.motorola.com/Bluetoothsupport.

Note: All multimedia (video player, audio player, shutter tones) will play from the speakerphone when your phone is connected to another Bluetooth device.

For maximum Bluetooth security, always connect Bluetooth devices in a safe, private environment, away from other devices with Bluetooth connection capabilities.

turn Bluetooth power on/off

Set Bluetooth power to be on whenever your phone is on.

Find it:  >  Tools > Bluetooth



Press **Turn On**.

Note: To extend battery life when you are not actively using a Bluetooth connection, turn Bluetooth power off by using this procedure and pressing **Bluetooth Off**. If you turn off Bluetooth power, your phone will not connect to other Bluetooth devices until you turn on Bluetooth power and then reconnect.

place phone in discovery mode

Allow an unknown Bluetooth device to discover your phone:

Find it:  >  Tools > Bluetooth

- 1 Press **Options**.
- 2 Scroll to **Discovery Mode** and press .
- 3 Scroll to **On** and press .

The following message appears: **Discovery on: For one minute other devices can find you.**

If the device requests permission to bond with your phone, press **YES** and enter the device PIN code to create a secure connection with the device. (The PIN code is typically set to **0000**.)

Note: See the instructions that came with your device for the device's PIN code and other information about the device.


pair with headset, handsfree device, or computer




Note: If you want to use your Motorola Bluetooth headset with both an audio device and your phone, use your phone's Bluetooth menus to connect the phone with the headset. If you establish the connection by pressing a button on the headset, or if you allow the headset to connect automatically by turning it on, you may experience unexpected results.

Before you try to connect to another Bluetooth device, make sure your phone's Bluetooth power is **On** and the device is in *pairing* or *bonding* mode (see the user guide for the device you are attempting to pair with). You can connect your phone with only one device at a time.

Find it:  >  Tools > Bluetooth

- 1 Press  to select **Add New Device**.


Note: If your Bluetooth power is not turned on, your phone will prompt you to turn it on.

- 2 When you see **Place the device you are connecting to in discoverable mode**, press .

Your phone lists the devices it finds within its range. If your phone is already connected to a device, your phone lists that device and identifies it with a ✓ (in-use indicator).



- 3 Scroll to a device in the list and press **Pair** to connect to the device.
- 4 If the device requests permission to bond with your phone, press **YES** and enter the device PIN code to create a secure connection with the device. (The PIN code is typically set to **0000**.)

Note: See the instructions that came with your device for the device's PIN code and other information about the device.

When the connection is made, the  (Bluetooth) indicator or a **Bluetooth** message displays in the home screen.

connect to handsfree device during a call



- 1 During a call, press **Options**, then select **Connect Bluetooth**.
- 2 Scroll to **Add New Device**, or select the name of a device if you have paired with it previously, and press .
- 3 If connecting to a new device, place the new device in discoverable mode and press  on your phone.
- 4 When your phone finds the device, press **Pair**.
- 5 If prompted, enter the default PIN code **0000**.

Note: You can't switch to a headset or car kit if you are already connected to a Bluetooth device.

copy files to another device







You can use a Bluetooth connection to transfer a contact or file to another Bluetooth device.

To transfer a contact:


Note: Make sure the device receiving the entry has Bluetooth power on and is in discoverable mode.

Find it:  >  **Contacts** > **Contact List**

- 1 Scroll to the entry you want to transfer and press **Options**.
- 2 Scroll to **Send Contact Info** and press .
- 3 Press  to select **via Bluetooth**.
- 4 To add more entries, scroll to each entry and press .
- 5 Press **Done**, then press **Send**.

- 6 Scroll to **Add New Device**, or scroll to the device that you want, and press .

Note: If your phone does not already have Bluetooth power turned on, it prompts you to turn it on.




- 7 If connecting to a new device, place the new device in discoverable mode and press  on your phone.
- 8 When the phone shows the list of devices, scroll to the device you want and press **OK**.
- 9 If prompted, enter the default PIN code **0000**.

When the connection is made, the receiving device is prompted to accept the transfer. When the receiving device accepts, the your phone transfers the entry to the device.


To transfer a file to another device:

Note: Make sure the device receiving the file has Bluetooth power on and is in discoverable mode. The

receiving phone must be capable of receiving the file type.

- 1 On your phone, select the file (such as a picture, video, or sound) you want to transfer and press **Options**.
- 2 Press  to select **Send**.
- 3 Scroll to **via Bluetooth** and press .
- 4 Scroll to **Add New Device**, or scroll to the device that you want, and press .

Note: If your phone does not already have Bluetooth power turned on, it prompts you to turn it on.


- 5 If connecting to a new device, place the new device in discoverable mode and press  on your phone.
- 6 When the phone shows the list of devices, scroll to the device you want and press **OK**.

- 7 If prompted, enter the default PIN code **0000**.
- 8 When your phone prompts you to confirm that you want to send the file, press **Yes**.


When the connection is made, the receiving device is prompted to accept the transfer. When the receiving device accepts, the your phone transfers the entry to the device.

receive files from another device



Note: If you do not see the Bluetooth indicator  at the top of your phone's display, **turn on your phone's Bluetooth power** (see page 88).

- 1 Pair your phone with the other device (see page 89).
- 2 Send the file from the other device. (If necessary, refer to the user's manual for the device for instructions.)

- 3 When prompted to accept the sent object, scroll to **Yes** and press .


Your phone notifies you when the transfer is complete. If necessary, press **Save** to save the file.

disconnect from a device



To disconnect from a device **while the phone is idle**:

Find it:  >  Tools > Bluetooth

- 1 Scroll to the name of the device from which you want to disconnect and press **Options**.
- 2 When your phone prompts **Disconnect from *devicename?***, scroll to **Yes** and press .

To disconnect from a device **during an active call**:

- 1 Press **Options**.
- 2 Scroll to **Disconnect Bluetooth** and press .

service & repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.34 W/kg, and when worn on the body, as described in this user guide, is 0.97 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.



MOTOROLA

Important Safety and Legal Information

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using

your mobile device with your implantable medical device, consult your healthcare provider.

Driving Precautions

The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving.

Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Responsible driving practices can be found in the "Smart Practices While Driving" section in this guide (or separate guide).

Operational Warnings

Obey all posted signs when using mobile devices in public areas.







Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Batteries & Chargers

Caution: Improper treatment or use of batteries may present

a danger of fire, explosion, leakage, or other hazard. For more information, see the “battery use & safety” section in the user’s guide.

Keep Your Mobile Device and Its Accessories Away From Small Children

These products are not toys and may be hazardous to children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage



Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To

protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.

- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at www.motorola.com/hearingsafety (in English only).

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Mar0108]

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept

any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with

liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones: 1-800-331-6456 Pagers: 1-800-548-9954 Two-Way Radios and Messaging Devices: 1-800-353-2729
Canada	All Products: 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS,

ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device’s telecoil (“T Switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF

exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

Product Registration

Online Product Registration:

www.motorola.com/us/productregistration

Product registration is an important step toward enjoying your new Motorola product. Registering permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions. Registration is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation

or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Device and Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved

national recycling schemes, and further information on Motorola recycling activities can be found at: www.motorola.com/recycling

Disposal of your Mobile Device Packaging and User's Guide

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

California Perchlorate Label

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

“Perchlorate Material – special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.”

There is no special handling required by consumers.

Privacy and Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device’s keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device’s security, install it as soon as possible.
- **Erase before recycling**—Delete personal information or data from your mobile device prior to disposing of it or

turning it in for recycling. For step-by-step instructions on how to delete all personal information from your device, see the section entitled “master clear” or “delete data” in the user’s guide.

Note: For information on backing up your mobile device data before erasing it, go to www.motorola.com and then navigate to the “downloads” section of the consumer Web page for “Motorola Backup” or “Motorola Phone Tools.”

- **Understanding AGPS**—To provide location information for emergency calls, certain Motorola mobile devices incorporate *Assisted Global Positioning System* (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user’s location—for example, to provide driving directions. Users

who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Smart Practices While Driving

Drive Safe, Call Smart

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas -- for example, handsfree use only. Go to www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.

- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.



- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.*
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

index

1X indicator 19

911 indicator 20

A

accessories 10, 23

airplane mode indicator 19

alarm clock 85

alarm indicator 21

alert

set 35

turn off 43

answer a call 16, 38

audio file formats 65

B

backlight 39

banner 39

battery 14

conserving 11

battery level indicator 20

battery life, extend 11

Bluetooth connections

connect during call 90

brightness 39

browser 71

C

cables 87

calculator 86

call

answer 16, 38

end 16

make 16

call history 44

call ringtone 35

call times 50

minute beep 50

reset 50

camera 68

car kit 23

center select key 2

clock 40

world 86

codes 25

conference call 51

conserve battery 11

contacts 82

add entries to group 83

call entry 82

create group 84

edit entry 82

- contacts (continued)
 - picture ID 82
 - primary number 83
 - ringer ID 82
 - sort entries 83
 - view entry 82

D

- data call indicator 19
- data volumes
 - reset 50
- dial a phone number 16
- dialed calls 44
- digital indicator 19
- display 18
 - brightness 39
- display themes 39
- dormant indicator 19
- drafts folder 63
- DTMF tones 51

E

- emergency number 47
- end a call 16
- end key 2, 16
- EVDO indicator 19
- export regulations 109

F

- flip 16

G

- group
 - add entries 83
 - create 84

H

- handsfree speaker 24
- headset 23
- hearing aid 49
- hearing aids 107

- home screen 18
 - banner 39

I

- indicators
 - 1X 19
 - 911 20
 - airplane mode 19
 - alarm 21
 - battery level 20
 - data call 19
 - digital 19
 - dormant 19
 - EVDO 19
 - location on 20
 - message 20, 21
 - no service 19
 - phone locked 20
 - roaming 19
 - signal strength 19
 - sounds off (silent) 20

- sounds soft 20
- speakerphone 20
- SSL 19
- TTY 20
- unanswered call 20
- vibrate on 20
- voice call 20
- voice privacy 19

international access code 49

iTAP text entry mode 55

K

key volume 37

L

location on indicator 20

lock

- phone 25

M

make a call 16

master volume 35

menu

- language 39

message

- delete 62
- drafts 63
- quick text 61, 62
- store message objects 62, 63
- text message 61
- view sent message 62

message alert 36

message indicator 20, 21

message ringtone 36

messages

- alerts 37

minute beep 50

missed Calls message 44, 45

music player 23

- controls, flip open 74

N

navigation key 2, 10

network

- adjust settings 84
- call connect tones 84
- call drop tone 85

no service indicator 19

notepad 86

number. See phone number

numeric entry mode 55

O

optional accessory 10

optional feature 10

P

perchlorate label 110

- phone
 - network
 - call connect tones 84
 - call drop tone 85
 - network settings, adjust 84
 - talking phone 37
- phone locked indicator 20
- phone number 17
- picture ID 82
- power key 2, 16

Q

- quick text 61, 62

R

- received calls 44
- redial 33, 43
- return a call 45
- ring style, setting 35
- ringer ID 82

- ringtone
 - call 35
 - message 36
- roaming indicator 19

S

- safety information 98
- safety tips 111
- security code 25
- send key 2, 16
- signal strength indicator 19
- soft keys 18
- sounds off (silent) indicator 20
- sounds soft indicator 20
- speakerphone 23
- speakerphone indicator 20
- SSL indicator 19
- store your number 17
- symbol entry mode 56

T

- tap text entry mode 54
- telephone number. See phone number
- text entry 52
- TTY indicator 20
- turn on/off 16

U

- unanswered call indicator 20
- unlock
 - phone 25
- unlock code 25
- USB cables 87

V

- vibrate on indicator 20
- video 68
- voice call indicator 20

voice note 75

play 76

voice privacy indicator 19

voice recognition 77

voicemail 61

voicemail message indicator 61

volume

key 37

W

wallpaper 38

warranty 103

WHO information 108

world clock 86

Y

your phone number 17

U.S. patent Re. 34,976

www.motorola.com

